Service
Service
Service

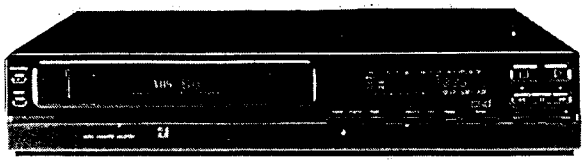

44115A

Service Manual

VHS
PAL

VR6448/67S is a video cassette recorder with a TV-reception part and electronic timer, suitable for recording and playing back TV signals, which meet the CCIR-PAL B.G. standard.
The signals are recorded on tape according to the VHS standard.

CONTENTS

Specification	2
Disassembly and reassembly	3
Trouble shooting guide	8
Mechanical repairs and adjustments	12
Adjustment of electrical circuits	28
Overall wiring diagram	37
Schematic diagram, printed wiring boards etc.	38
Parts list	55

ıfety regulations require that the set be restored to its original
ıdition and that parts which are identical with those specified be
ed.

ocumentation Technique Service Dokumentation Documentazione di Servizio Huolte-Ohje Manual de Servicio Manual de Serviço

Subject to modification
4822 726 14526
Printed in The Netherlands

©Copyright reserved

Published by
Service Consumer Electronics
CS 17 216

VR6448/67S
SPECIFICATIONS

Format:	VHS PAL standard
Video recording system:	Two rotary head helical scan system
Video signal:	PAL colour and B/W signals, 625 lines
Recording/playing time:	4 hours max. with E-240 tape
Tape width:	12.7 mm
Tape speed:	23.39 mm/sec.
Antenna:	75 ohm unbalaced
Receiving channel:	VHF Channel 2-12, UHF Channel 21-69
RF converter output signal:	VHF Channel 3 or 4 (Switchable). Preset to 3 Channel
Power requirement:	AC 220V, 50 Hz
Power consumption:	Approx. 25W (with anti-dew heater)
Operating temperature:	5°C to 40°C
Storage temperature:	-20°C to 55°C
Weight:	5.9 kg
Dimensions:	430 mm (W) x 348 mm (D) x 82 mm (H)
VIDEO	
Input:	1.0 Vp-p, 75 ohm
Output:	1.0 Vp-p, 75 ohm
AUDIO:	0 dB = 0.775 Vrms
Input:	Line: -8 dB, more than 50k ohm
Output:	Line: -5 dB, less than 1k ohm
Accesories included:	Antenna 75 ohm coaxial connector cable (plug provided) Operation Manual Infrared remote control

As part of our policy of continuous improvement, we reserve the right to alter design and specifications without notice.

The antenna must correspond to the new standard DIN 45325 (IEC 169-2) for combined UHF/VHF antenna with 75 ohm connector.

DISASSEMBLY AND REASSEMBLY

1. Remove the four upper cabinet fastening screws ①.
2. Remove the six bottom panel fastening screws ②.
3. Remove the one front panel fastening screw ③.
4. Release the three clips ④ and remove the front panel.
5. Remove the two antenna terminal cover fastening screws ⑤.
6. Remove the two main PWB fastening screws ⑥.
7. Remove the two head amp PWB fastening screws ⑦.
8. Remove the three power unit fastening screws ⑧.
9. Remove the four machanism chassis fastening screws ⑨.
10. Release the timer PWB ⑩ fastening clips.
11. Release the operation PWB ⑪ fastening clips.

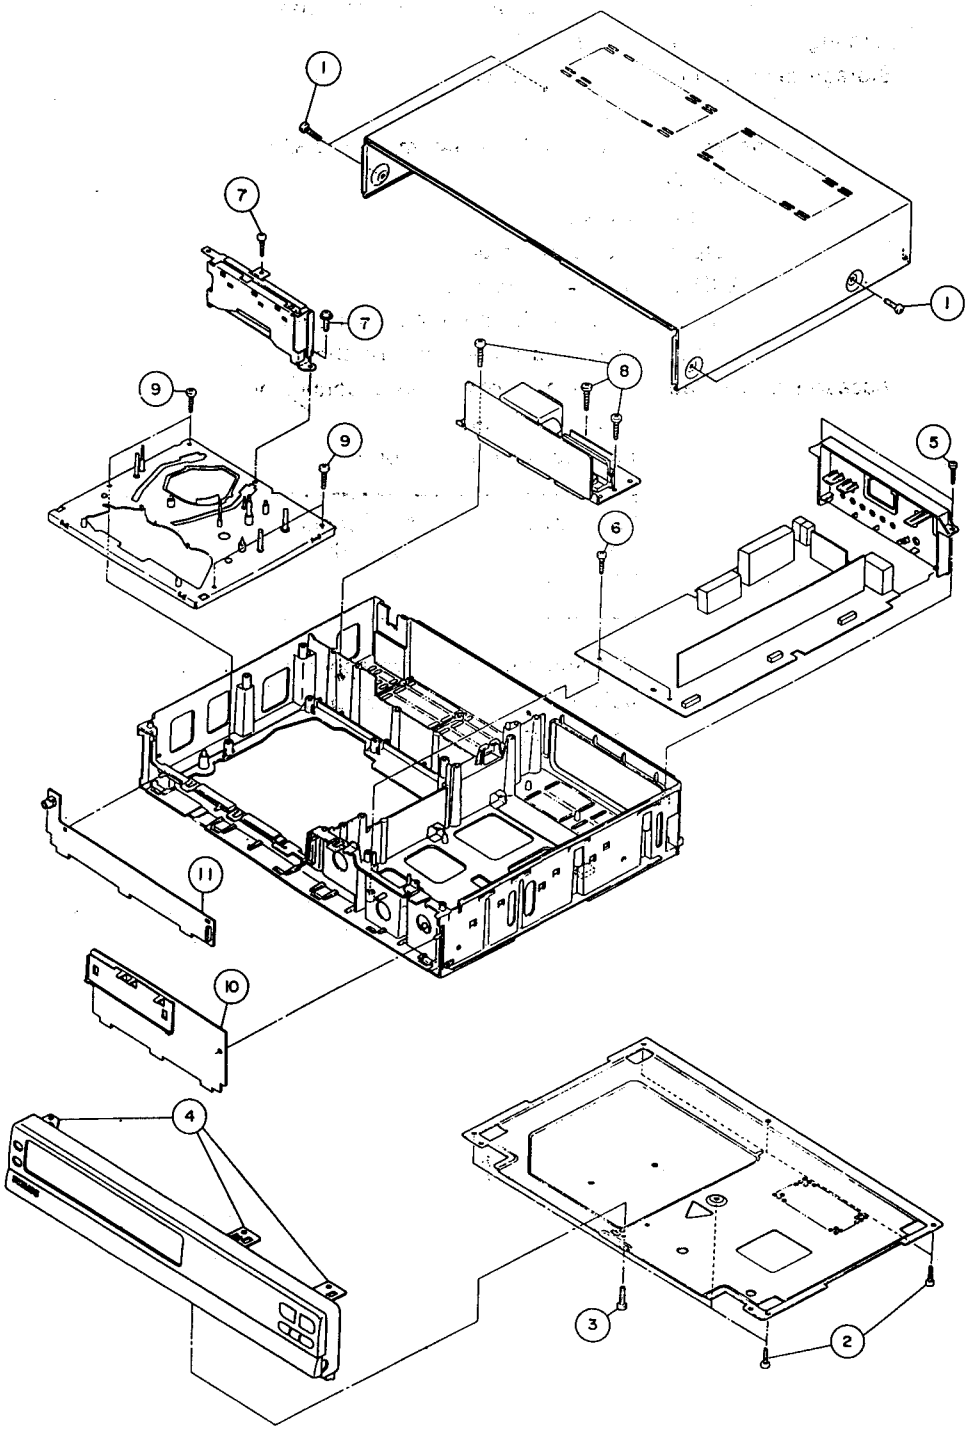

LOCATION OF MECHANICAL PARTS

- TOP VIEW

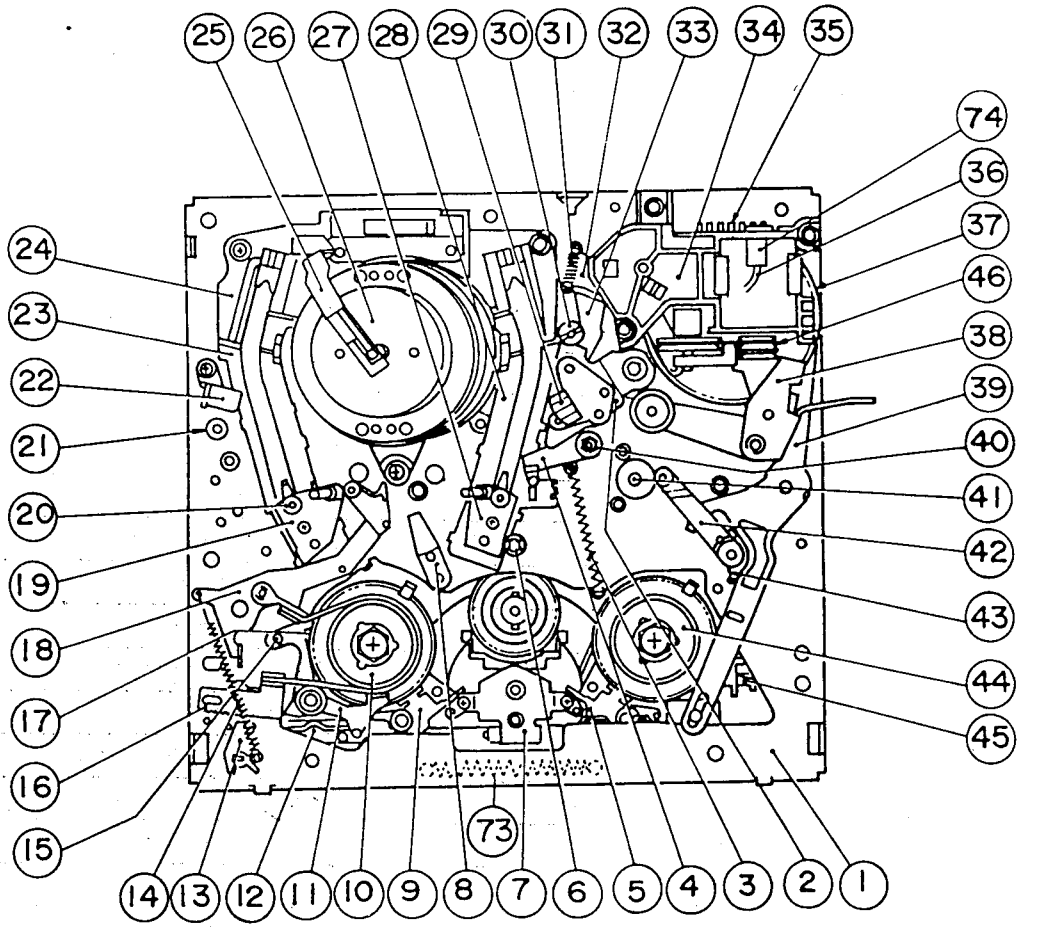

- BOTTOM VIEW

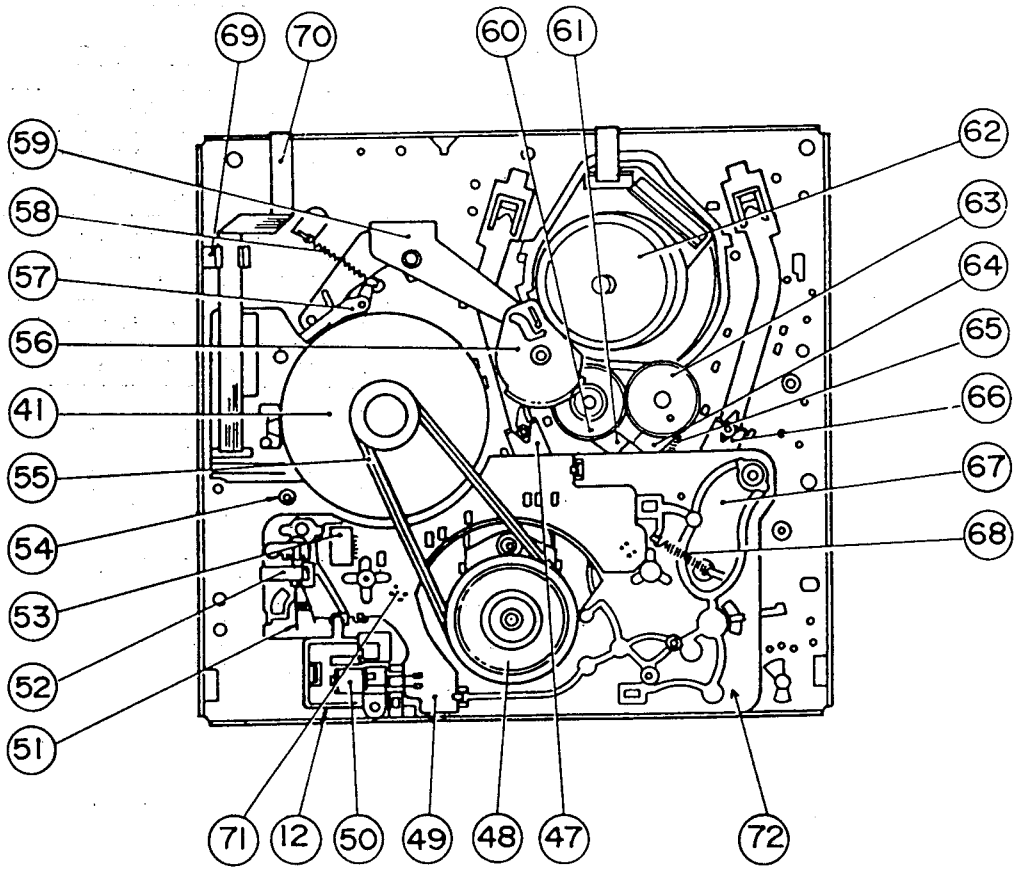

LOCATION LIST OF MECHANICAL PARTS

No.	Part Name	No.	Part Name
1	Main chassis ass'y	38	Pinch roller lever ass'y
2	A/C head arm	39	Relay shifter lever
3	Half-loading lever spring	40	Retaining guide
4	Half-loading lever	41	Capstan D.D.motor
5	Main take-up brake lever	42	Reverse guide
6	Cassette LED	43	Reverse guide spring
7	Idler gear ass'y	44	Take-up reel disk
8	Cassette control earth spring	45	Video search brake lever
9	Main supply brake lever	46	Loading belt
10	Supply reel disk	47	Take-up pole base slider
11	Back tension lever	48	Reel pulley
12	Brake shifter	49	Reel sensor PWB
13	Tension spring hook plate	50	Brake solenoid
14	Tension spring	51	Shifter spring
15	Tension release lever	52	Shifter spring cover
16	Tension band ass'y	53	Connector
17	Auxiliary fast forward brake lever	54	Reverse guide spring
18	Tension arm ass'y	55	Reel belt
19	Supply pole base ass'y	56	Loading relay gear
20	Guide roller ass'y	57	Slow brake lever
21	Supply impedance roller	58	Slow brake spring
22	Full erase head ass'y	59	Relay gear drive lever
23	Supply loading rail	60	Take-up loading gear
24	Drum base	61	Take-up loading arm ass'y
25	Earth brush ass'y	62	Drum D.D. motor ass'y
26	Drum ass'y	63	Supply loading gear
27	Take-up pole base ass'y	64	Supply loading arm ass'y
28	Take-up loading rail	65	Loading reciprocating spring
29	A/C head ass'y	66	Supply pole base slider
30	X-position adjusting nut	67	Reel block chassis
31	Half-loading reciprocating spring	68	Auxiliary fast forward brake spring
32	Half-loading reciprocating lever	69	Full flat cable holder
33	Half-loading drive lever	70	Full flat cable(Drum D.D. motor)
34	Loading block ass'y	71	Reel sensor
35	Cam switch	72	Reel block
36	Loading motor	73	Main brake spring
37	Master cam	74	Dew sensor

ADJUSTMENT, REPLACEMENT, ASSEMBLY AND CLEANING OF MECHANICAL UNITS

Here we will describe a relatively simple service work in the field, not referring to the more complicated repairs which would require the use of special equipment and tools (drum assembly or replacement, for example).

We are sure that the easy-to-handle tools listed below would be more than handy for periodical maintenance to keep the machine in its original efficient condition.

TOOLS NECESSARY FOR ADJUSTING THE MECHANICAL UNITS

The following tools are required for proper service and satisfactory repair.

No.	Jig Item	Part No.	Code	Configuration	Remarks
1	Reel Disk Height Adjusting Jig	JiGRH0002	BR		These Jigs are used for checking and adjusting the reel disk height.
2	Master Plane Jig	JiGMP0001	BY		
3	A/C Head Tilt Adjusting Jig	JiGACH-F18	BU		This Jig is used for settimg the A/C head tilt.
4	Torque Gauge (90g)	JiGTG0090	CM		These Jigs are used for checking and adjusting the torque of take-up and supply reel disks.
	Torque Gauge (1.2 kg)	JiGTG1200	CN		
5	Gauge Head	JiGTH0006	AW		
6	Cassette Torque Meter	JiGVHT-063	CZ		This cassette torque meter is used for checking and adjusting the torque of take-up and supply reel and for measuring tape back tension.
7	Tension Gauge (300g)	JiGSG0300	BF		There are two Gauges used for the tension measurements, 300 g and 2.0 kg.
	Tension Gauge (2.0 kg)	JiGSG2000	BS		
8	Hex Wrench (0.9 mm)	JiGHW0009	AE		These Jigs are used for loosening or tightening special Hexagon type screws.
	Hex Wrench (1.2 mm)	JiGHW0012	AE		
	Hex Wrench (1.5 mm)	JiGHW0015	AE		
9	Alignment Tape (PAL)	VROCPSV	CK		This tape is especially used for electrical fine adjustment.
10	Drum Replacing Jig	JiGDT-0001	BG		This is used for replacement of the VCR's upper drum.
11	Tension Gauge Adapter	JiGADP003	BK		This Jig is used for the tension gauge. Rotary Transformer Clearance Adjusting Jig.

No.	Jig Item	Part No.	Code	Configuration	Remarks
12	Special Bladed Screwdriver	JiGDRiVERH-4	AP		This Screwdriver is used for adjusting the guide roller height and X-position.
13	Tension Band and Plate Adjusting Jig	JiGDRiVER-6	BM		This Jig is used for adjusting the tension band and tension plate.
14	Torque Driver	JiGTD1200	CB		This is used to screw down resin-made parts: the specified torque is 5 kg.
15	Box Driver	JiGDRiVER110-7	AS	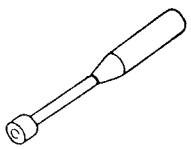	This Jig is used for height adjustment of the A/C head.
		JiGDRiVER110-4	AV		This Jig is used for height adjustment of the retaining guide.
16	Retaining Guide Height Adjusting Jig	JiGGH-F18	BU		This Jig is used for height adjustment of the retaining guide.
17	Reverse Guide Height Adjusting Jig	JiGRVGH-F18	BU		This Jig is used for height adjustment of the reverse guide.

NOTE:
Current JiGMA0001 contains Master Plane (JiGMP0001) and Disk Height Adjusting Jig (JiGRH0001). Even though new Disk Height Adjusting Jig (JiGRH0002) covers greater height, this new Jig (JiGRH0002) can be used for current JiGRH0001, but current Jig (JiGRH0001) cannot be used as JiGHR0002.Master Plane (JiGMP0001)can be used with JiGRH0001 and JiGRH0002 as well.

SERVICE TOOLS

JIGRH0002	4822 395 80215	Reel disc height adjustment
JIGMP0001	4822 395 80193	Master plane jig
JIGACH-F18	4822 395 80301	A/C head tilt adjustment
JIGTG0090	4822 395 80196	Torque gauge 909
JIGTG1200	4822 395 80197	Torque gauge 1,2 kg.
JIGTH0006	4822 395 80198	Gauge head
JIGVHT-063	4822 395 80217	Cass. torque meter
JIGSG0300	4822 395 80194	Tension gauge 300 gr.
JIGSG2000	4822 395 80216	Tension gauge 2 kgr.
JIGHW0009	4822 395 80189	Hex wrench 0.9 mm
JIGHW0012	4822 395 80191	Hex wrench 1.2 mm
JIGHW0015	4822 395 80192	Hex wrench 1.5 mm
VROCPSV	4822 397 30107	Aligment tape PAL
JIGDT-0001	4822 395 80186	Drum replacing jig
JIGADP003	4822 395 80213	Tension gauge adapter
JIGDRIVERH-4	4822 395 50189	Special screw driver
JIGDRIVER-6	4822 395 50191	Tension band adjustment
JIGTD1200	4822 395 54047	Torque screw driver
JIGDRIVER110-7	4822 395 50192	Box driver
JIGDRIVER110-4	4822 395 50273	Box driver
JIGGH-F18	4822 395 80302	Ret guide height adjustment
JIGRVGH-F18	4822 395 80303	Rev guide height adjustment

TROUBLESHOOTING GUIDE

■ TROUBLES OF CONTROL SYSTEM (SERVO, SYSTEM CONTROLLER CIRCUIT)

No.	Problems	Probable causes and countermeasures
1.	No power is supplied.	• The fuse is blown out; check if there occurs a shortcircuit in the internal circuit. • Check if there are produced AT5V, Motor 12V and AT9V in the power circuit; if not, this means that the power circuit is defective. • Check if the system controller (IC801) is normally functioning; check if there are produced reset signals (ACL) at pin 45 of IC801 and clock signal at pins 46 and 47 of IC801. • Check if the power control signal (Low level) goes out of pin 19 of IC801.
2.	No operation is available.	• Check if the end sensor signal (cassette housing side) and start sensor signal are applied to pins 56 and 57 of IC801 respectively. • Check if the unit is in timer mode. • Check if the unit is in sensor stop mode. • The cam switch is poorly adjusted for its positioning.
3.	After tape lading, the unit is stopped with the tape kept wound over the drum, or the cassette can't be ejected.	• The cam switch is poorly adjusted for its positioning. • IC803 is defective.
4.	The unit will stop immediately after it is set in playback or record mode.	• Check if the head switching pulse is applied to pin 3 (for the drum sensor) of IC801. • Check if the drum motor is rotating. • Check if the drum pulse generator's signal is applied to pin 4 of the servo circuit IC701
5.	The unit will stop a few seconds after it has been set in playback or record mode.	• Check if the reel sensor pulse is applied to pin 58 (for the reel sensor) of IC801. • Check if the reel motor is rotating. • Check if the reel idler is stained or defective.
6.	The tape is not running (the tape is not taken up).	• The reel idler is defective. • The reel brake is defective.
7.	• The unit stops sometimes during playback or recording. • The tape can't be taken up when tape unloading. • The tape is scratched when it is wound. • Video search is impossible.	• Check if there are produced capstan motor control signals at the system controller (servo clock signal 38 of IC801, servo data signal at 39 of IC801, capstan motor pull up signal at pin 29 of IC801, capstan motor unloading signal at pin 39 of IC801, loading motor control forward signal at pin 63 of IC801, casette and loading motors revese control signal at pin 62 of IC801). • The video search circuit is defective. • IC701 and IC702 are defective.
8.	Fine noises appear at the reproduced picture.	• The playback phase generator MM control is misadjusted (R740).

No.	Problems	Probable causes and countermeasures
9.	Noises appear intermittently at the reproduced picture.	• Check for capstan servo circuit (capstan frequency generator's signal at pin 11 of IC701 and playback control signal at pin 42 of IC701)
10.	The picture collapses in the horizontal direction.	• The drum servo circuit is defective. • Check if there are drum frequency generator's signal applied to pin 7 of IC701 and drum phase generator's signal to pin 4 of IC701. • Check if there is reference signal (4.43MHz) at pin 22 of IC701.

- TROUBLES OF SOUND AND REPRODUCED PICTURE (Y/C AND AUDIO CIRCUIT)

No.	Problems		Probable causes and countermeasures
1.	No picture appears.	At E-E mode	• Check if the video signal (E-E signal) is applied to pin 4 of IC201, if the video signal goes out of pin 10, and if proper voltage is applied to each pin of IC201). • Check if the video signal comes into pin 3 of IC2201 and goes out of pin 8 of IC2201 (in tuner mode). • Check if the E-E (L) signal is at low level at pin 26 of connector AX and pin 7 of IC2201.
		At playback of standard tape.	Make sure that there appears a normal picture at E-E mode. • Check if the playback FM signal is applied to pin 7 of connector CE. • Check if the playback FM signal is applied to pins 19 and 20 of IC301. • Check if Vcc 5V is applied at pin 8 of IC401. • Check if the video signal (demodulator output) is given at pin 16 of IC401. • Check if the video signal is given at pin 1 of IC401. • Check if the base of Q202 is at high level (about 4V).
		At playback of the tape recorded by oneself.	Before this checking, make sure that normal playback is possible with standard tape. • Check if there is FM signal at pin 16 of IC401. • Check if there is video signal at pin 6 of IC201. • Check if there is video signal at pin 10 of IC201.
	No colour appears.		• Check if there is chroma signal at pin 30 of IC501. • APC is misadjusted (R506). It is not allowed to readjust them, this means that IC501 is defective. • Check if IC501 is normally functioning.
3.	The picture collapses when the tape recorded by oneself is played back.		• Check if there is a normal voltage at each pin of the head amplifier.
4.	Noises appear on the whole of picture when the tape recorded by oneself is played back.		• Check if there is a normal voltage at each pin of the head amplifier • Check the video head or replace it a new one.

No.	Problems	Probable causes and countermeasures
5.	Noises is noticeable åt E-E mode or when the tape recorded by oneself is played back.	• The tuner and/or RF converter are defective. • Check if AT 5V is applied at pin 5 of the RF converter. • Check the coaxial cable between the tuner and the RF converter for breakage. • Disconnect the antenna cable to see if the DC voltage at the tuner's AGC terminal goes above 6V.
6..	Noise appear on the picture when the tape is played back with standard tape.	• Clean the video head or replace it a new one.
7.	There appears no E-E sound.	• First make sure the E-E picture appears as specified.(If not, the muting effect is produced.) • ALC at IC601 operates improperly. • Check if there is audio signal at pin 17 of IC601 • The audio muting circuit is defective.
8.	There appears no sound at playback mode.	• The audio head is defective. • Check if the control signal is applied. (If not, the muting effect is produced. • Ckeck if playback audio signal is applied to pin 7 of IC601 and goes out of pin 17.
9.	Sound is distorted.	• The audio head is magnetized or defective. • Bias current is insufficient.
10.	The reasonance in the recording or playback is incorrect.	• The audio head is magnetized or defective. • Bias oscillator circuit is defective.
11.	Recording is impossible.	• Bias oscillator circuit is not normally functioning. • Ckeck if pin 12 of K602 (bias control 9V) is at high level.
12.	Noise and hum appear frequently during playback or recording.	• The audio head is defective.

MECHANICAL PARTS REQUIRING PERIODICAL INSPECTION

Use the following table as a guide to maintain the mechanical parts in good operating condition.

Parts \ Maintained every	500 hrs.	1000 hrs.	1500 hrs.	2000 hrs.	3000 hrs.	Remarks
Guide roller ass'y	□	□	□	□	□	Abnormal rotation or significant vibration requires replacement.
Supply impedance roller	□	□	□	□	□	
Supply impedance roller (inner)		□		□	□	Clean with pure high quality isopropyl alcohol.
Supply impedance roller flange	□	□	□	□	□	Clean tape contact area with the specified cleaning liquid.
Retaining guide	□	□	□	□	□	
Slant pole	□	□	□	□	□	
Video head	□	○□	□	○□	○□	Clean tape contact area with the specified cleaning liquid.
Full-erase head	□	□	□	□	□	
A/C head	□	□	□	□	□	
Pinch roller	□	□	□	□	○□	Clean rubber and rubber contact area with the specified cleaning liquid.
Reel belt		□		□		
Loading belt		□		○		
Capstan loading belt		□		○		
Reel block*				○		
Tension band ass'y					○	
*See the table below for servicing the reel block parts.						
Supply/take-up reel disks		□ △		□△○		Clean with pure high quality isopropyl alcohol.
Video serch brake lever				○		
Idler gear ass'y				○		
Reel idler		□△		□△		
Main supply/take-up brake levers				○		

NOTE: ○: Part replacement.
□: Cleaning (For cleaning, use a lint-free cloth dampened with pure isopropyl alcohol).
△: Oil refilling (The indicated point should be lubricated with high quality spindle oil every 1000 hrs).

This model has no adjusting parts for torques, tension, etc. If the reading is outside the specified range, clean or replace the part.

REMOVAL AND REASSEMBLY OF CASSETTE HOUSING CONTROL ASSEMBLY

Notes:

1. During removal and reassembly, be careful not to strike the nearby guide pin, drum, etc.
2. Before removal or reassembly, be sure to unplug the recorder from the AC outlet.
3. When removing and attaching the cassette loading belt, be careful to keep it free from grease.

- Removal

1. Put the unit in the cassette eject position.
2. Remove the cassette loading belt ① .
3. Disconnect the FFC (Full Flat Cable) ② at the right side of the cassette housing control assembly.
   Note: Be careful not to break the FFC.
4. Remove the two cassette housing installation screws.
5. Move the cassette housing control assembly (Fig. 1-1) in the direction of arrow ➡ Ⓑ, and pull it out straight upward.

- Reassembly

1. Insert the tabs of the cassette housing control assembly into the mechanism chassis, move it in the direction of arrow ➡ Ⓐ, and secure temporarily.
   Check to see if the cassette housing control assembly is in the correct position, and then tighten the two screws (XHPS330P06WS0) .
2. Attach the cassette loading belt ①.
3. Connect the FFC ② at the right side of the cassette housing control assembly.

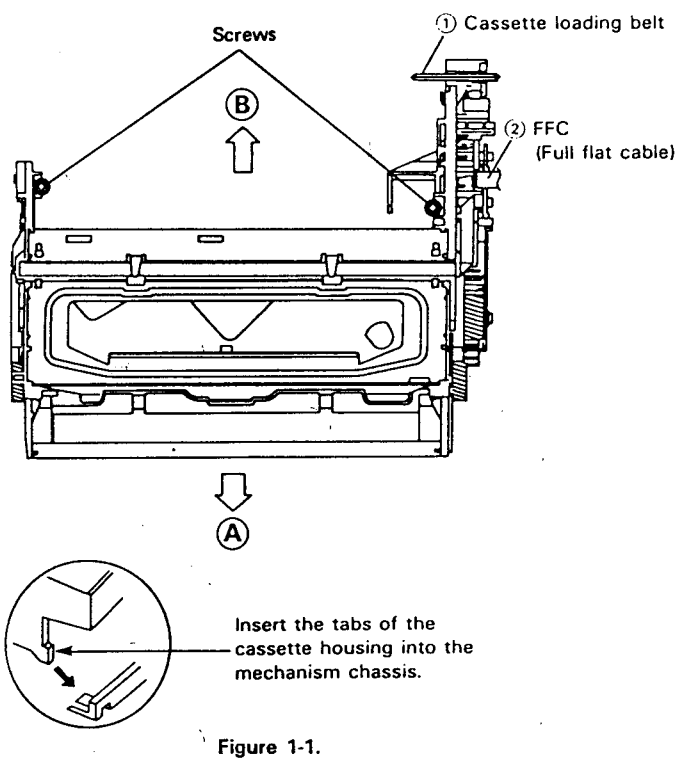

Figure 1-1.

REPLACEMENT OF WORM WHEEL ASSEMBLY

- Removal (Fig. 1 - 2)

1. Unsolder the cassette switch connector from the start sensor PWB ①
2. Release the two catches Ⓐon the cassette housing frame (R), and remove the PWB.
3. Unscrew one B tight screw ② to detach the worm bracket ③.
   Note: The bearing ④ can come off position too. So be careful not to let the bearing fall.
4. Remove the worm shaft assembly ⑤, pulley ⑥ and cassette loading belt ⑦ all from the cassette housing frame (R).
5. Finally pull the worm wheel assembly out of the boss of the cassette housing frame (R).

- Reassembly (Fig. 1-2)

1. Turn the phase gear ⑧ clockwise until the slider comes to a halt in the cassette insertion direction.
2. Set up the worm wheel gear assembly onto the boss on the cassette housing frame (R), matching the mark Ⓖ on the phase gear ⑧ with the mark Ⓗ on the worm wheel gear.
   Note: Make sure that the slider pin is in the groove of the drive gear arm.
3. Install the pulley ⑥ and apply the cassette loading belt ⑦ both on the worm shaft assembly ⑤ Couple the clutch ⑩ to the clutch lever ⑨. And mount them together in the cassette housing frame (R) .
4. Attach the worm bracket ③ to the worm shaft assembly ⑤. Place them onto the boss on the cassette housing frame (R).
5. Tighten one B tight screw ②.
   Note: Make sure that the parts Ⓒ and Ⓓ of the cassette housing frame (R) are properly engaged with the parts Ⓔ and Ⓕ of the worm bracket ③.
6. Hook the start sensor PWB① on the two positions Ⓐ on the cassette housing frame (R).
   Note: Check that the switch connector is right in the cassette switch mounting hole Ⓑ.
7. Finally resolder the cassette switch connector to the start sensor PWB.

Notes:

1. Do not overtighten the B tight screw (no more than 5.0 ± 0.5 kg. cm), because otherwise the lower threads of the screw hole at the resin-made boss may be broken.
2. Keep in mind that the clutch switching lever should be in the correct positional relation. The mechanism might malfunction even if the lever comes slightly out of position.

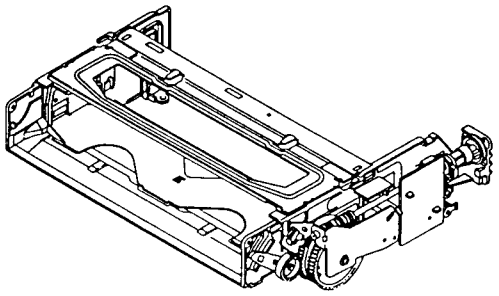

Figure 1-2 (a).

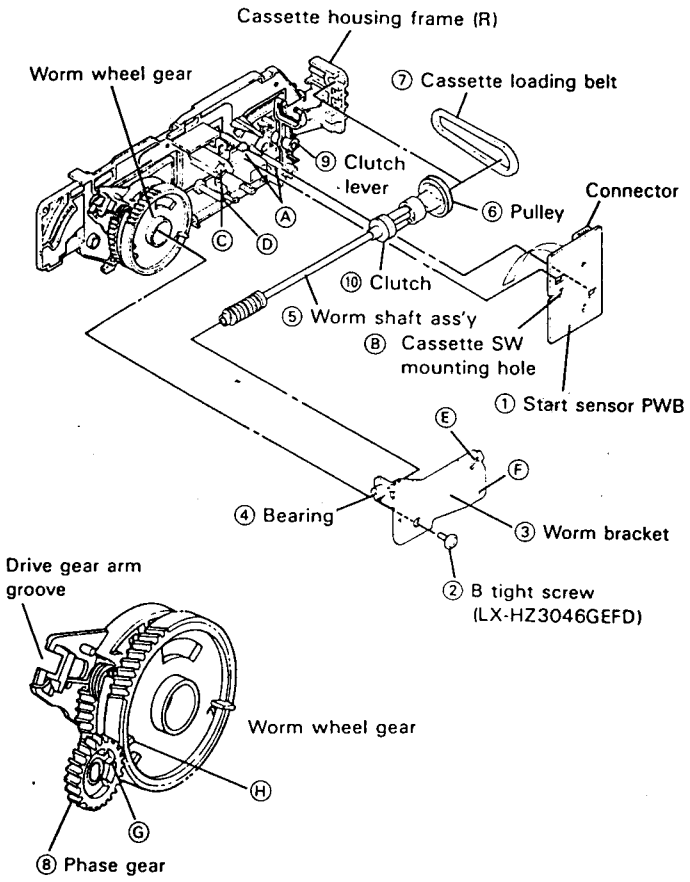

Figure 1-2 (b).

- Reassembly of drive gear (Fig.1- 3)

1. Pass the tip Ⓑ of the drive gear spring (R) ② through the square hole Ⓐ of the drive gear (R) ① to the hook the spring in position.
2. Hook one end Ⓓ of the reciprocating spring ③ to the catch Ⓒ of the drive gear (R) ①.
3. Hook the other end Ⓔ of the reciprocating spring ③ to the catch Ⓕ of the worm wheel ④.
4. Fit the drive gear (R) ① to the worm wheel ④ so that the catch Ⓖ and boss Ⓙ on the drive gear (R) are exactly in the square hole Ⓗ and round hole Ⓘ, Respectively, in the worm wheel.

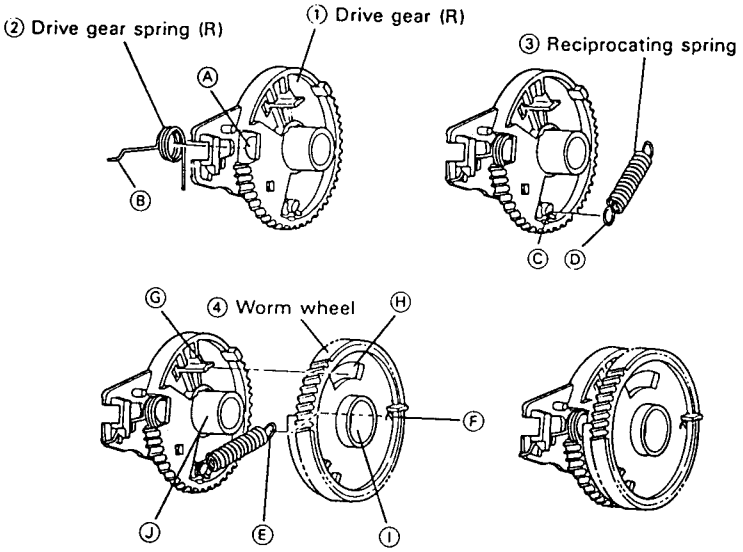

Figure 1-3.

REPLACEMENT OF CASSETTE LOADING BELT

- Replacement (Fig. 1-4)

1. Remove the start sensor PWB and worm bracket from the cassette housing frame (R).
2. Remove the worm shaft assembly, pulley and cassette loading belt from the cassette housing frame (R).
3. Replace the cassette loading belt with a new one.

Notes:

1. Do not overtighten the B tight screw which holds the worm bracket in position. The specified tightening torque is 5.0 ± 0.5kg. cm.
2. Make sure that the cassette loading belt, being applied in the cassette housing frame (R), is free from grease. If stained with grease, clean the belt with the specific cleaning liquid.
3. Finally check the clutch switching lever for its specified points.

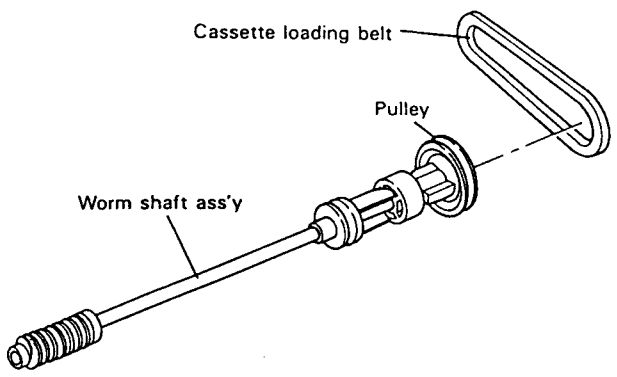

Figure 1-4.

CHECKING THE CLUTCH SWITCHING LEVER

• **Checking (Fig. 1-5)**

When removing and attaching the clutch switching lever from and to the mechanism chassis, check to see if the lever is in the position as shown below. If out of this position, malfunction might result.

1. First make sure that the rib Ⓐ of the drive gear (R) ① and the tip Ⓑ of the switch lever ② are in their correct positions.
2. Check also that the rib Ⓒ of the cassette housing frame (R) and the catch Ⓓ of the clutch lock lever ③ are in their proper positions.
3. Finally be sure that the positional relations between the clutch lever ④ and the clutch ⑤, as well as between the clutch ⑤ and the pulley ⑥, are as specified.

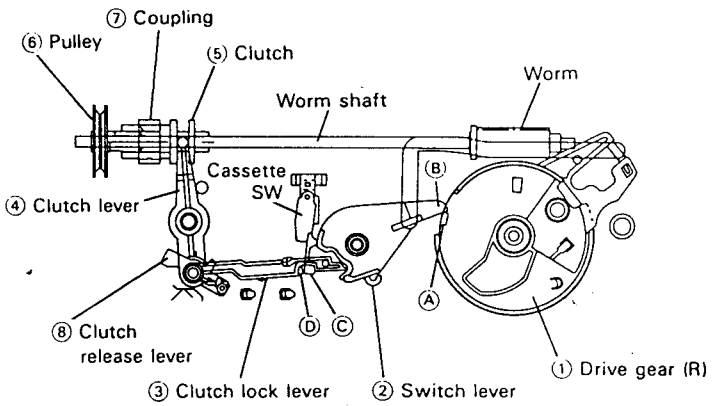

Figure 1-5.

• **Resetting (Fig. 1-6)**

Take the following steps to reset the clutch ⑤ if it is unlocked or if the switch lever ② and clutch lock lever ③ are unlocked.

1. Turn the coupling ⑦ clokwise (as viewed from the front of the set) until the slider comes to the position indicated below.
   Note: Notice that the slider is equipped with a lock mechanism. Unlock the slider, therefore, before shifting the slider.

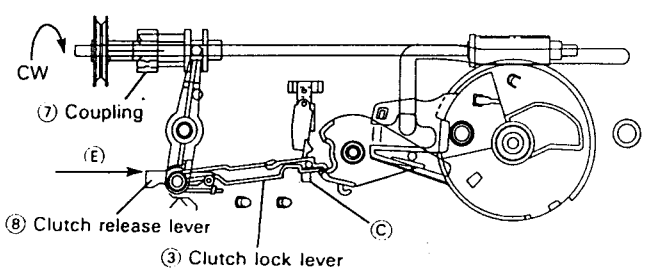

Figure 1-6.

2. Now push the clutch release lever ⑧ in the direction of arrow Ⓔ by hand until the clutch lock lever ③ becomes tightly locked by the part Ⓒ of the cassette housing frame (R).
3. Then turn the coupling ⑦ counterclockwise until the slider reaches the cassette insertion opening and the reciprocating spring is activated.
   Note: There is no need to lock the slider. Just keep shifting the slider.

REPLACEMENT OF LOCK RELEASE LEVER

• **Removal (Fig. 1-7)**

1. Turn the coupling clockwise until the slider ① comes to the cassette down position.
   Note: Before shifting, unlock the slider.
2. Slightly widen the cassette housing frames (R) and (L) to unhook the parts Ⓐ of the slider holders (R) and (L) off the grooves of the above frames.
3. Press the catch Ⓑ on the slider holder (R) ②, and let the slider ① go off this holder in the direction of arrow Ⓒ.
4. Take the lock release lever ③ out of the slider holder (R) ②.

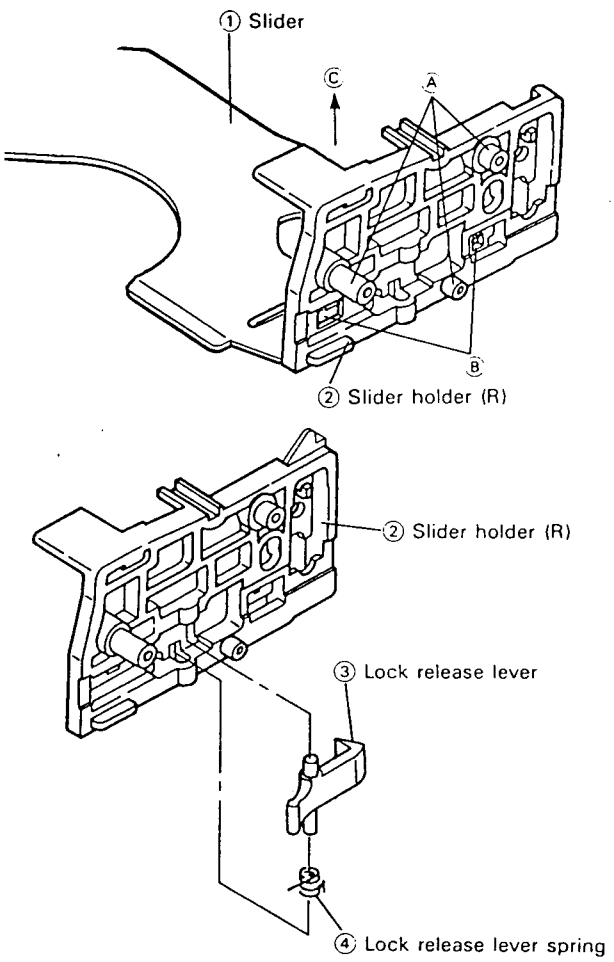

Figure 1-7.

- Reassemdly (Fig. 1-7)

1. Attach the lock release lever ③ to the slider holder (R) ②.
2. Fit the slider holder (R) ② to the slider ①.
3. Slightly widen the cassette housing frames (R) and (L), and set the parts Ⓐ of the slider holders (R) and (L) to the grooves of the cassette housing frames (R) and (L).
   Note: Make sure of the following fitting: Fitting between the parts Ⓐ of the slider holders (R) and (L) and the grooves of the cassette housing frames (R) and (L), as well as between the drive gear arms and the slider holders (R) and (L).
4. Turn the coupling counterclockwise until the slider ① comes to the cassette insertion opening.

TO RUN A TAPE WITHOUT THE CASSETTE HOUSING CONTROL ASSEMBLY

1. Open the lid of a cassette tape by hand and hold it with a piece of vinyl tape.
2. Set the cassette tape in the tape mechanism.Then, stabilize the cassette tape with a weight (500g or less).
   Note: The weight should not be more than 500g.

REMOVAL AND HEIGHT ADJUSTMENT OF REEL DISKS

- Removal of supply reel disk:

1. Remove the cassette housing control assembly.
2. Set the mechanism in the playback mode with no cassette tape in place. Unplug the power cord.
3. Remove the tension band ⑧.
4. Unscrew the screw ⑩ and release the cassette housing control ground spring ⑫ off the reel disk catch ①.
5. Release the supply reel disk catch ① and back tension lever ②. Pull out the supply reel disk ③ upward.

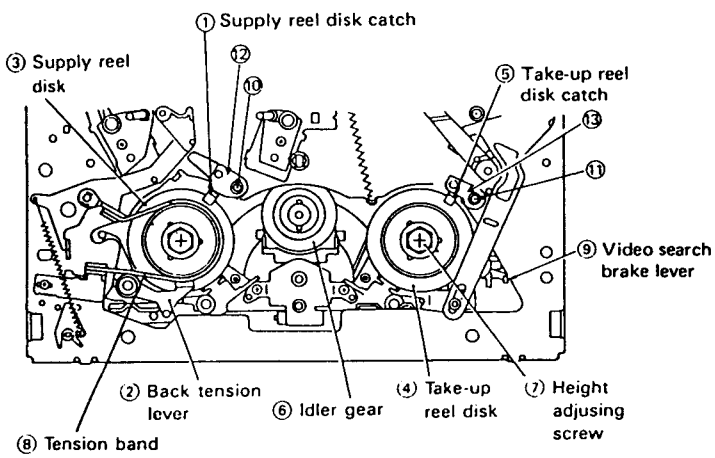

Figure 1-8.

- Removal of take-up reel disk:

1. Remove the cassette housing control assembly.
2. Set the mechanism in the playback mode with no cassette tape in place. Unplug the power cord.
3. Unscrew the screw ⑪ and release the take-up reel disk catch holder ⑬ off the reel disk catch ⑤.
4. Release the take-up reel disk catch ⑤. Pull out the take-up reel disk ④ upward.

Notes:

1. After replacing either of the reel disks, be sure to perform the height adjustment procedure.
2. Take care not to deform the tension hand.
3. Be careful not to deform the back tension lever, main supply / take - up brake levers, video search brake lever and auxiliary fast forward brake. (See pages 4 and 5.)
4. Check the tension pole position. (See page 15.)
5. Be careful not to damage the supply reel disk, take-up reel disk and idler gear ⑥.
6. Whenever replacing, clean and lubricate the reel disk shaft.

- Reassembly of supply reel disk:

1. Clean the reel disk shaft and apply oil (high quality spindle oil) to it, then install a new supply reel disk onto the shaft.
2. Replace the cassette housing control ground spring ⑫ in position and tighten up the screw ⑩.
3. Replace the tension band ⑧.
4. Adjust the reel disk height by using the master plane and reel disk height adjusting jig.

- Reassembly of take-up reel disk:

1. Clean the reel disk shaft and apply oil (high quality spindle oil) to it. Then, release the video search brake lever and install a new take - up reel disk onto the shaft.
2. Replace the take-up reel disk catch holder ⑬ in position and tighten up the screw ⑪.
3. Adjust the reel disk height by using the master plane and reel disk height adjusting jig.

Notes:

1. During removal and reassembly, be careful not to damage the reel disks, reel shafts, idler gear and brake levers.
2. After reassembly, check the back tension in video search rewind mode (see page 14) and checking the brake torque (see page 16)

HEIGHT ADJUSTMENT

1. Remove the cassette housing assembly, and place the master plane onto the mechanism unit as shown in Fig.1-9 (a), taking care not to hit the drum.
2. Ensure that the reel disk is lower than the part Ⓐ but higher than the part Ⓑ of Fig. 1-9 (b), by using the reel disk height adjusting jig. If the height is not correct, adjust the height adjusting screw.

Note: Whenever replacing the reel disk, perform the height adjustment.

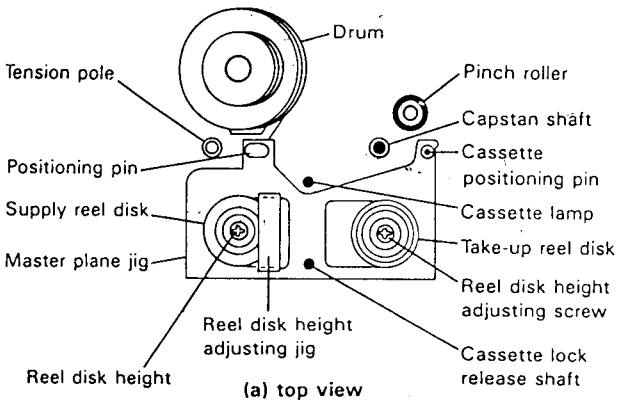

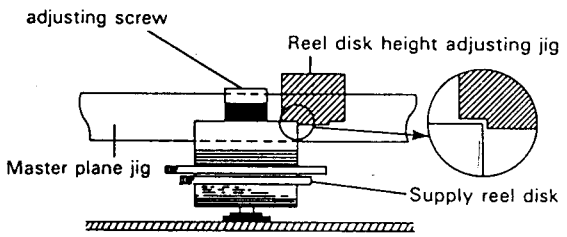

Figure 1-9.

CHECKING AND ADJUSTMENT OF TAKE-UP TORQUE IN FAST-FORWARD MODE

Notes:

1. When setting the torque gauge on the take-up reel disk and pushing the fast-forward button to start the reel disk turning, take care that the torque gauge does not fly off.
2. The checking and adjustment should be carried out without a video cassette tape in place.

- **Checking**

1. Remove the cassette housing assembly.
2. Place the torque gauge on the take-up reel disk and push the fast-forward button to place the unit in the fast-forward mode.
3. Turn the torque gauge slowly (one rotaion every 2 to 3 seconds) by hand in the take-up direction and check that it indicates 700 g.cm or more.

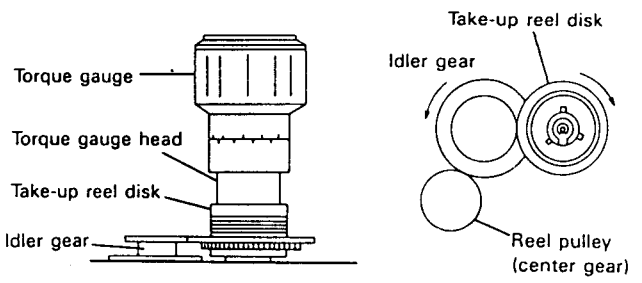

Figure 1-10.

- ***Adjustment***

If the take-up torque is outside the specified range, clean the capstan D.D. motor pulley, reel belt and reel pulley with cleaning liquid, then recheck the torque.
If the take-up torque is still out of specification, replace the reel belt.

CHECKING AND ADJUSTMENT OF TAKE-UP TORQUE IN REWIND MODE

Notes:

1. When setting the torque gauge on the supply reel disk and pushing the rewind button to start the reel disk turning, take care that the torque gauge does not fly off.
2. When checking the take-up torque, do not keep the reel disk locked for a longer time.

- **Checking**

1. Remove the cassette housing assembly.
2. Place the torque gauge on the supply reel disk and push the rewind button to place the unit in the rewind mode.
3. Turn the torque gauge slowly (one rotation every 2 to 3 seconds) by hand in the take-up direction and check that in indicates 700 g.cm or more.

- **Adjustment**

If the take-up torque is outside the specified range clean the capstan DD motor pulley, reel belt and reel pulley with cleaning liquid, then recheck the torque.
If the take-up torque is still out of specification, replace the reel belt.

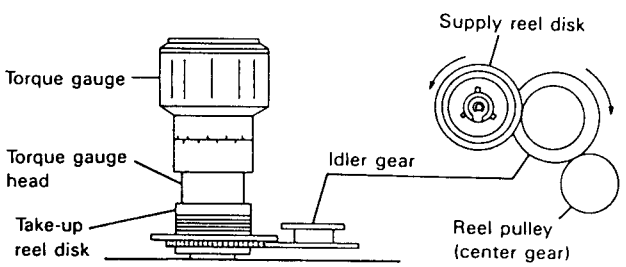

Figure 1-11.

CHECKING OF TAKE-UP TORQUE IN PLAY-BACK MODE

- **Checking**

Load a cassette torque meter (JiGVHT-063) into the unit and push the record button to place the unit in the record mode. Then check that the torque is as specified;

torque: 95 ± 30 g.cm

Note:
The measured torque fluctuates due to the rotational deviation of the reel drive unit. Use the center of the fluctuating range as the measured value.

1. If the take-up torque in playback mode is outside the specified value, replace the take-up reel disk.
2. Push the record button to place the unit in the record mode, and check that the take-up torque is within the specified range.

CHECKING OF TAKE-UP TORQUE IN VIDEO SEARCH REWIND MODE

- **Checking**

Load a cassette torque meter (JiGVHT-063) into the unit and push the play and video search rewind buttons to place unit in the video search rewind mode.
Then check that the torque is as specified;

● torque in video search rewind mode : 170 ± 40 g.cm

Note:
The measured torque fluctuates due to the rotational deviation of the supply reel disk. Use the center of the fluctuating range as the measured value.

1. If the take-up torque in video search rewind mode is outside the specified range, replace the supply reel disk.

CHECKING THE FAST FORWARD BACK TENSION

Note:
Set the torque gauge securely on the supply reel disk; if the torque gauge is loose above the reel disk, an inaccurate measurement will result.

Checking

1. Remove the cassette housing assembly.
2. Push the fast forward button to place the unit in the fast forward mode.
3. Place the torque gauge on the supply reel disk, and turn it clockwise very slowly (one rotation every 2 to 3 seconds) and check that the torque is within 15 ± 5 g.cm.

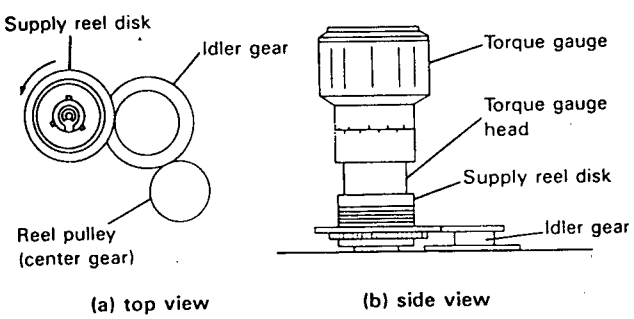

Figure 1-12.

CHECKING THE REWIND BACK TENSION

Note:
Set the torque gauge securely on the take-up reel disk; if the torque gauge is loose above the reel disk, an inaccurate measurement will result.

- **Checking**

1. Remove the cassette housing assembly.
2. Push the rewind button to place the unit in the rewind mode.
3. Place the torque gauge on the take-up reel disk, and turn it counterclockwise very slowly (one rotation every 2 to 3 seconds) and check that the torque is within 15 ± 5 g.cm.

CHECKING THE VIDEO SEARCH REWIND BACK TENSION

Note:
Set the torque gauge securely on the take-up reel disk; if the torque gauge is loose above the reel disk, an inaccurate measurement will result.

- **Checking**

1. Remove the cassette housing assembly.
2. Push the play button to place the unit in the playback mode.
3. Push the video search rewind button to place the unit in the video search rewind mode.
4. Place the torque gauge on the take-up reel disk, and turn it counterclockwise very slowly (one rotation every 2 to 3 seconds) and check that the torque is within 40 ± 10 g.cm.

CHECKING THE PINCH ROLLER PRESSURE

1. Remove the cassette housing assembly.
2. Push the play button to place the unit in the playback mode.
3. Hook the tension gauge adapter around the pinch roller shaft.
4. Using a tension gauge, pull the pinch roller in the direction of arrow ➡ Ⓐ so that the pinch roller moves away from the capstan shaft.
5. Gradually release the pressure in the direction of arrow➡ Ⓑ to allow the pinch roller to touch the capstan shaft. When the pinch roller just touches the capstan shaft, read the indication on the gauge.
6. Check that the reading of the tension gauge is in the range of 1000 to 1200 gr.

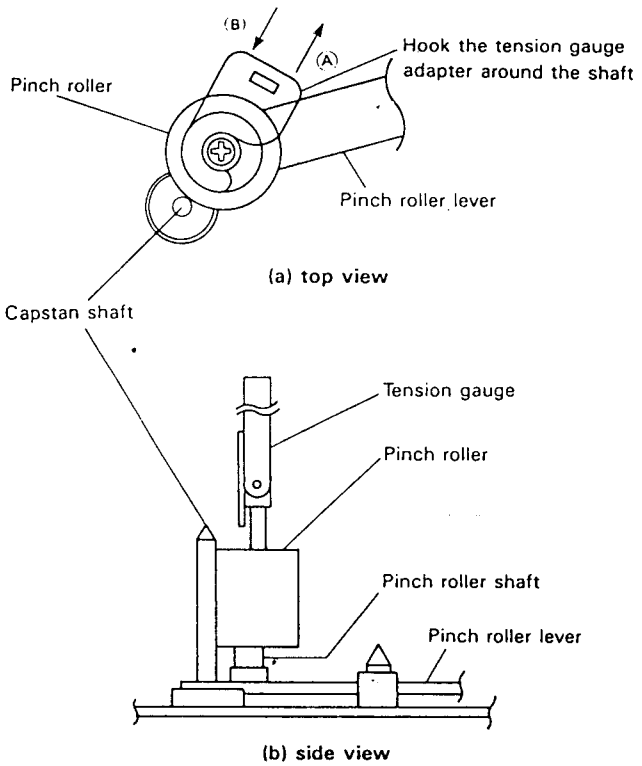

Figure 1-13.

ADJUSTMENT OF TENSION POLE

- **Position checking (Fig. 1-14)**

1. Remove the cassette housing assembly.
2. Set a video cassette tape and push the record button to place the unit in the record mode.
3. The pole bases (see page 4; item 19 and 27.) operate to bring the tape outside the cassette housing and simultaneously the tension pole moves to the left, loading the tape. At that time (loading mode), check the position of the tension pole.

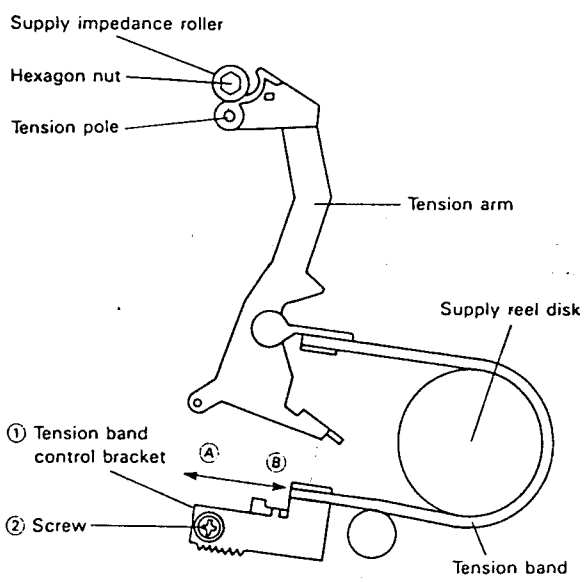

Figure 1-14.

4. At the end of the tape (E-180), check that the tension pole's center is aligned with the supply impedance roller's center.
5. Check that the tape is neither curled against the flange of the supply impedance roller nor mounted over it.
6. During the video search rewind mode with no cassette tape in place, check the supply reel disk is free of the tension band.

- **Position adjustment (Fig. 1-15)**

1. If the tension pole is at the right of the supply impedance roller's center, shift the tension band control bracket ① in the direction of arrow ➡ Ⓑ , and tighten the screw ②.
2. If the tension pole is at the left of the supply impedance roller's center, shift the tension band control bracket ① in the direction of arrow ➡ Ⓐ and tighten the screw ② .

ADJUSTMENT OF RECORD/PLAYBACK BACK TENSION

- **Checking**

1. Remove the cassette housing assembly.
2. Put a torque cassette meter into the unit.
3. Push the record button to place the unit in the record mode. Check that the reading of the cassette meter is 23 to 28 g.cm.
4. Make sure the video cassette tape is wound over the retaining guide.
5. Make sure that the tape is not slack nor damaged at both ends.

- **Adjustment (Fig. 1-15)**

1. If the back tension is lower than specified, move the tension spring hook plate ① in the direction of arrow ➡ Ⓐ so that the protuberance behind be tight in the hole.
2. If the back tension is higher than specified, move the tension spring hook plate ① in the direction of arrow ➡ Ⓑ so that the protuberance behind be tight in the hole.

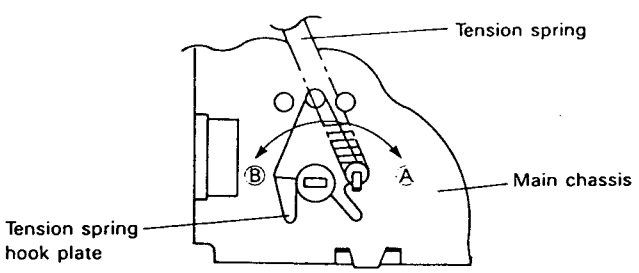

Figure 1-15.

CHECKING THE BRAKE TORQUE

A) Checking the brake torque at the supply side.

- Checking

1. Remove the cassette housing assembly.
2. Check that the mechanism is in the stop mode.
   Note: The stop mode is brought about by unplugging the power cord with the mechanism in the fast forward or rewind mode.
3. Separate the idler gear from the supply reel disk and place the torque gauge on the supply reel disk.
4. Slowly rotate the torque gauge in the clockwise (CW) direction of the supply brake so that the reel disk and the gauge needle rotate at the same speed. Do the same in the counterclockwise (CCW) direction of the supply brake. Check that the values are within the specified range (CW direction = 280 to 720 g.cm, CCW direction = 110 to 230 g.cm) and that the brake torque in the CW direction is at least twice as high as that in the CCW direction.

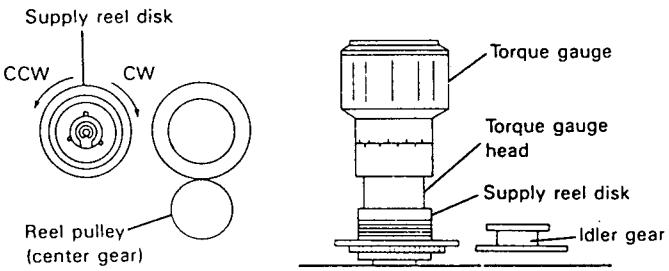

(a) top view (b) side view

Figure 1-17.

- Adjustment

1. If the supply brake torque is outside the specified range (CW direction = 280 to 720 g.cm, CCW direction = 110 to 230 g.cm), clean the supply reel disk and brake lever felt, then recheck the torque.
2. If the supply brake torque is still outside the specified range, replace the main brake spring.

B) Checking the brake torque at the take-up side.

- Checking

1. Remove the cassette housing assembly.
2. Check that the mechanism is in the stop mode.
   Note: The stop mode is brought about by unplugging the power cord with the mechanism in the fast forward to rewind mode.
3. Separate the idler gear from the take-up reel disk and place the torque gauge on the take-up reel disk.

4. Slowly rotate the torque gauge in the CCW direction of the take-up brake so that the reel disk and the gauge needle rotate at the same speed. Do the same in the CW direction of the take-up brake. Check that the values are within the specified range (CCW direction = 280 to 720g.cm, CW direciton = 90 to 200 g.cm) and that the brake torque in the CCW direction is at least twice as high as that in the CW direction.

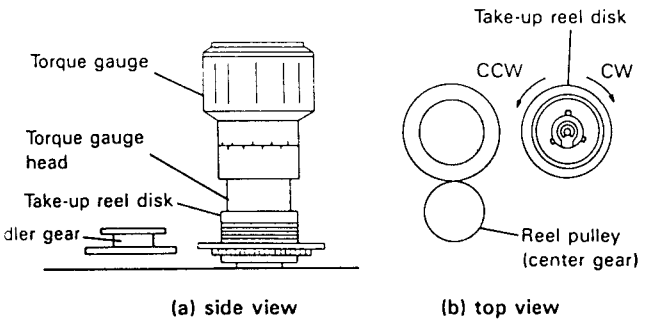

Figure 1-18.

- **Adjustment**

1. If the take-up brake torque is outside the specified range (CCW direction = 280 to 720g.cm, CW direction = 90 to 200 g.cm), clean the take-up reel disk and brake lever felt, then recheck the torque.
2. If the take-up brake torque is still outside the specified range, replace the main brake spring.

REPLACEMENT OF A/C (Audio/Control) HEAD

Note:

After replacement, perform the adjustment of tape drive train. Under any circumstances avoid touching the head (indicated by"⇒" in Fig. 1-20(c)).

- **Replacement (See Figs. 1-19 and 1-20.)**

1. Loosen the tilt adjusting screw ⑥ by using Phillips screwdriver.
2. Remove the azimuth adjusting screw ⑤ with a Phillips screwdriver.
3. Remove the A/C head screw ④ with a Phillips screwdriver, paying attention to the spring ⑦ between the A/C head screw ④ and A/C head pedestal.

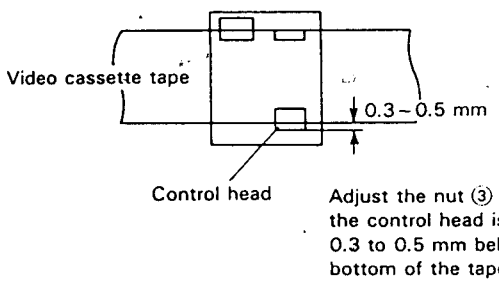
Video cassette tape
0.3 – 0.5 mm
Control head
Adjust the nut ③ so that the control head is visible 0.3 to 0.5 mm below the bottom of the tape.

Figure 1-19.

4. Remove the A/C head PWB ⑧ soldered to the A/C head assembly, and solder the A/C head PWB ⑧ onto a new A/C head assembly.
5. The A/C head assembly ① is attached so that the A/C head arm ② and A/C head pedestal are roughly parallel to each other.

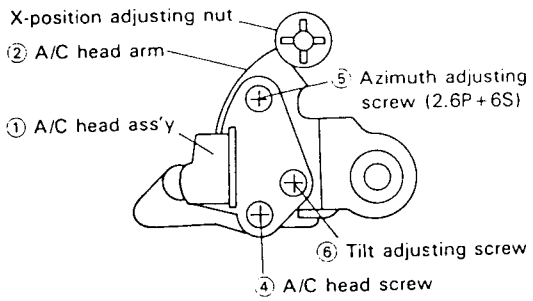
X-position adjusting nut
② A/C head arm
⑤ Azimuth adjusting screw (2.6P + 6S)
① A/C head ass'y
⑥ Tilt adjusting screw
④ A/C head screw

(a)

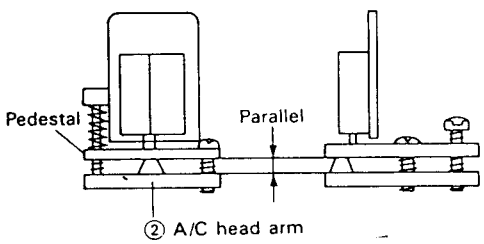

(b)

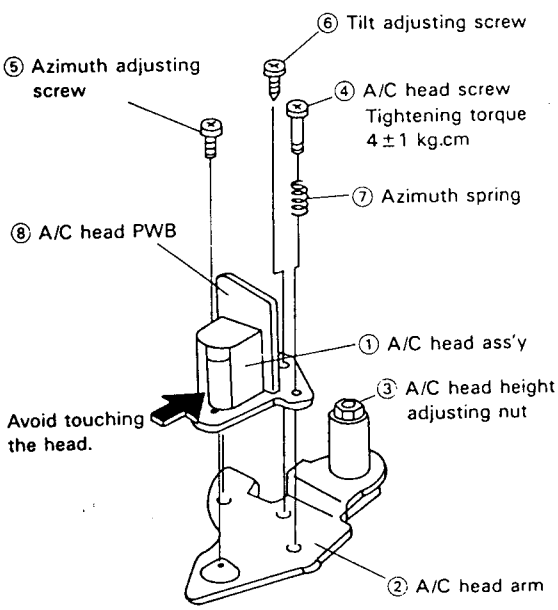
⑥ Tilt adjusting screw
⑤ Azimuth adjusting screw
④ A/C head screw Tightening torque 4 ± 1 kg.cm
⑦ Azimuth spring
⑧ A/C head PWB
① A/C head ass'y
③ A/C head height adjusting nut
Avoid touching the head.
② A/C head arm

(c)

Figure 1-20.

6. Set the A/C head tilt angle according to Fig. 1-22.
7. Play an alignment tape and roughly adjust the height of the A/C head, visually, by turning the A/C head adjusting hexagon nut ③ with the box driver (JiGDRiVER110-7) until the tape comes to the position shown below. (See Fig. 1-19.)
8. Set the mechanism to the loading mode. Place the A/C head tilt adjusting jig on the main chassis as shown in Fig. 1-21. Slowly turn the tilt abjusting screw ⑥ with a Phillips screwdriver until there is no gap between the jig and the A/C head.

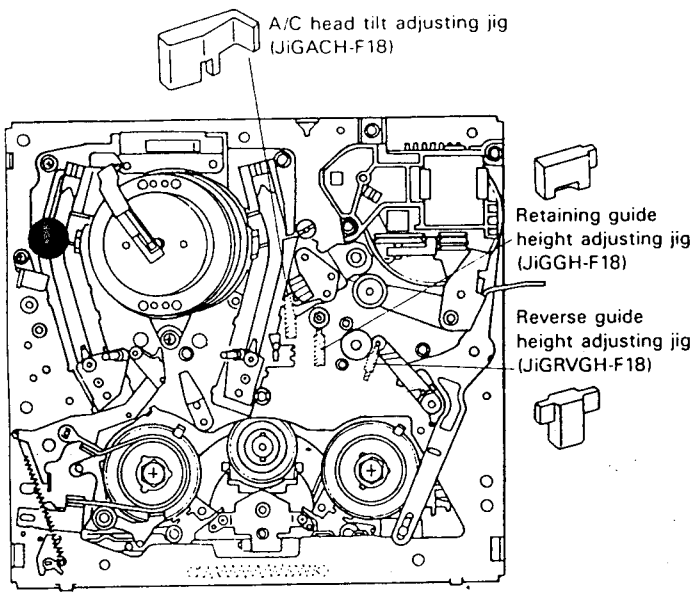

Figure 1-21.

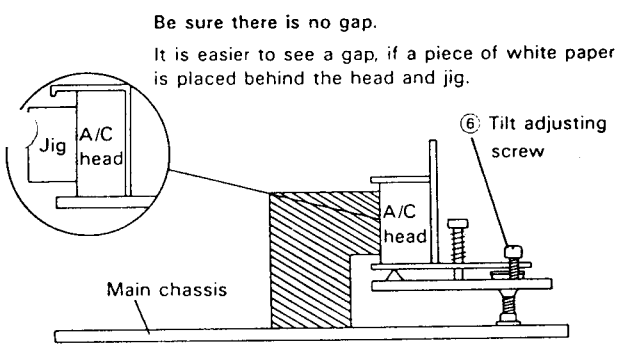
Be sure there is no gap.
It is easier to see a gap, if a piece of white paper is placed behind the head and jig.
Jig
A/C head
⑥ Tilt adjusting screw
A/C head
Main chassis

Figure 1-22.

HEIGHT ADJUSTMENT OF RETAINING GUIDE AND REVERSE GUIDE

- **Adjustment**

1. Before the rough adjustment of tape drive train, check that the retaining guide and reverse guide heights are within the specified values of Fig. 1-23, by using the special jigs.
2. If the retaining guide height is not correct,adjust the height with the box driver (JiGDRiVER110-4).
3. If the reverse guide height is not correct, use the height adjusting washers.

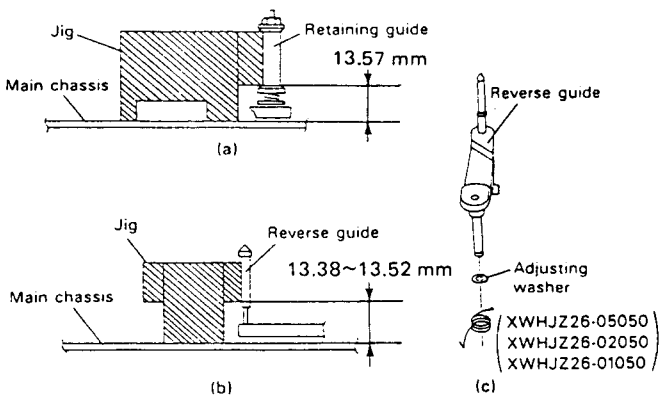

Figure 1-23.

ADJUSTMENT OF TAPE DRIVE TRAIN

1. Check and adjust the position of the tension pole and the back tension.(See pages 15)
2. Set the tilt angle of the A/C head as shown in Fig. 1-22.
   Note:
   If the A/C head is adjusted, check and set the tilt angle as in the case of replacement.
3. When the above adjustments have been completed, roughly adjust the tape drive train using an alignment tape.
   a. Connect the oscilloscope to the test points for PB chroma output (TP501) and head switching pulse (TP502). Allow the PB CHROMA signal to be triggered by the head switching pulse of TP502.
   b. Loosen the setscrew of the guide roller, and tighten it loosely by using the special bladed screwdriver (JiGDRiVERH-4) to such an extent that the guide roller turns smoothly.
   c. Set the alignment tape (VROCPSV) on the reel disk.
   Note:
   Attach a 400 to 500g.weight to the cassette tape when a cassette tape is placed on the reel disk with the cassette housing assembly removed.

d. Place the unit to the playback mode.
e. Observe the waveform of the PB chroma, and push the (+)or(-) tracking button to check for a flat PB chroma. This adjustment is satisfactory if a flat response is obtained on the waveform of the PB chroma when the (+)or(-) tracking button is pushed. If a flat response cannot be obtained roughly adjust the guide roller using the special bladed screwdriver until the PB chroma output is flat.
While keeping the both(+)and(-) tracking buttons down, adjust the X-position adjusting nut so that the PB CHROMA envelope becomes almost maximum. In the case of rough adjustment, pay particular attention to the outlet side (see Fig. 1-24).
f. Adjust the retaining guide height so that the lower flange of the retaining guide touches the bottom edge of the tape. At that time, check that the tape is not curled nor wrinkled.

4. The A/C head height and azimuth are adjusted after rough adjustment of the tape drive train has been done.
a. Use the alignment tape and play back its audio 7kHz signal (monoscope pattern for video signal)and observe the audio output on an oscilloscope.
b. Adjust the azimuth adjusting screw so as to obtain the maximum audio output.
c. Use the alignment tape and play back its audio 1kHz signal (colour bar for video signal) and slowly rotate the A/C head height adjusting nut with the special box driver so as to obtain the maximum audio output.
d. After the height adjustment, use the alignment tape and play back its audio 7kHz signal (monoscope pattern for video signal) again and adjust the azimuth adjusting screw so as to obtain the maximun audio output.
After this adjustment, apply glyptal to the screws and nuts to fix them.

5. The final adjustments of tape drive train and X-position are adjusted after adjustment of the A/C head has been completed.
a. Connect the oscilloscope to the test points for PB chroma output (TP501) and head switching pulse (TP502). Allow the PB CHROMA signal to be triggered by the head switching pulse of TP502.
b. Play back the tape drive train alignment tape (VROCPSV).
c. Finely adjust the guide rolle's height, observing the envelope on the oscilloscope.
Push the (+) or (-) tracking button while adjusting the guide roller, in order to obtain an envelope waveform which is as flat as possible. If the tape is above or below the helical lead, the PB chroma waveform will take the shape shown in Fig. 1-26.
Adjust for maximum flatness of the envelope according to the figure.
Note:
Adjustment is made for CH-1 of switching pulse (low level). The broken lines indicate the envelope waveform when the tape does not run properly.
Push the (+) or (-) tracking button to check the envelope waveform.
After adjustment, tighten the setscrew of the guide roller firmly.
Play back the alignment tape (VROCPSV) again in the unloading mode, and make sure that there is on change in the PB chroma output.

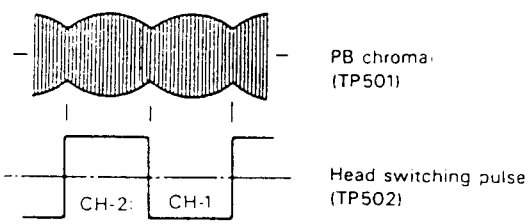

Figure 1-24.

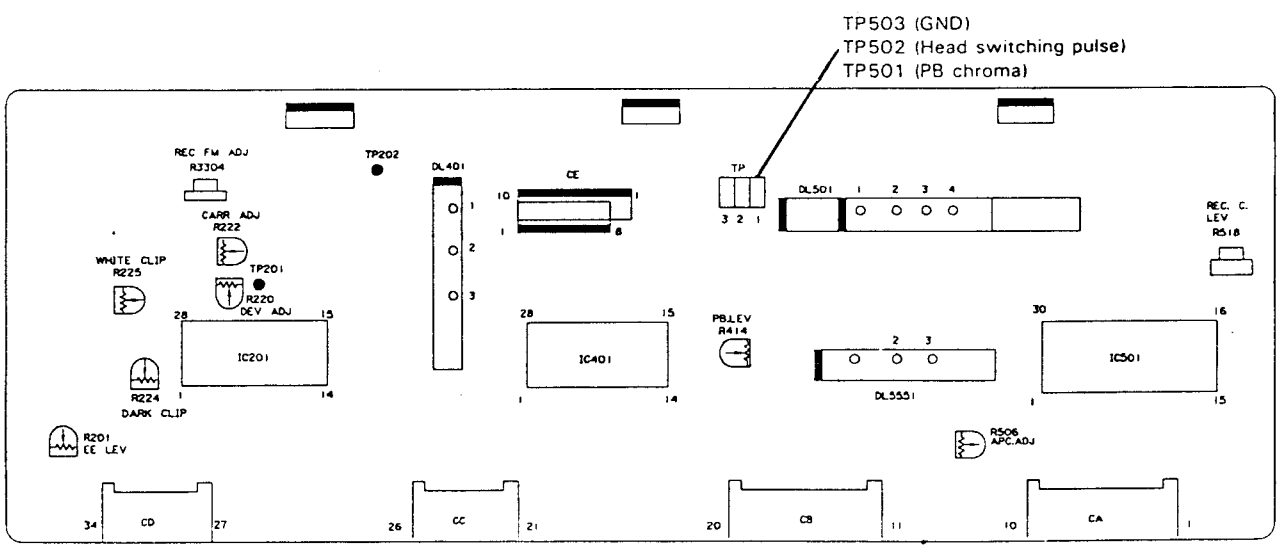

Figure 1-25.

	When the tape is above the helical lead.		When the tape is below the helical lead.	
	Supply side	Take-up side	Supply side	Take-up side
				
	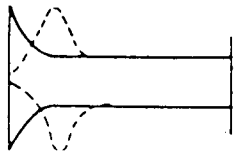	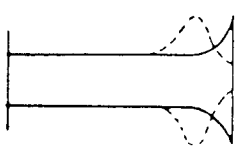	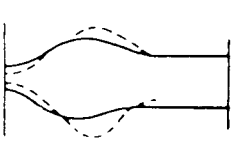	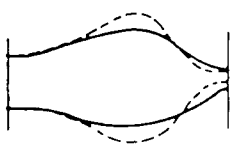
Adjustment	Supply side guide roller rotated in clockwise direction (lowers guide roller) to flatten envelope.	Take-up side guide roller rotated in clockwise direction (lowers guide roller) to flatten envelope.	Supply side guide roller rotated in counterclockwise direction (raises guide roller) to have the tape float above the helical lead. The supply side guide roller is then rotated in the clockwise direction to flatten the envelope.	Take-up side guide roller rotated in counterclockwise direction (raises guide roller) to have the tape float above the helical lead. The take-up side guide roller is then rotated in the clockwise direction to flatten the envelope.

Figure 1-26.

d. Adjust the etaining guide height so that the lower flange of the retaining guide touches the bottom edge of the tape. At that time, check that the tape is not curled nor wrinkled.
e. The X-position is adjusted after tape drive train adjustment.
Push the (+) and (-) tracking buttons at the same time to set the tracking buttons to the preset mode, and rotate the X-position adjusting nut shown in Fig. 1-27 with the special bladed screwdriver for maximum switching pulse low side envelope, and then adjust the A/C head position. Now adjust the play back switching point to 6.5 ±0.5H.
Check the flatness of envelope and sound by selfrecording.

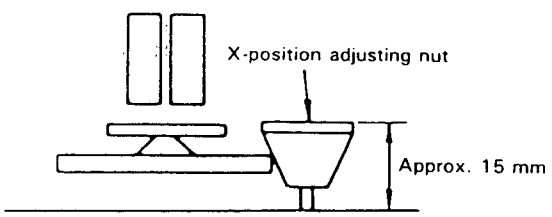

Figure 1-27.

REPLACEMENT OF UPPER DRUM

Note:
The engagement between the lower drum (outer diameter) and the upper drum(inner diameter) is very accurate, in the order of microns, and care should be paid to their replacement. Even a slight entry of foreign material will affect the accuracy of their reassembly.

- **Replacement (See Fig. 1-28)**

1. Unsolder the leads ① to ④ from the video head and remove them.
2. Remove the two screws ⑤ (brass screws with washers) using a Phillips screwdriver.

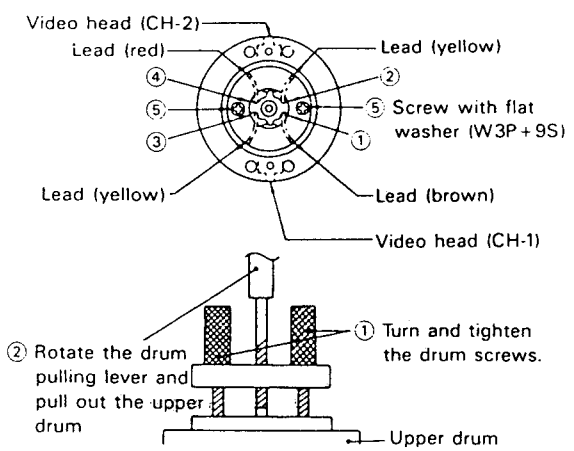

Figure 1-28.

RTV SERVIS
ST. STJEPAN ČIŽMAR

3. Withdraw the upper drum by pulling it up with the upper drum replacement jig.

Notes:
1. Avoid touching the drum surface with bare hands.
2. Do not hit the screws when tightening them.

- Reassembly

1. Set a new drum for replacement, as shown in Fig. 1-28, and position the leads properly.

Notes:
1. Before replacing the upper drum, check that there are no scratches or dust on the edge or the outer surface of the lower drum.
2. Before replacing the upper drum, check that there are no scratches or dust on the edge or the inner surface of the upper drum.
3. On assembling these parts, slowly insert the upper drum onto the lower drum with the upmost care, so that the upper drum is not tilted.
4. When assembling these parts, do not allow foreign material to come between them.
5. Do not use excessive force when driving in the screws.

2. Fasten the upper drum in place with the two screws ⑤
3. Solder the leads ① to ④ at their respective pads.
   Note:
   Soldering should be performed quickly and carefully without touching adjacent patterns.
4. After replacement, be sure to check the tape drive train adjustment and the following.
   - Adjustment of the playback switching point (See page 26).
   - Checking and adjustment of the X-position (See page 27).
   - Adjustment of SP slow tracking preset (See page 26).

REPLACEMENT OF D.D. (DIRECT DRIVE) MOTOR

Note:
Put the unit in the cassette eject position.

- Removal

1. Remove the six screws from the bottom panel and remove the bottom panel.
2. Disconnect the drum D.D. motor lead connector.
3. Remove the two screws① which hold the D.D. rotor assembly in place, using a Phillips screwdriver.
4. Remove the D.D. rotor assembly.
5. Remove the three screws ② which hold the D.D. stator assembly in place, using a Phillips screwdriver.
6. Remove the D.D. stator assembly.

- Reassembly

1. Place the D.D. stator assembly on top of the lower drum.
2. Secure the D.D. stator with the three screws ② using a Phillips screwdriver.

   Note:
   Be careful not to scratch the core, windings or Hall device.
3. Install the D.D. rotor assembly onto the drum shaft.

   Note:
   Install the assembly directly onto the direction of the shaft. (Refer to Fig. 1-29 for the installation direction.)
4. Secure the D.D. rotor assembly with the screws ①.
5. Connect the drum D.D. motor lead connector.
6. Install the bottom panel with six screws.

   Note:
   Be careful not to damage the upper drum or the video head.
7. After replacement of the D.D. motor as shown above, proceed with the adjustment of the playback switching point.

   Notes:
   1. Be careful not to damage the upper drum or the video head.
   2. Be sure that the Hall device and the D.D. stator assembly are not damaged by the D.D. rotor assembly or other parts.

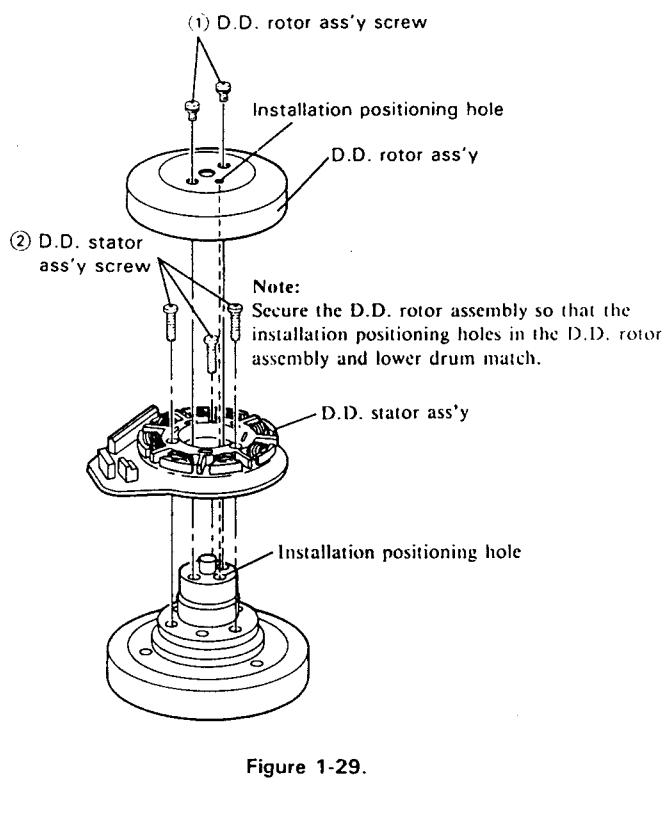
① D.D. rotor ass'y screw
Installation positioning hole
D.D. rotor ass'y
② D.D. stator ass'y screw
Note:
Secure the D.D. rotor assembly so that the installation positioning holes in the D.D. rotor assembly and lower drum match.
D.D. stator ass'y
Installation positioning hole

Figure 1-29.

REPLACEMENT OF THE CAPSTAN D.D. (DIRECT DRIVE) MOTOR

- Removal

1. Remove the FFC ① from the capstan D.D. motor control PWB ②.
2. Remove the three screws ③, and remove the capstan D.D. motor ④ from the main chassis.

- Reassembly

1. Mount the capstan motor on the main chassis while making sure not to allow the capstan shaft to hit the main chassis, and attach it with the three screws ③.
2. Insert the FFC ① into the capstan D.D. motor control PWB ②.

Notes:

1. After installing the capstan D.D. motor, be sure to rotate the capstan motor and check the movement.
2. Check and adjust the servo circuit.

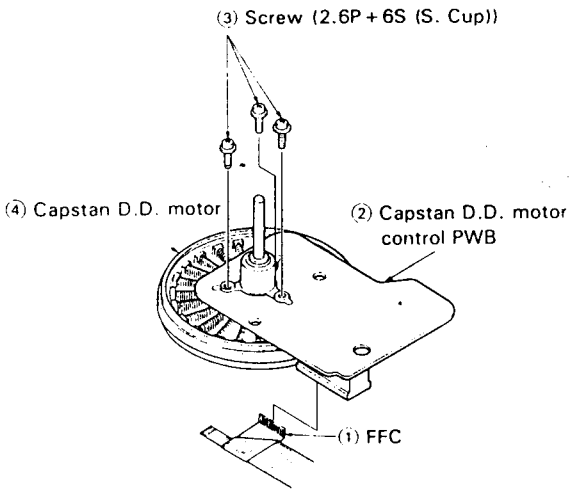

Figure 1-30.

REMOVAL AND REASSEMBLY OF THE LOADING GEAR BLOCK

- Removal

1. Remove the slow brake spring ① and slow brake lever ②.
2. Take out the E ring Ⓐ first and then the loading relay gear ③.
3. Rotate the take-up loading gear ④, take-up loading arm assembly ⑤, supply loading gear ⑥ and supply loading arm assembly ⑦ slightly in the loading direction, and take them all out.
4. Finally remove the E ring Ⓑ and relay gear drive lever ⑧.

- Reassembly

1. Take the reverse steps of the removal.
2. In reassembling, match the tally marks on the gears, as shown in Fig. 1-31

Note:

1. When reassembling, apply grease to the following points; all the gear teeth, all the gear shafts, and the cam groove of loading relay gear which the relay gear drive lever pin comes in.
2. Be careful not to deform the supply/take-up loading arms.
3. Be careful not to stain the felt of the slow brake.
4. Be also careful to keep the outer surface of the capstan D.D. motor ⑨ free from dust and dirt. (If stained, the MR (Magnet Resistor) element ⑩ might be damaged.)
5. Reshape the anti-fall hooks of the slow brake, supply/take-up loading gears as required. Avoid reshaping too much.

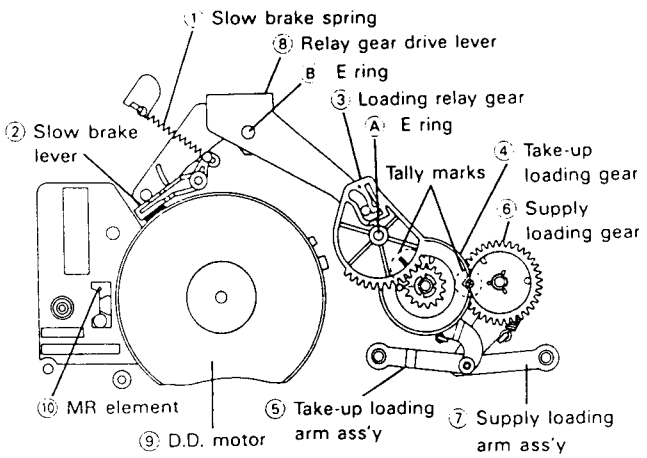

Figure 1-31.

REMOVAL AND REASSEMBLY OF LOADING BLOCK

- Removal

1. Remove the leads and the cassette loading belt from the loading block.
2. Unscrew the three screws ③, and pull up and remove the loading block.

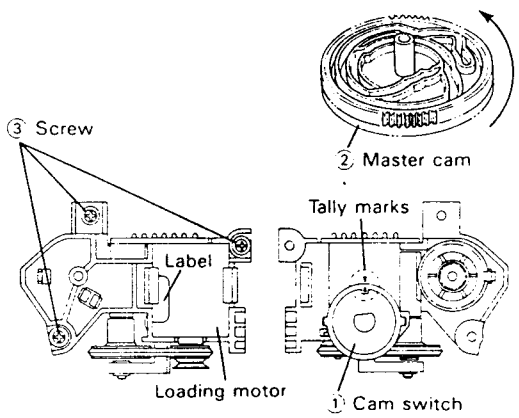

Figure 1-32.

- Reassembly

1. Turn the master cam ② all the way counter-clockwise.
2. Match the tally mark on the cam switch ① with the mating mark. Fit the loading block and the master cam with each other. Tighten up the three screws.
3. Finally connect the leads and apply the cassette loading belt.

Notes:
1. Be careful not to scratch the gear.
2. Be careful not to stain the belt. If dirty, clean it up.

REPLACEMENT OF LOADING MOTOR

- Removal

1. Remove the loading block.
2. Undo the loading belt.
3. Unsolder the leads from the loading motor ①.
4. Unlock the left and right catches of the cam switch ② off the loading block. Take out the loading block PWB ③.

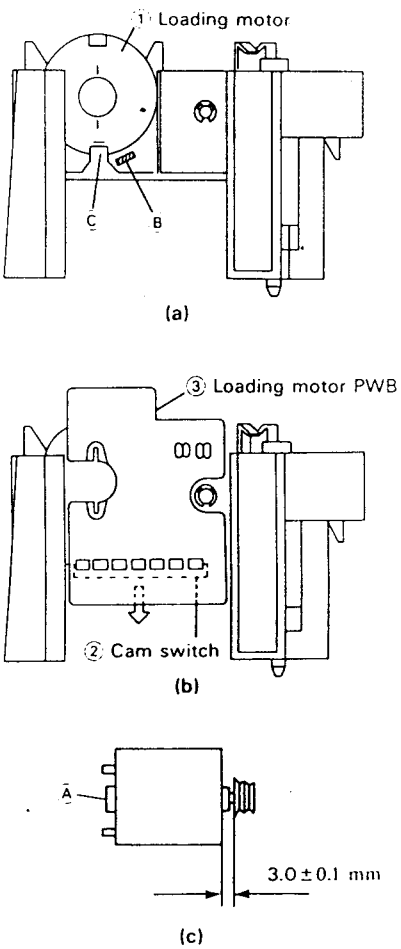

Note:
1. Press-fit the loading motor pulley to the dimension specified in Fig. 1-33(c).
2. Keep the pressure on the part Ⓐ (see above) less than 5 kg.

Figure 1-33.

5. Put the tip of a bladed screwdriver or the like into the opening Ⓑ shown in Fig. 1-33 (a). Pry up the back end of the loading motor ① and take out the motor.

- Reassembly

1. Place the loading motor so that its label is visible as ahown in Fig. 1-32.
   Note:
   Make sure that the screw hole at the motor shaft and the protuberance on the loading block are properly engaged and that the notch at the loading motor end and the part Ⓒ of the loading block are also fitted together.
2. Set up the loading block PWB ③ and the cam switch ② in position.
3. Resolder the leads to the loading motor.
4. Finally place the loading block in position.

REPLACEMENT OF MASTER CAM

- Removal

1. Remove the loading block.
2. Remove the E ring Ⓐ and then the half-loading reciprocating lever ①.
   Note:
   There is no need to take out the half-loading drive lever.
3. Remove the E ring Ⓑ first and then the pinch roller lever ②.
4. Finally pull out the master cam ③ upward.

- Reassembly

1. Place the relay gear drive lever in the unloading state as shown in Fig. 1-31.
2. Set the relay shifter lever ④ to the main chassis; the shifter lever should be adjusted to the reverse guide spring hole in the main chassis. Then place the master cam so that the cut-off part of the boss Ⓒ should face the direction of arrow ⇒ Ⓔ.
3. Place the half-loading reciprocating lever ① so that its cam follower comes in the outermost cam groove. Now attach the E ring Ⓐ.
   Note:
   Preferably hook the half-loading reciprocating spring ⑤ before attaching the lever. It is easier to set up.
4. Turn the master cam ③ somewhat clockwise until the pinch roller lever's cam follower comes into the master cam's groove Ⓓ. Then attach the E ring Ⓑ.
5. Rotate the master cam ③ by hand to make sure all the four levers (relay gear drive lever, relay shifter lever, half-loading reciprocating lever and pinch roller lever) are right in the cam grooves.
6. Finally set up the loading block.

Notes:

1. Be careful not to scratch the teeth and grooves of the master cam.
2. Before placing the loading block, be sure to rotate the master cam by hand to make sure the levers are right in their respective positions. Otherwise the master cam and the levers might get damaged when the motor starts.
3. Apply grease to the master cam's grooves and teeth.

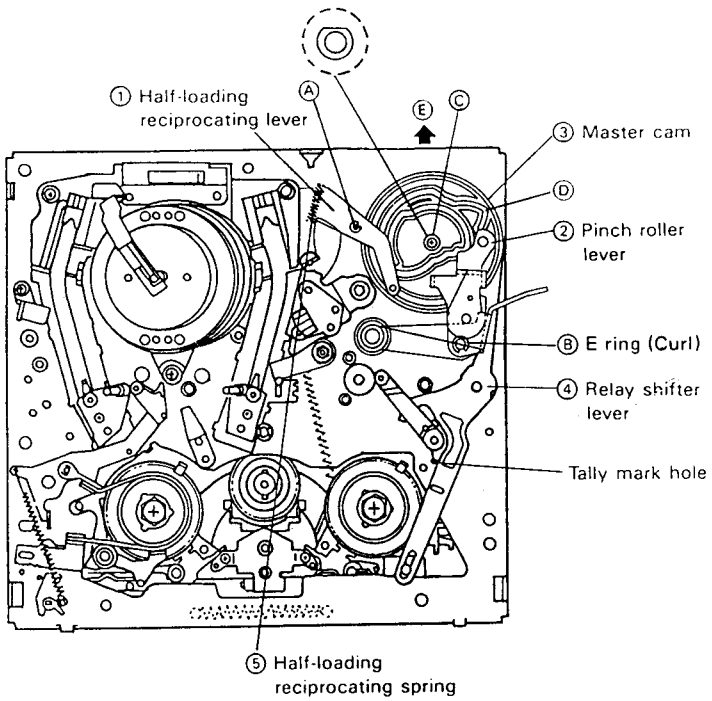

Figure 1-34.

ADJUSTMENT OF ELECTRICAL CIRCUITRY

Prior to the adjustment:
In most cases, necessity for electrical circuits will arise from replacement of mechanical parts including the video head. Before starting adjustment of electrical circuits, check that mechanical operation of the equipment is complete (the mechanism are adjusted completely).

If the equipment fails electrically, locate a defect or defects first of all using instruments. Then repair or replace parts and make adjustment by the procedures described below.
When required instrumetns are not available, do not move controls indiscriminately.

- Instruments
  - Color monitor TV
  - DC regulated power supply
  - VTVM
  - Oscilloscope
  - Audio generator
  - Voltmeter
  - Color bar generator
  - Alignment tape
  - Frequency counter
  - Blank video tape(VHS)

ADJUSTMENT OF MAIN (SERVO, SYSTEM CONTROL, TUNER) CIRCUIT

- **Test points layout**

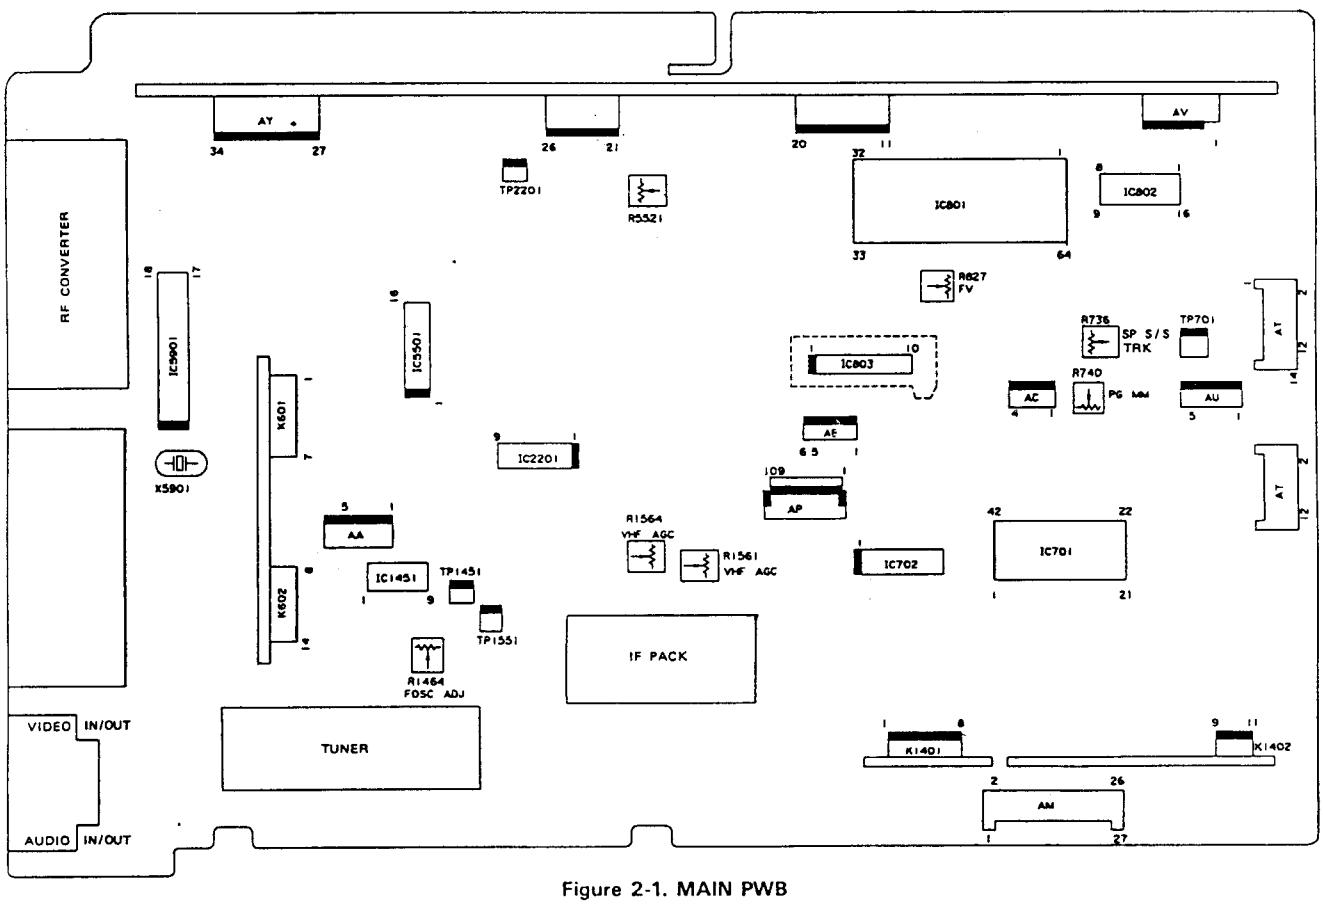

Figure 2-1. MAIN PWB

ADJUSTMENT OF SERVO CIRCUIT

Adjustment of playback switching point

Measuring instrument	Oscilloscope
Mode	Playback Tracking button at center
Tape used	Alignment tape (VROCPSV)
Test point	CH-1; TP701 CH-2; Video output terminal (CH-1 trigger slope switch at(+), Internal trigger at CH-1 side)
Adjusting point	R740(phase generator MM control)
Specification	6.5 ± 0.5H

1. Insert the alignment tape (VROCPSV) and put the unit in the playback mode.
2. Set the tracking button to the center position.
3. Adjust R740 (phase generator MM control) so that the waveform on the oscilloscope screen be as shown in Fig. 2-2.

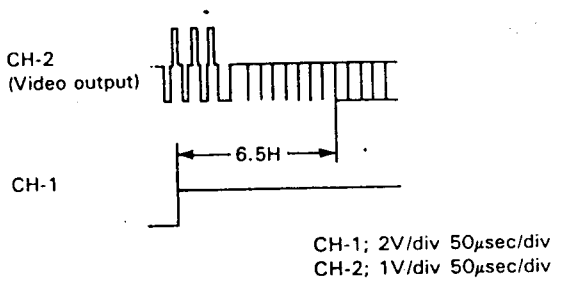

Figure 2-2.

Adjustment of SP slow tracking

Measuring instrument	Monitor TV
Mode	Record time switch at sp Position. Recording and playback on self-recording tape.
Input signal	Commercial broadcast or video signal (external input selector switch)
Test Point	Monitor screen
Adjusting point	R736 (SP slow tracking control)
Specification	No noise bar on the monitor TV screen

1. Receive a commercial broadcast signal, or feed the video signal to the video input terminal (with the external input selector switch).
2. Set the record time switch to the SP position. Make recording and playback on the self-recording tape.
3. Press the slow button and play back the recorded portion in the slow mode.
4. Set the slow tracking button to the center position.
5. Observing the monitor screen, adjust the SP slow tracking preset control (R736) until the noise bar disappears form the screen.
6. Press the playback button to play back the tape. Then push the pause/still button to reproduce the recording in the still mode. Now make sure there is no noise on the screen. (Repeat this step three times or so.)

Adjustment of still picture vertical sync

Measuring instrument	Monitor TV
Mode	Still picture playback
Tape used	Self-recording tape
Test point	Monitor screen
Adjusting point	R828 (still picture vertical sync control)
Specification	No vertical jitter

1. Play back the tape self-recorded in the SP mode.
2. Press the pause/still button to reproduce the recording in the still mode.
3. Observing the monitor screen, adjust the still picture vertical sync control (R828) until the vertical jitter disappears form the screen.

Precaution in adjusting the X-position

Measuring instrument	Oscilloscope
Mode	Playback
Tape used	Alignment tape(VROCPSV)
Test point	Pin ② of TP701 (tracking monitor output)
Adjusting point	————
Specification	T = 14.78 ± 0.46 msec.

1. Insert the alignment tape (VROCPSV) and put the unit in the palyback mode.
2. Set the tracking button to the center position.
3. Make sure that the "H" level tine (T) at pin ② of TP701 (tracking monitor output) is 14.78 ± 0.46 msec. Now go to the X-position adjustment.

Tracking monitor output (TP701)

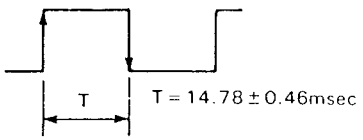

Figure 2-3.

ADJUSTMENT OF Y/C CIRCUIT

- Test point layout

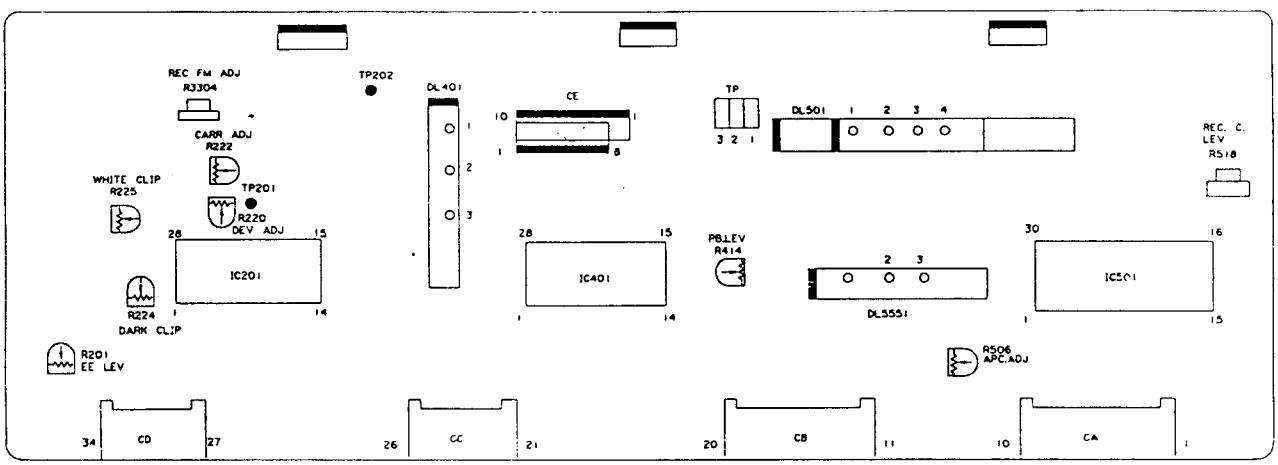

Figure 2-4. Y/C PWB

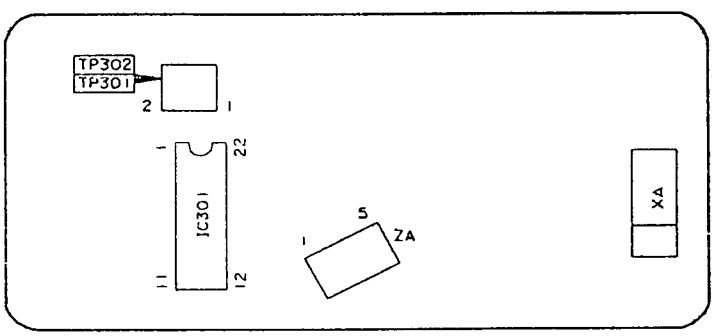

Figure 2-5.

■ ADJUSTMENT OF Y/C RECORDING CIRCUIT

Adjustment of EE level

Measuring instrument	Oscilloscope
Mode	SP recording
Input signal	Standard color bar (stair-case waveform)
Test point	Video output terminal
Adjusting point	R201 (EE level control)
Specification	1.0 ± 0.05 Vp-p

Note:
The video output terminal should be terminated with a 75-ohm impedance.

1. Set the unit to the SP record mode.
2. Feed the color bar signal(stair-case waveform)to the video input terminal. Observing the voltage across the terminal resistor of the video output terminal on the oscilloscope screen, adjust R201 (EE level control) to obtain the value indicated in Fig. 2-6.

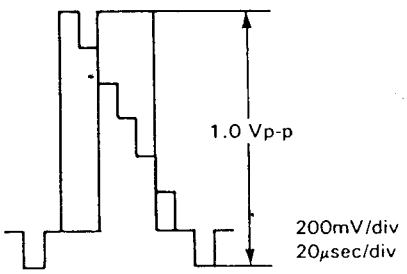

Figure 2-6.

Ajustment of FM 3.8 MHz and 4.8 MHz

Measuring instrument	Frequency counter	Oscilloscope
Mode	Recording	Self-recording / playback
Input signal	External input (no signal)	Standard color bar (stair-case waveform)
Test point	Pin(28) of IC201	Video signal
Adjusting point	R222 (FM carrier control)	R220 (deviation control)
Specification	3.8 MHz	1.0 ± 0.05 Vp-p

Note. 1:
Carry out this adjustment only when IC201 has been replaced or when the carrier setting (3.8 MHz) or the deviation (4.8 MHz) is found apparently out of specification.

Make this adjusment after the EE level has been completely adjusted.

Note. 2:
The video output teminal should be terminated with a 75-ohm impedance.

1. First make sure that the EE level playback video signal is at the speciffied level.
2. Place the unit in the record mode and get it ready for external input.
   Note:
   Do not connect anything to the external input terminal.
3. Hook up the frequency counter to pin 28 of IC201. Adjust R222 (FM carrier control) so that the counter reading be 3.8 MHz.
   Note:
   Make sure the white and dark clip controls are not now applied to the waveform.
4. Feed the color bar signal (stair-case waveform) and make self-recording and playback.
5. Observe the video output terminal voltage (across the terminal resistor) on the oscilloscope screen. If the playback video signal level is below 1.0 Vp-p, turn R220 (deviation control) clockwise. If above 1.0 Vp-p, turn the control counterclo-ckwise. Now make self-recording and playback again.
6. Repeat the above step 5 to finally get the playback video signal level at 1.0 ± 0.05 Vp-p, as shown in Fig. 2-6.

Adjustment of white clip

Measuring instrument	Oscilloscope
Mode	Recording
Input signal	Standard color bar (stair-case waveform)
Test point	TP201
Adjusting point	R225 (white clip control)
Specification	$80\ ^{+\ 0}_{-\ 4}$ %

1. Place the unit to the record mode.
2. Feed the color bar (stair-case waveform) signal.
3. Observing the output at TP201, adjust R225 (white clip control) so that the white peak overshoot be 80%(tolerance: + 0%, - 4%)

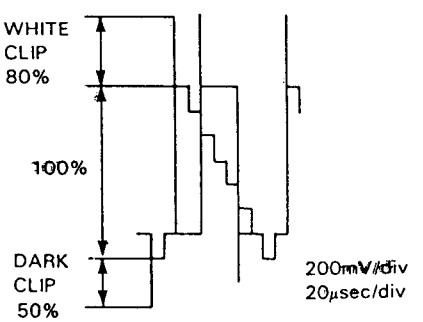

Figure 2-7.

Adjustment of dark clip

Measuring instrument	Oscilloscope
Mode	Recording
Input signal	Standard color bar (stair-case waveform)
Test point	TP201
Adjusting point	R224 (dark clip control)
Specification	50 ± 4%

1. Place the unit to the recording mode.
2. Feed the color bar (stair-case waveform) signal.
3. Observing the output at TP201, adjust R224 (dark clip control) so that the dark peak overshoot be 50 ± 4% . (See fig. 2-7.)

Adjustment of recording current

Measuring instrument	Oscilloscope	
Mode	Recording	
Input signal	Standard color bar (stair-case waveform)	
Test point	TP301 (GND at TP302) External trigger (video output terminal)	
Adjusting point	R3304 (recording FM control)	R518 (recording chroma control)
Specification	Sync tip level 140 ± 10mVp-p	Red level 24 ± 1mVp-p

Note:
TP301 and TP302 are located on the head amp PWB.

1. Place the unit to the record mode.
2. Feed the color bar (stair-case waveform) signal.
3. Observing the waveform on the oscilloscope screen (external trigger at video output terminal), take the following steps.
   a) Connect the oscilloscope's GND and SIG leads to TP302 and TP301, respectively.
   b) Turn R3304 (recording FM control) to minimum.
   c) Ajust R518 (recording chroma control) to that the red level be 24 ± 1mVp-p as shown in Fig.2-8.
4. Adjust R3304 (recording FM control) so that the sync tip be 140 ± 10%mVp-p as shown in Fig.2-9.

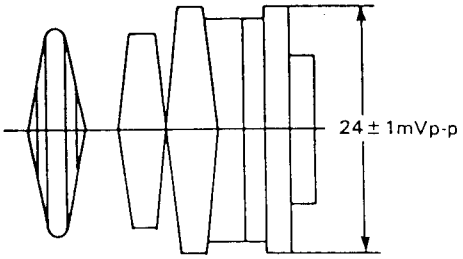

Figure 2-8.

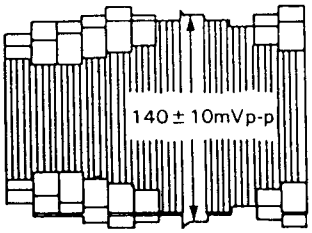

Figure 2-9.

■ ADJUSTMENT OF Y/C PLAYBACK CIRCUIT

Adjustment of playback video signal level

Measuring instrument	Oscilloscope
Mode	Playback
Tape used	Alignment tape (stair-case waveform)
Test point	TP201
Adjusting point	R414 (playback level control)
Specification	1.0 ± 0.05Vp-p

Note:
The video output terminal should terminated with a 75-ohm impedance.

1. Insert the alignment tape (stair-case waveform) and place the unit to the playback mode.
2. Hook up the oscilloscope to the video output terminal. Adjust R414 (playback level control) so that the on-screen waveform be 1.0 ± 0.05Vp-p.

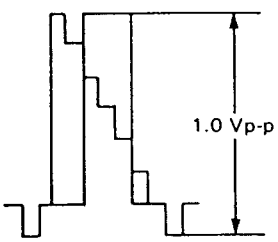

Figure 2-10.

Adjustment of APC

Measuring instrument	Frequency counter
Mode	Playback
Tape used	Alignment tape (VROCPSV)
Test point	Pin ⑦ of CA connector
Adjusting point	R506
Specification	4.433619MHz ± 50Hz

1. Insert the alignment tape (VROCPSV) and place the unit to the playback mode.
2. Connect the frequency counter to pin ⑦ of CA connector. Adjust R506 (APC control) so that the counter reading be 4.433619MHz ± 50Hz.

ADJUSTMENT OF AUDIO CIRCUIT

Test point layout

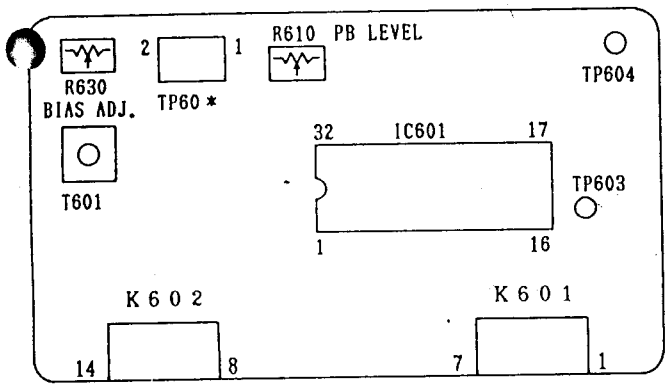

Figure 2-11. AUDIO PWB

Checking of erase voltage and oscillation frequency

Measuring instrument	Oscilloscope
Mode	Recording
Input signal	———
Test point	Both ends of the full-erase head
Adjusting point	———
Specification	Erase voltage; Over 40 Vp-p Oscillation frequency; 70 ± 7kHz

1. Place the unit to the record mode.
2. Hook up the oscilloscope to both ends of the full-erase head.
3. Make sure the erase voltage is over 40 Vp-p.
4. Be sure that the oscillation frequency is 70 ± 7kHz.

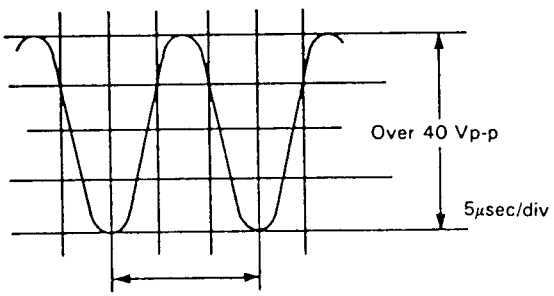

63 kHz to 77 kHz about three divisions

Figure 2-12.

Adjustment of playback level

Measuring instrument	VTVM
Mode	Playback
Input signal	Alignment tape (VROCPSV) (1-kHz level control signal)
Test point	Audio output terminal
Adjusting point	R610 (playback level control)
Specification	-9 ± 0.5dBm

1. Play back the alignmenr tape (1-kHz level control signal).
2. Hook up the VTVM to the audio output terminal.
3. Adjust R610 (playback level control) so that the output level be -9 ± 0.5dBm.

Adjustment of bias current

Measuring instrument	VTVM
Mode	Recording
Input signal	———
Test point	TP601 (SIG), TP602 (GND)
Adjusting point	R630 (bias current control)
Specification	260 ± 10 μA

1. Place the unit to the record mode.
2. Connect the VTVM to TP601 (SIG) and TP602 (GND).
3. Adjust R630 (bias current control) so that the bias current be 260 ± 10 μA (2.6 ± 0.1mV).

Checking of recording level

Measuring instrument	VTVM
Mode	Self-recording /playback
Input sigual	1 kHz / -8 dBm
Test point	Audio output terminal
Adjiusting point	————
Specification	-5 ± 3 dBm

1. Feed 1kHz, -8 dBm signal to the audio input terminal. Make self-recording and playback of the signal.
2. Make sure the output at the audio output terminal is -5 ± 3 dBm.
3. If out of spec, readjust the playback level and the bias current.

ADJUSTMENT OF IF CIRCUIT

Adjustment of RF AGC

Measuring instrument	Oscilloscope
Mode	————
Input signal	Color bar signal
Test point	Video output terminal
Adjusting point	VR001 (RF AGC)
Specification	————

1. Receive the color bar signal (input field strength: 80 dBμ).
2. Observe the video output terminal waveform on the oscilloscope. Adjust VR001 (RF AGC) in the IF pack until the noise disappers from the oscilloscope screen and the wavefrom nearly comes into sync.

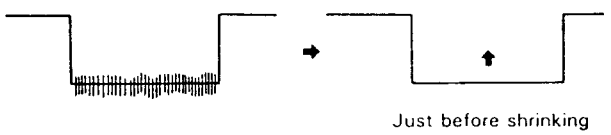

Just before shrinking

Figure 2-13.

Adjustment of AFT

Measuring instrument	Oscilloscope Signal generator
Mode	————
Input signal	PIF frequency uniwave VR6448/57 : 39.5 MHz. VR6448/67 : 38.9 MHz. Colour bar signal (70dBμ)
Test point	Video output terminal
Adjusting point	T002 (AFT coil)
Specification	————

1. Receive the color bar signal (input field strength: 70 dB μ).
2. First set the BAND SELECTOR switch to VHF or UHF position.
   Using the signal generator, feed the PIF frequency signal (sine wave) to the tuner IF output terminal. Use the (–) and (+) keys so that the video output terminal waveform be minimum.
3. Set the band selector switch NORMAL position.
4. Using the signal generator, feed the PIF frequency signal (sine wave) to the tuner IF output terminal. (Adjust the attenuator to attenuate the input signal down to an appropriate level).
5. Adjust T002 (AFT coil) in the IF pack so that the video output terminal waveform be minimum.

WAVE FORMS

SYSTEM CONTROL, SERVO, IF PWBs

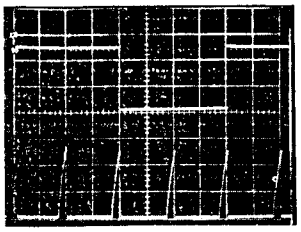

TP701 (1) pin
Head switching pulse
2V/Division
5msec/Division

IC701 (29) pin
Drum pulse generator
1V/Division
5msec/Division

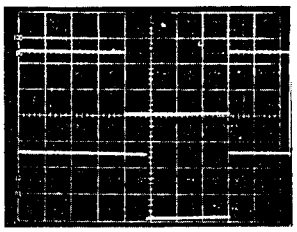

TP701 (1) pin
Head switching pulse
2V/Division
5msec/Division

TP701 (2) pin
Tracking MM pulse
2V/Division
5msec/Division
– Record mode –

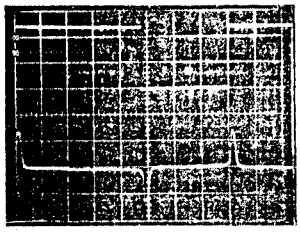

TP701 (3) pin
Playback control pulse
2V/Division
5msec/Division

IC701 (42) pin
Playback control signal
500mV/Division
5msec/Division

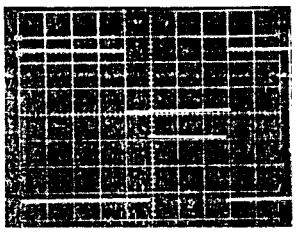

TP701 (1) pin
Head switching pulse
2V/Division
5msec/Division

TP701 (2) pin
Tracking MM pulse
2V/Division
5msec/Division
– Playback mode –

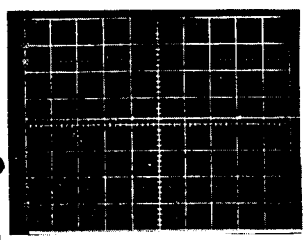

IC701 (30) pin
Horizontal sync pulse
1V/Division
5msec/Division

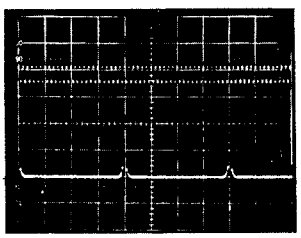

Socket AM (9) pin
Drum frequency generator signal
50mV/Division
10msec/Division

Socket AM (12) pin
Drum phase generator pulse
200mV/Division
10mV/Division

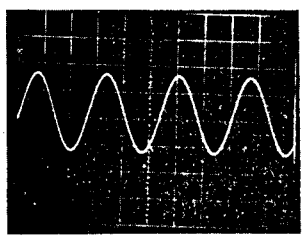

Socket AM (15) pin
Capstan frequency generator signal
500mV/Division
0.5msec/Division

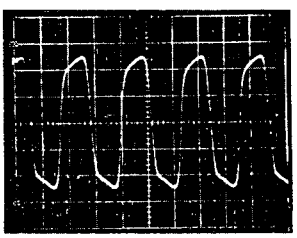

Plug AV (8) pin
4.43MHz oscillation signal
200mV/Division
0.1μsec/Division

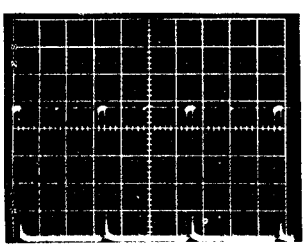

TP2201
Horizontal sync pulse
1V/Division
20μsec/Division
– Record mode –

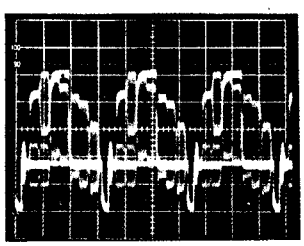

Video output terminal
(Video output is shorted with a 75 ohm resistor.)
Video signal
200mV/Division
20μsec/Division
– Playback mode –

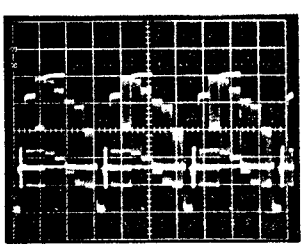

Video output terminal (E-E level)
(Video output is shorted with a 75 ohm resistor.)
Video signal
200mV/Division
20μsec/Division
– Record mode –

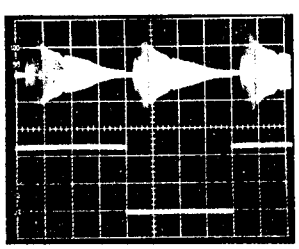

TP1
Playback preamp. signal
200mV/Division
5msec/Division

TP2
Head switching pulse
2V/Division
5msec/Division
– Playback mode –
(Sweep tape)

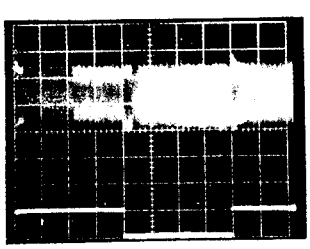

TP1
Playback preamp. signal
50mV/Division
5msec/Division

TP2
Head switching pulse
5V/Division
5msec/Division
– Playback mode –
(color bar)

Y/C, AUDIO PWB

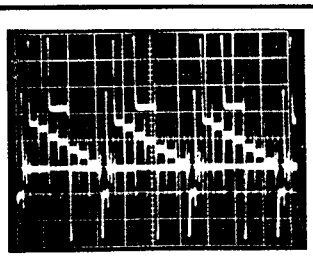

TP201
White/Dark clip signal
100mV/Division
20μsec/Division
– Record mode –

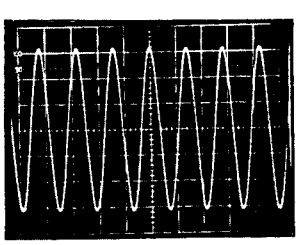

K602 (9), (11) pin
(Between audio erase head and ground)
10V/Division
10μsec/Division
– Record mode –

SCHEMATIC DIAGRAM

IMPORTANT SAFETY NOTICE:
BE SURE TO USE GENUINE PARTS FOR SECURING THE SAFETY AND RELIABILITY OF THE SET. PARTS MARKED WITH " ⚠ " AND PARTS SHADED (IN BLACK) ARE ESPECIALLY IMPORTANT FOR MAINTAINING THE SAFETY AND PROTECTING ABILITY OF THE SET.
BE SURE TO REPLACE THEM WITH PARTS OF SPECIFIED PART NUMBER.

SAFETY NOTES:

1. *DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.*
2. *SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.*

NOTES:

1. *The unit of resistance "ohm" is omitted (k = 1000 ohm, M = 1 Meg ohm).*
2. *All resistors are 1/8 watt, unless otherwise noted.*
3. *The unit of capacitance "F" is omitted (μ = μF, p = μμF).*

VOLTAGE MEASUREMENT CONDITIONS:

1. *DC voltages are measured between points indicated and chassis ground by VTVM, with AC220V/50Hz supplied to unit and all controls are set to normal viewing picture unless otherwise noted.*
2. *Voltages are measured with 10000μV B & W or colour signal.*

WAVEFORM MEASUREMENT CONDITIONS:
10000μV 87.5 percent modulated colour ber signal is fed into tuner:

CAUTION:
This circuit diagram is original one. Therefore there may be a slight difference from yours.



OVERALL WIRING DIAGRAM

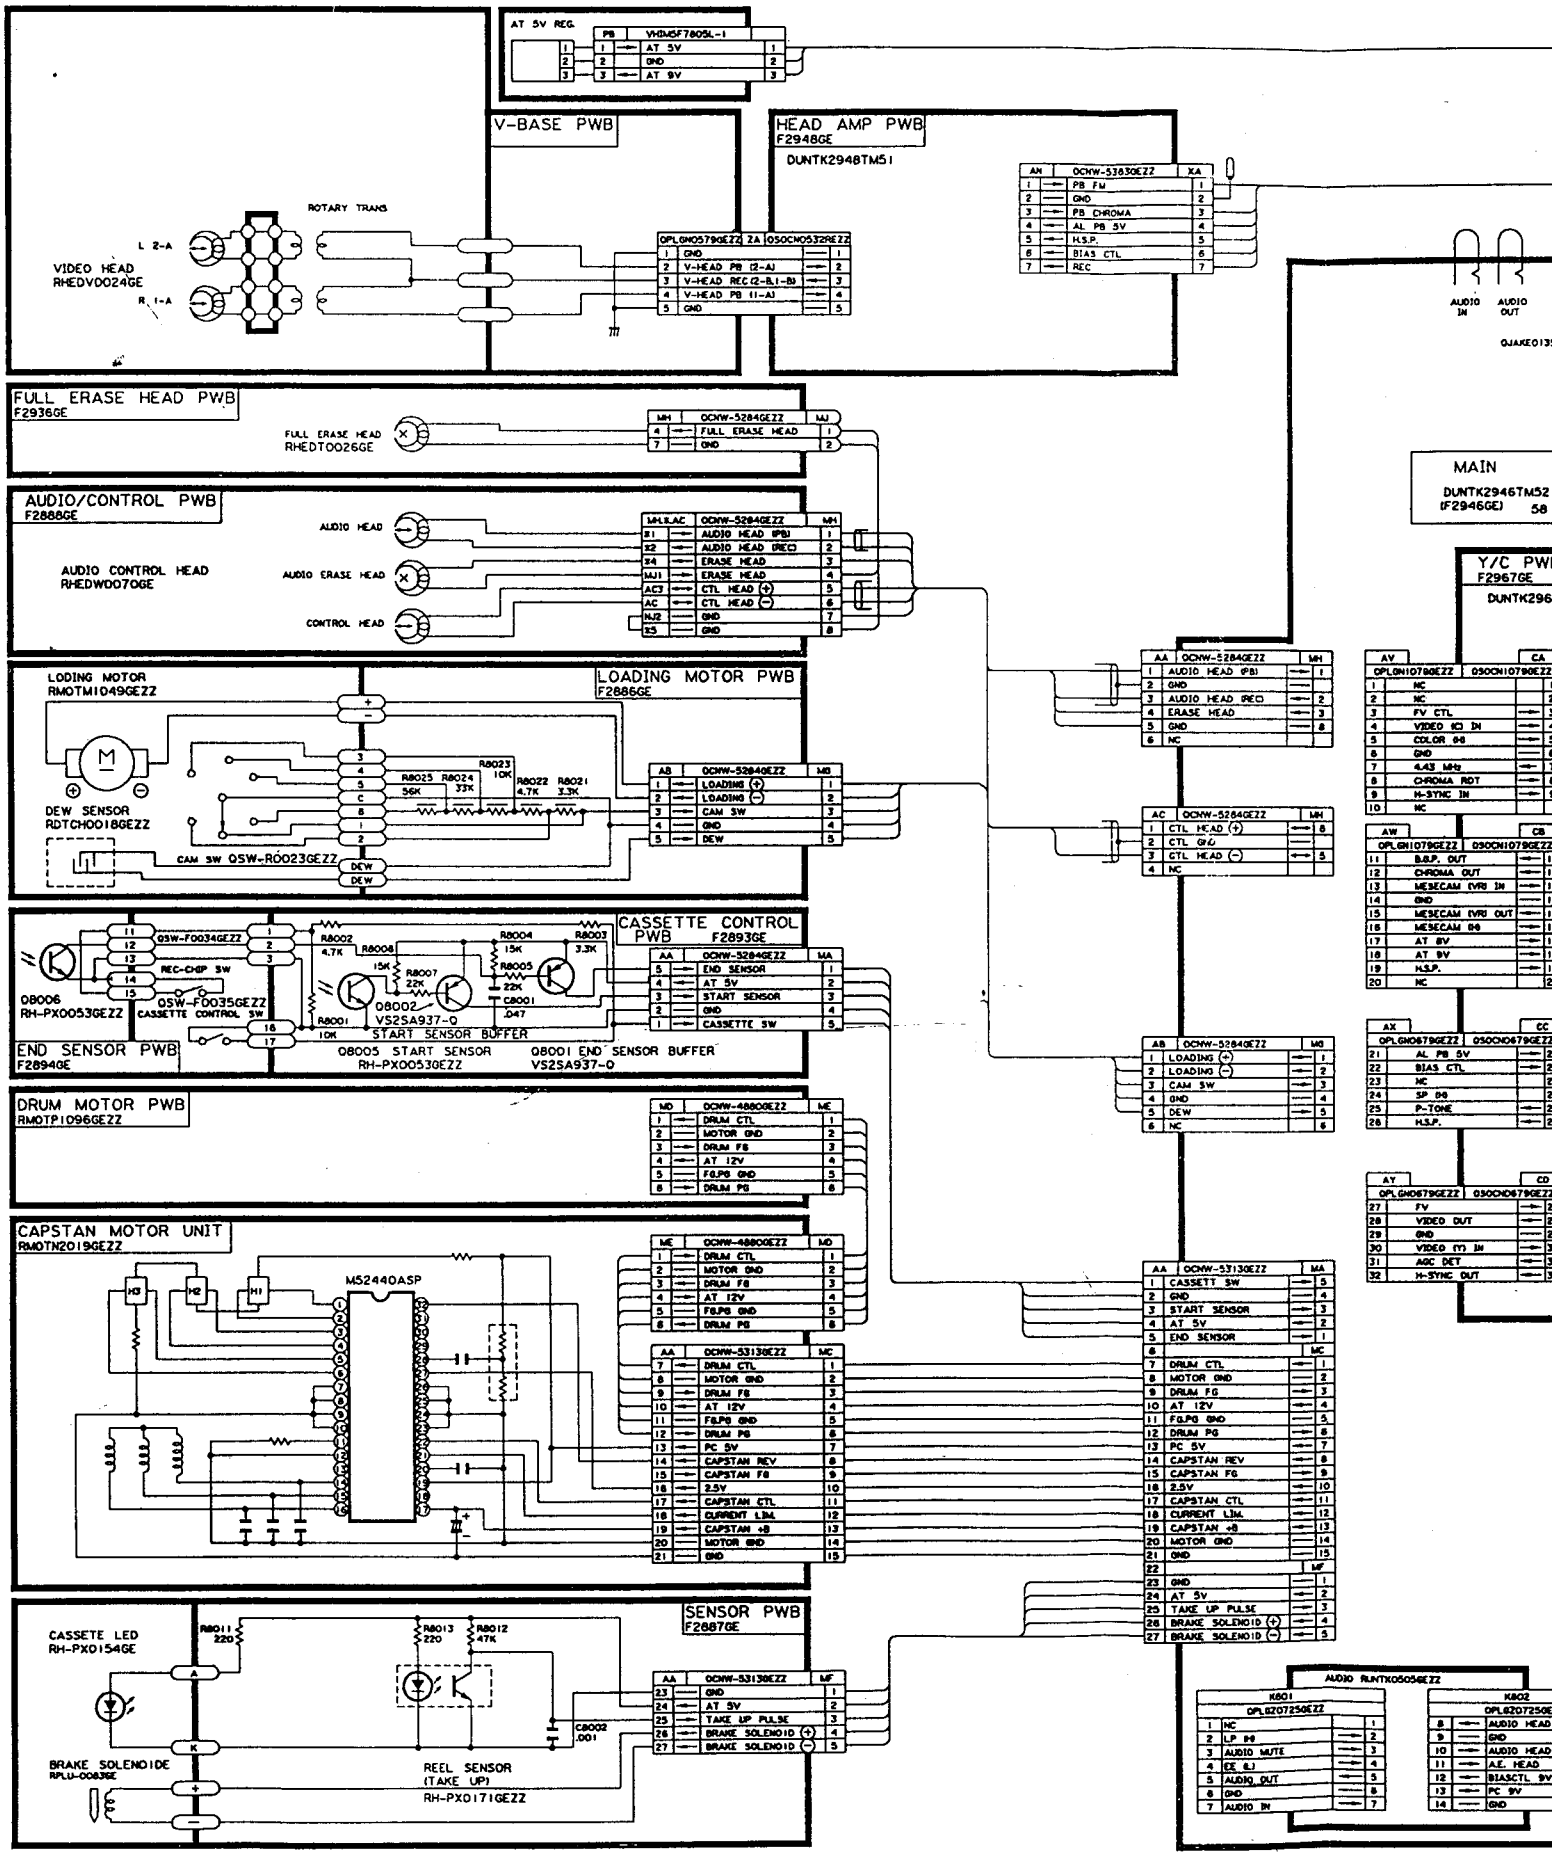

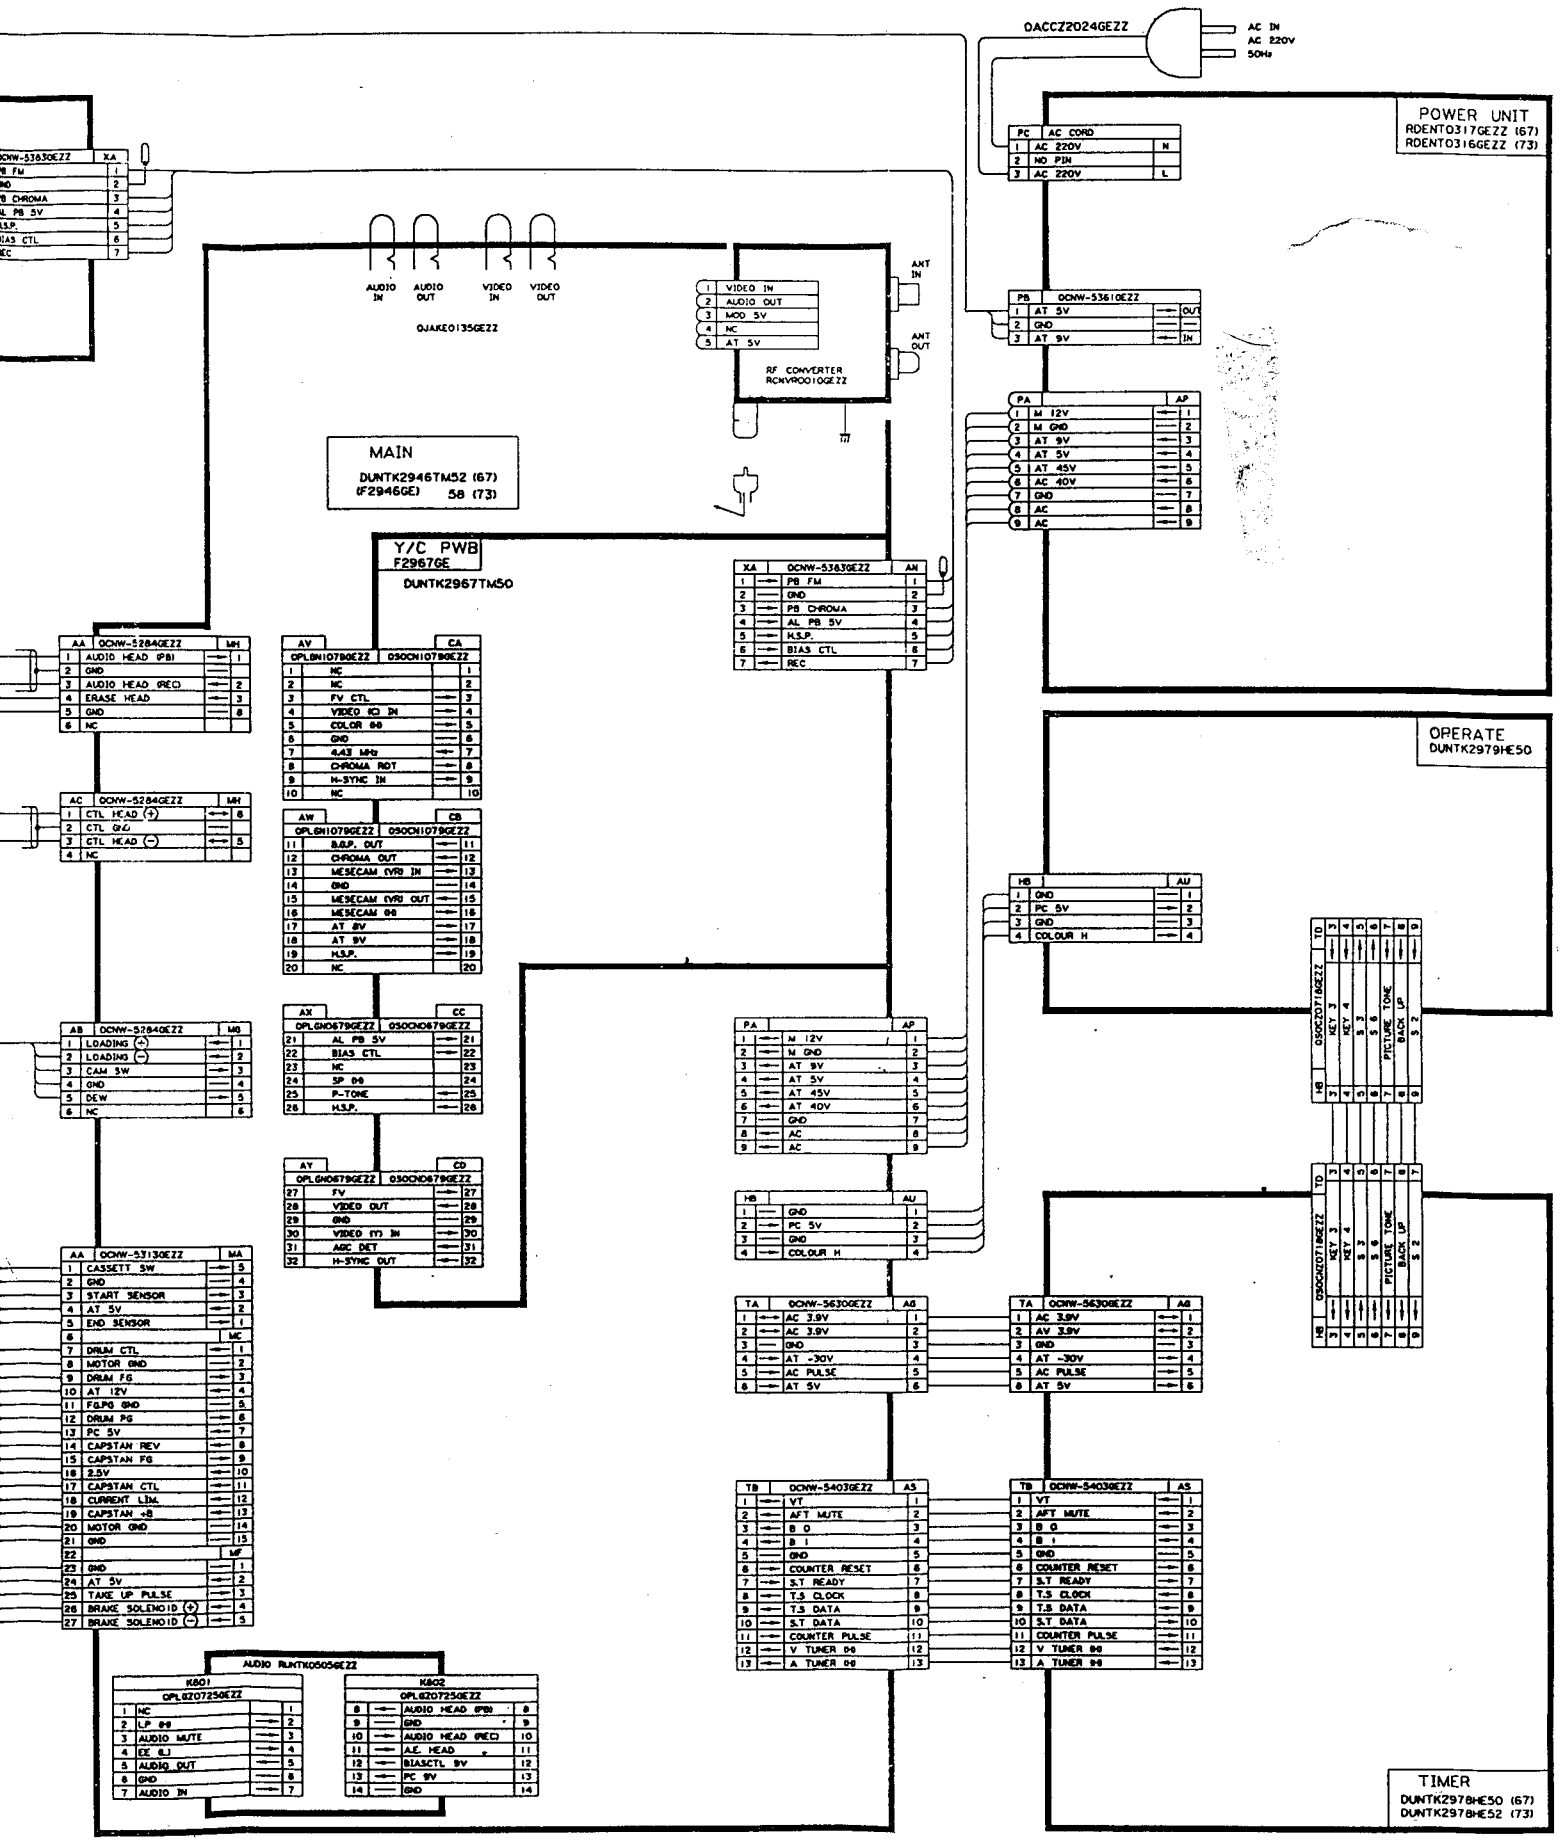
OACCZ2024GEZZ
AC IN
AC 220V
50Hz
POWER UNIT
RDENTO317GEZZ (67)
RDENTO316GEZZ (73)
PC AC CORD
1 AC 220V N
2 NO PIN
3 AC 220V L
PB OCNW-5361OEZZ
1 AT 5V OUT
2 GND
3 AT 9V IN
PA AP
1 M 12V 1
2 M GND 2
3 AT 9V 3
4 AT 5V 4
5 AT 45V 5
6 AC 40V 6
7 GND 7
8 AC 8
9 AC 9
AUDIO IN
AUDIO OUT
VIDEO IN
VIDEO OUT
QJAKE0135GEZZ
1 VIDEO IN
2 AUDIO OUT
3 MOD 5V
4 NC
5 AT 5V
ANT IN
ANT OUT
RF CONVERTER
RCNVR001OGEZZ
MAIN
DUNTK2946TM52 (67)
(F2946GE) 58 (73)
Y/C PWB
F2967GE
DUNTK2967TM50
XA OCNW-5363OEZZ AN
1 PB FM 1
2 GND 2
3 PB CHROMA 3
4 AL PB 5V 4
5 H.S.P. 5
6 BIAS CTL 6
7 REC 7
AA OCNW-5284GEZZ MH
1 AUDIO HEAD (PB) 1
2 GND
3 AUDIO HEAD (REC) 2
4 ERASE HEAD 3
5 GND 8
6 NC
AV OPLBN1079GEZZ 050CN1079GEZZ CA
1 NC 1
2 NC 2
3 FV CTL 3
4 VIDEO (C) IN 4
5 COLOR 5V 5
6 GND 6
7 4.43 MHz 7
8 CHROMA ROT 8
9 H-SYNC IN 9
10 NC 10
AW OPLBN1079GEZZ 050CN1079GEZZ CB
11 B.G.P. OUT 11
12 CHROMA OUT 12
13 MESECAM (VR) IN 13
14 GND 14
15 MESECAM (VR) OUT 15
16 MESECAM 5V 16
17 AT 8V 17
18 AT 9V 18
19 H.S.P. 19
20 NC 20
AC OCNW-5284GEZZ MH
1 CTL HEAD (+) 8
2 CTL GND
3 CTL HEAD (-) 5
4 NC
AX OPLGN0679GEZZ 050CN0679GEZZ CC
21 AL PB 5V 21
22 BIAS CTL 22
23 NC 23
24 SP 5V 24
25 P-TONE 25
26 H.S.P. 26
AY OPLGN0679GEZZ 050CN0679GEZZ CD
27 FV 27
28 VIDEO OUT 28
29 GND 29
30 VIDEO (Y) IN 30
31 AGC DET 31
32 H-SYNC OUT 32
AB OCNW-5284GEZZ MB
1 LOADING (+) 1
2 LOADING (-) 2
3 CAM SW 3
4 GND 4
5 DEW 5
6 NC 6
AA OCNW-5313OEZZ MA
1 CASSETT SW 5
2 GND 4
3 START SENSOR 3
4 AT 5V 2
5 END SENSOR 1
6 MC
7 DRUM CTL 1
8 MOTOR GND 2
9 DRUM FG 3
10 AT 12V 4
11 FG,PG GND 5
12 DRUM PG 6
13 PC 5V 7
14 CAPSTAN REV 8
15 CAPSTAN FG 9
16 2.5V 10
17 CAPSTAN CTL 11
18 CURRENT LIM. 12
19 CAPSTAN +8 13
20 MOTOR GND 14
21 GND 15
22 MF
23 GND 1
24 AT 5V 2
25 TAKE UP PULSE 3
26 BRAKE SOLENOID (+) 4
27 BRAKE SOLENOID (-) 5
AUDIO RUNTK0505GEZZ
K801
OPL6Z07250EZZ
1 NC 1
2 LP 5V 2
3 AUDIO MUTE 3
4 EE EJ 4
5 AUDIO OUT 5
6 GND 6
7 AUDIO IN 7
K802
OPL6Z07250EZZ
8 AUDIO HEAD (PB) 8
9 GND 9
10 AUDIO HEAD (REC) 10
11 A.E. HEAD 11
12 BIASCTL 9V 12
13 PC 9V 13
14 GND 14
PA AP
1 M 12V 1
2 M GND 2
3 AT 9V 3
4 AT 5V 4
5 AT 45V 5
6 AT 40V 6
7 GND 7
8 AC 8
9 AC 9
HB AU
1 GND 1
2 PC 5V 2
3 GND 3
4 COLOUR H 4
TA OCNW-5630OEZZ AG
1 AC 3.9V 1
2 AC 3.9V 2
3 GND 3
4 AT -30V 4
5 AC PULSE 5
6 AT 5V 6
TB OCNW-5403OEZZ AS
1 VT 1
2 AFT MUTE 2
3 B 0 3
4 B 1 4
5 GND 5
6 COUNTER RESET 6
7 S.T READY 7
8 T.S CLOCK 8
9 T.S DATA 9
10 S.T DATA 10
11 COUNTER PULSE 11
12 V TUNER 0V 12
13 A TUNER 0V 13
OPERATE
DUNTK2979HE50
050CK0718GEZZ
TD
KEY 3
KEY 4
S 3
S 6
PICTURE TONE
BACK UP
S 2
TIMER
DUNTK2978HE50 (67)
DUNTK2978HE52 (73)

SERVO, SYSTEM CONTROL IF TUNER CIRCUIT DIAGRAM (MAIN 1)

Drum Control signal
Drum frequency reference signal
Drum phase reference signal

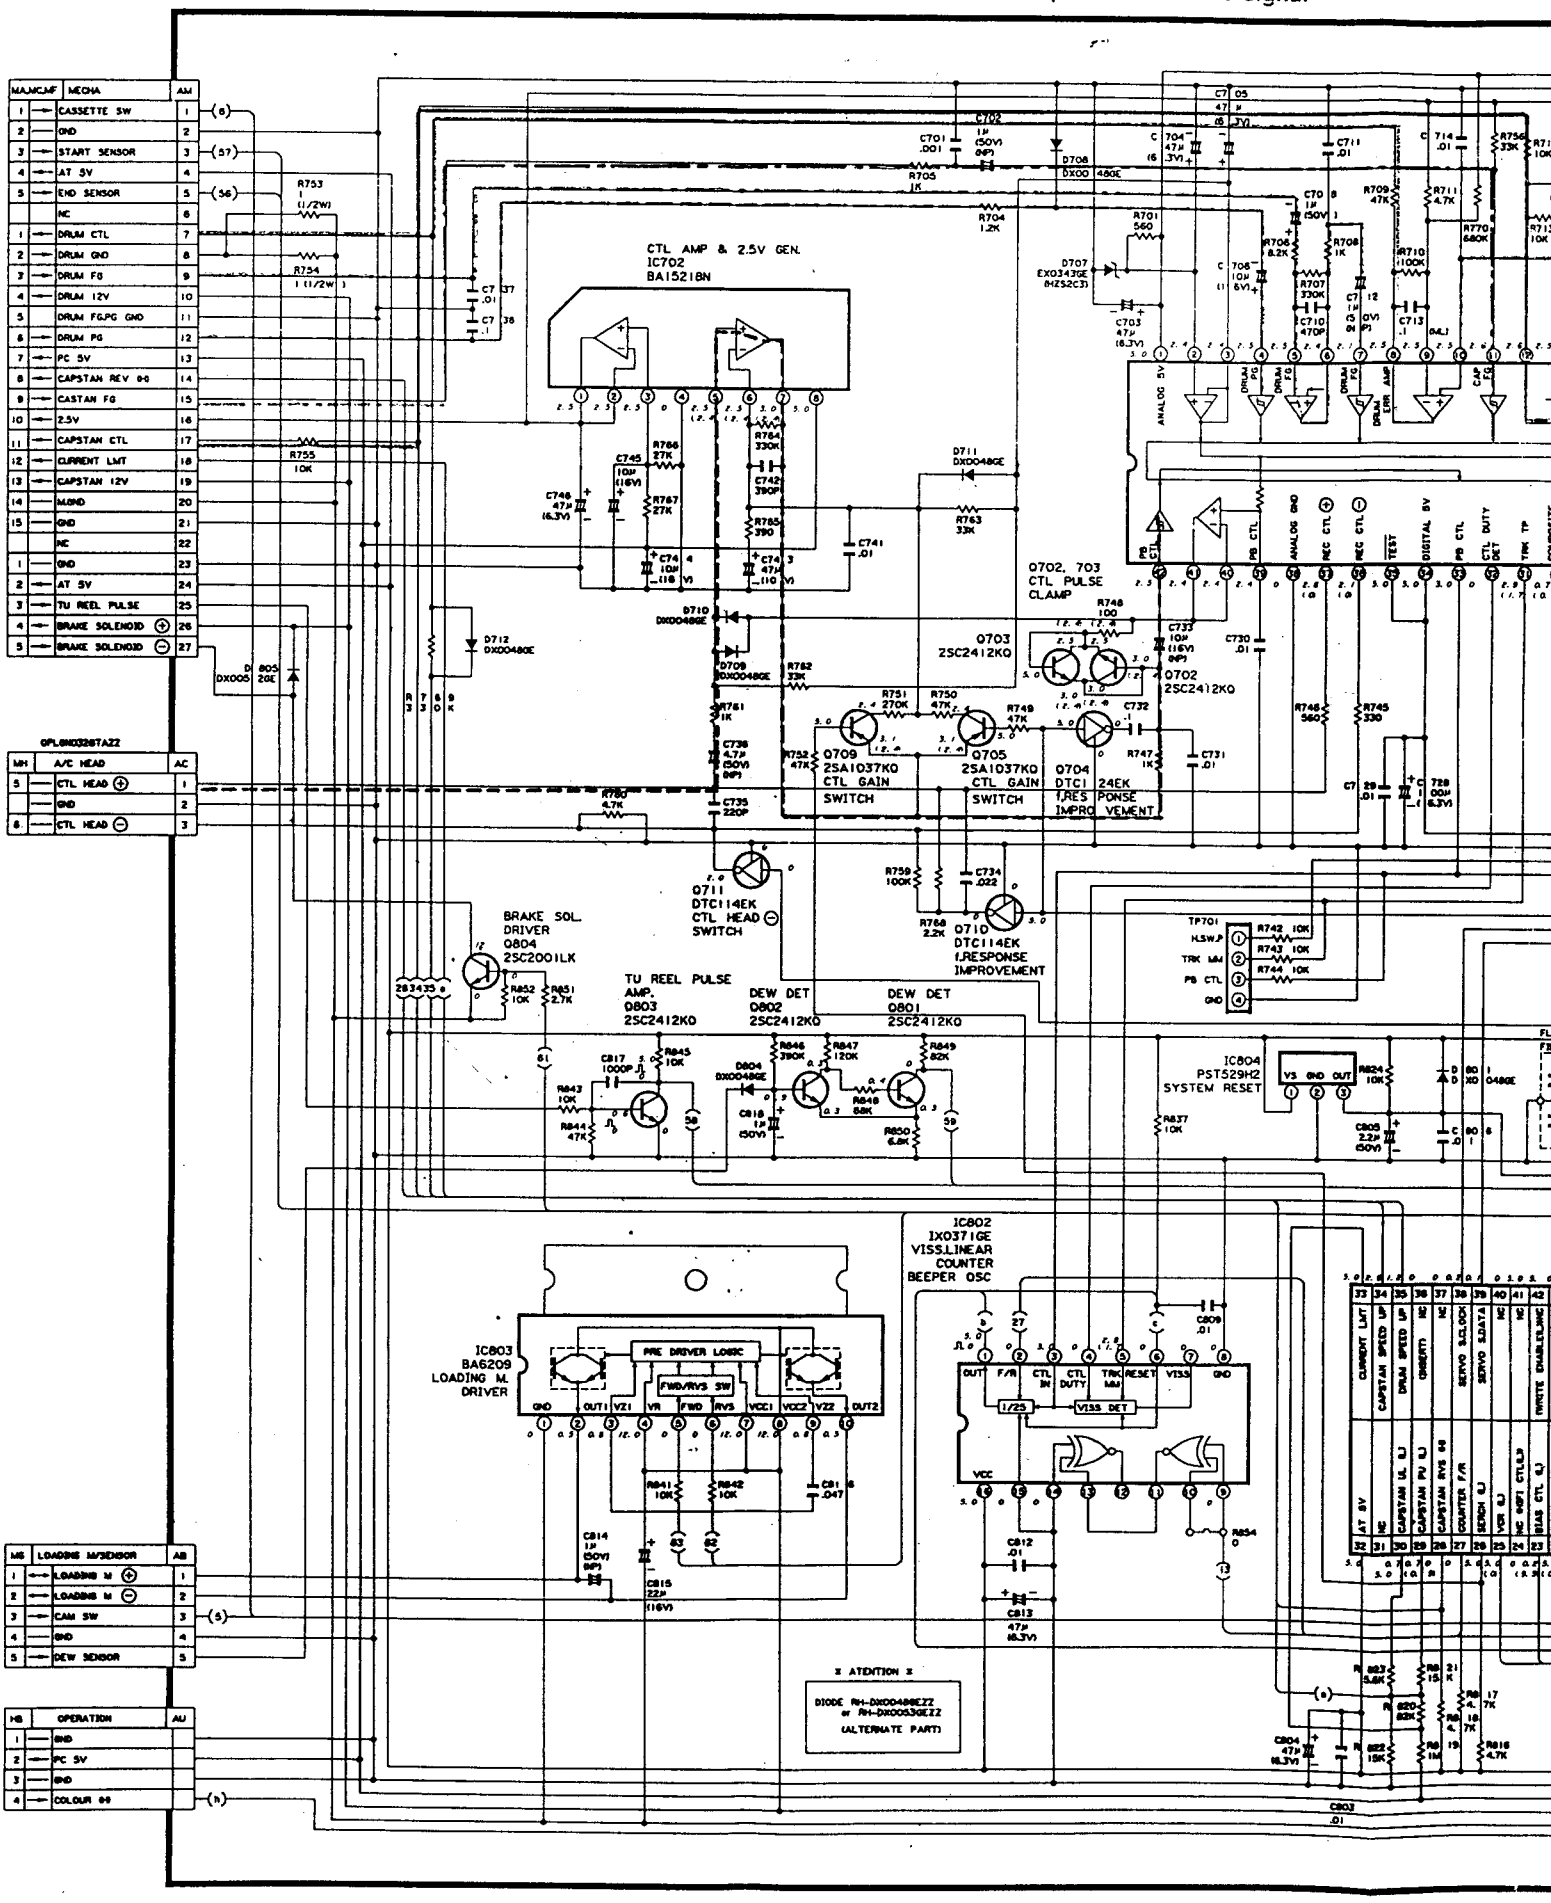

ɲnal
reference signal
rence signal

——— Capstan Control signal
– – – – Capstan frequency reference signal
—·—·— Capstan phase reference signal

——— Record reference signal

(F2946GE)

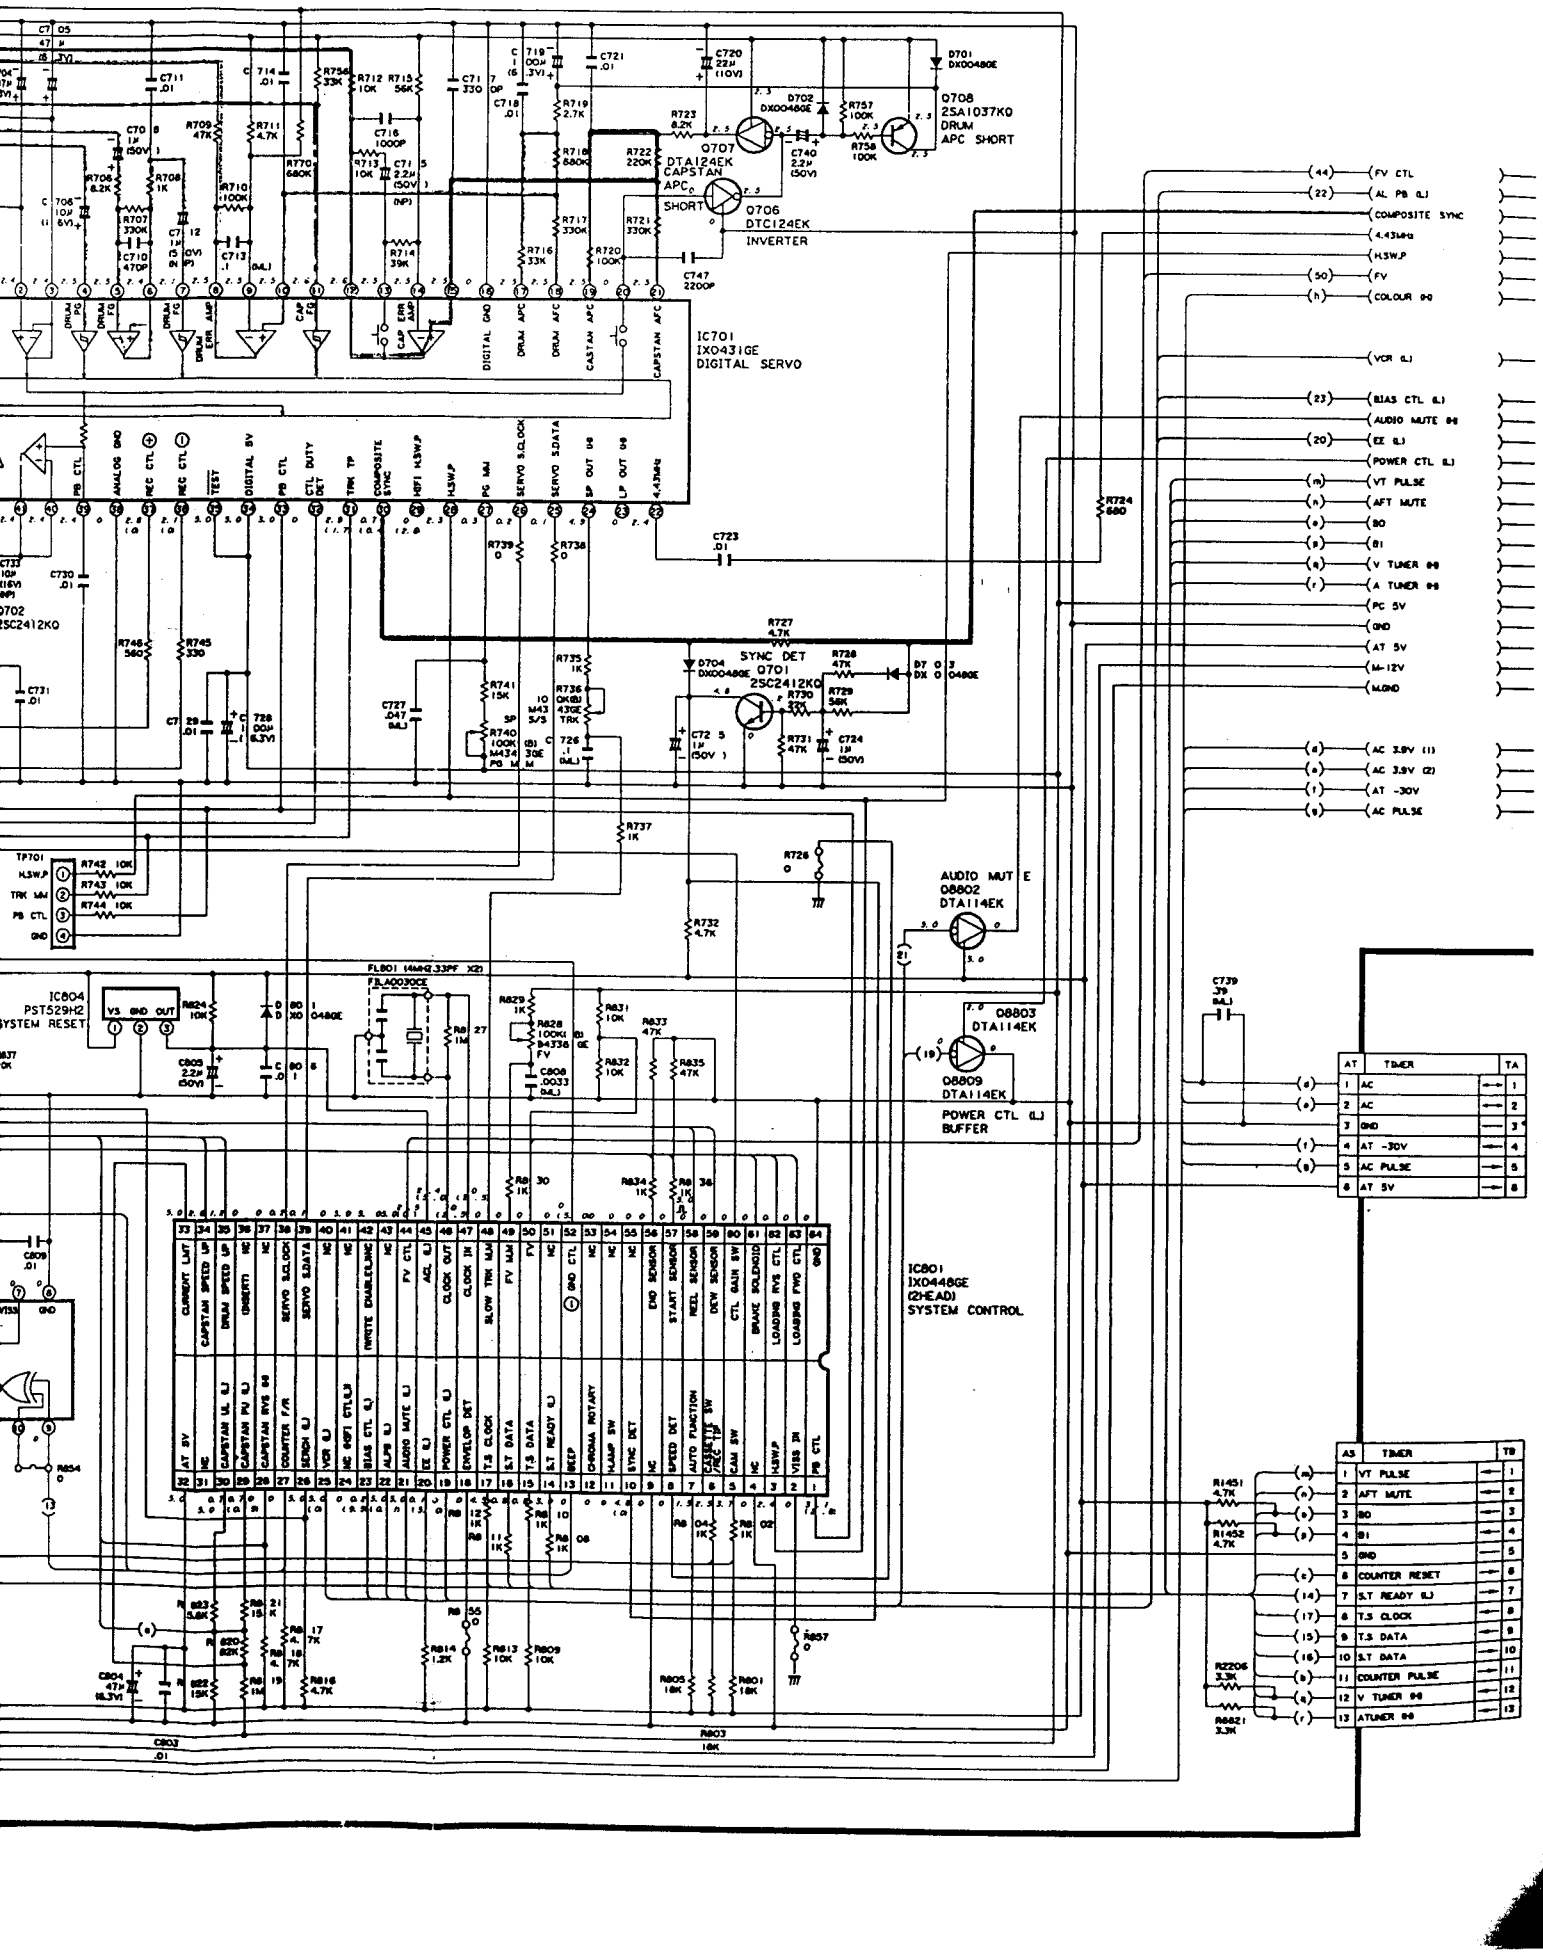

SERVO, SYSTEM CONTROL IF TUNER CIRCUIT DIAGRAM (MAIN 2)

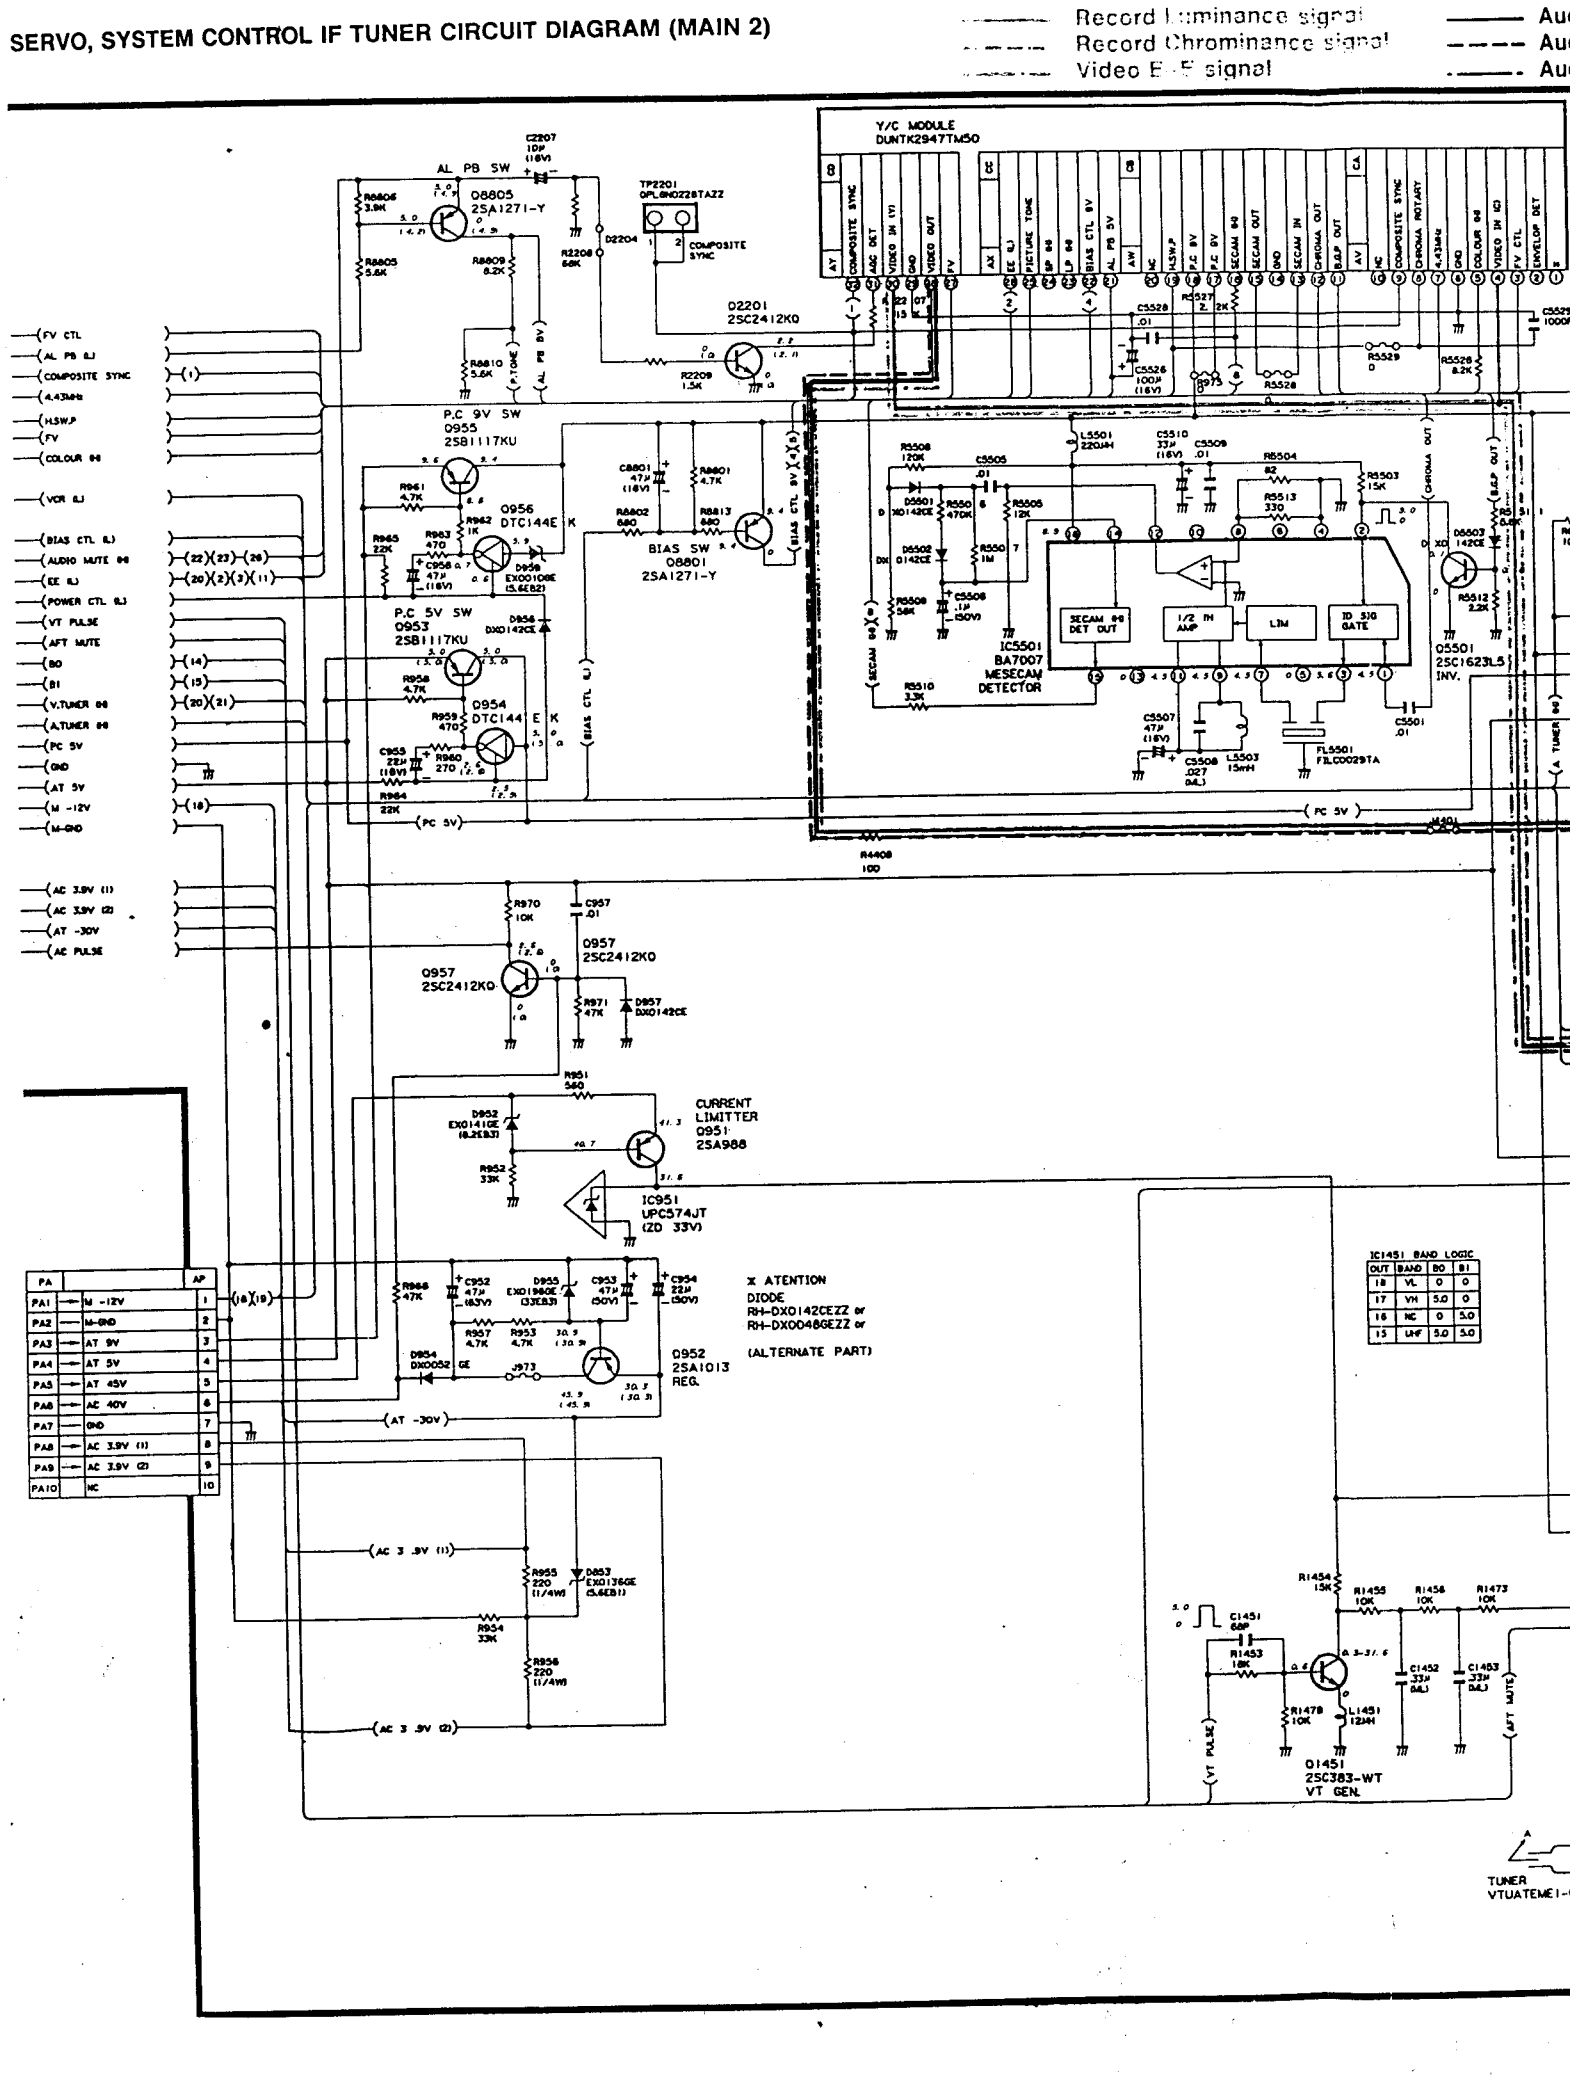

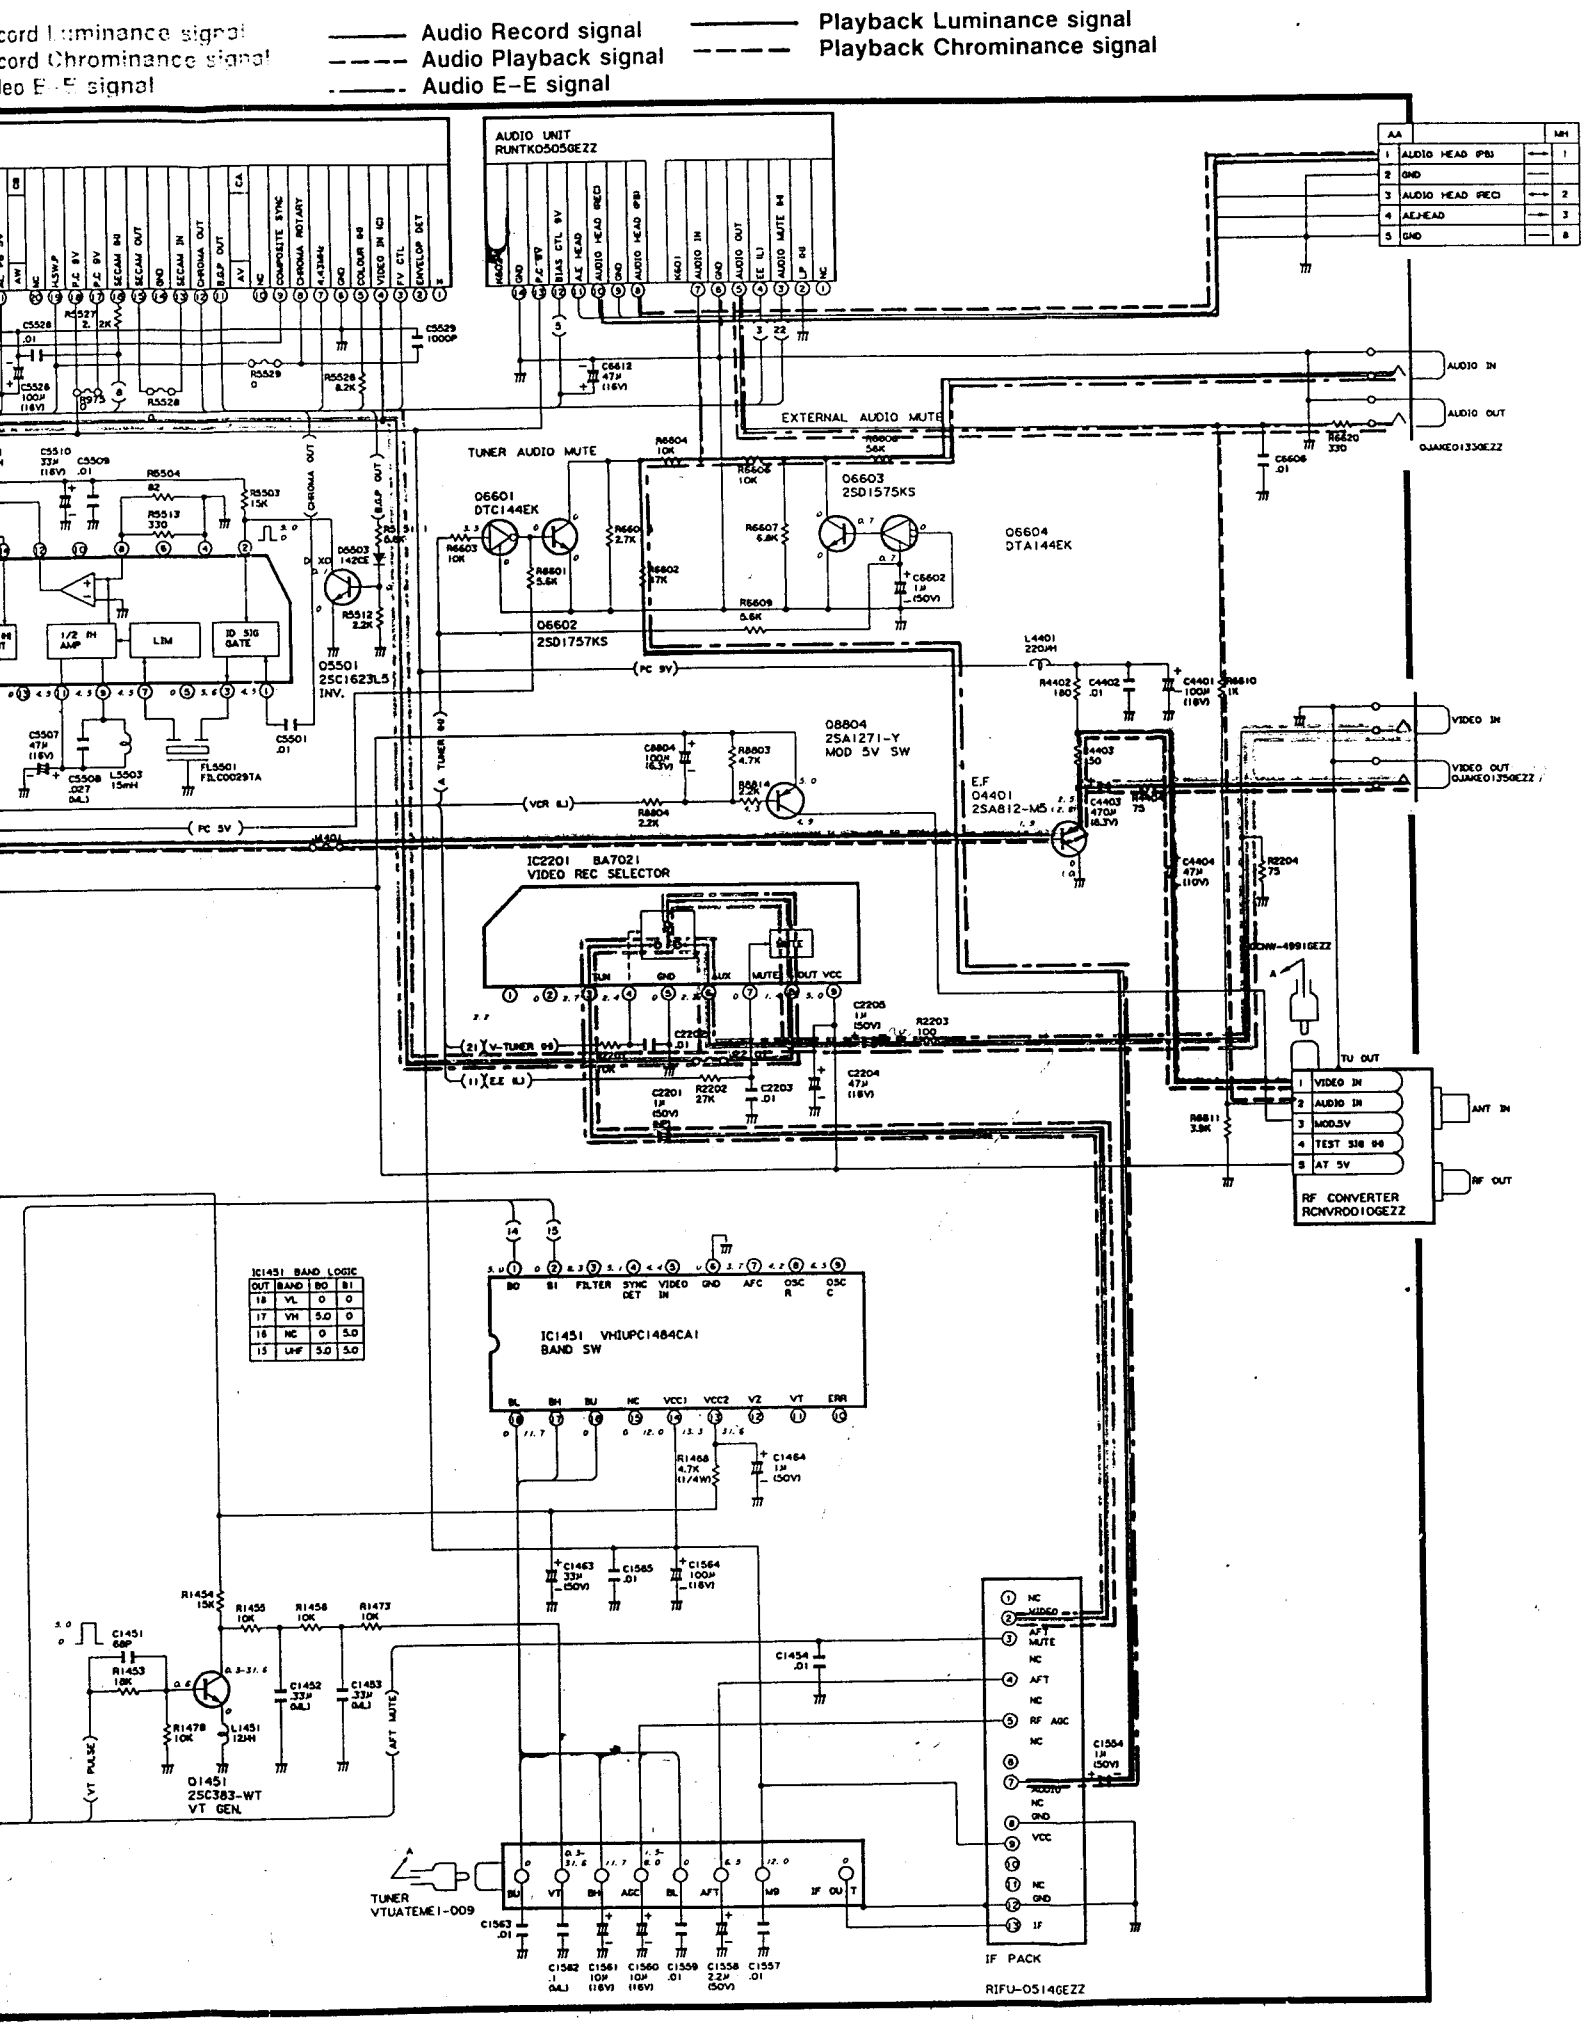
cord Luminance signal
cord Chrominance signal
leo E-E signal
Audio Record signal
Audio Playback signal
Audio E-E signal
Playback Luminance signal
Playback Chrominance signal
AUDIO UNIT
RUNTK0505GEZZ
EXTERNAL AUDIO MUTE
TUNER AUDIO MUTE
06601
DTC144EK
06602
2SD1757KS
06603
2SD1575KS
06604
DTA144EK
05501
2SC1623L5
INV.
08804
2SA1271-Y
MOD 5V SW
E.F
04401
2SA812-M5
IC2201 BA7021
VIDEO REC SELECTOR
IC1451 VHIUPC1484CA1
BAND SW
IC1451 BAND LOGIC
Q1451
2SC383-WT
VT GEN.
TUNER
VTUATEME1-009
IF PACK
RIFU-0514GEZZ
RF CONVERTER
RCNVR001OGEZZ
AUDIO IN
AUDIO OUT
VIDEO IN
VIDEO OUT
ANT IN
RF OUT
TU OUT

LUMINANCE CHROMINANCE CIRCUIT DIAGRAM

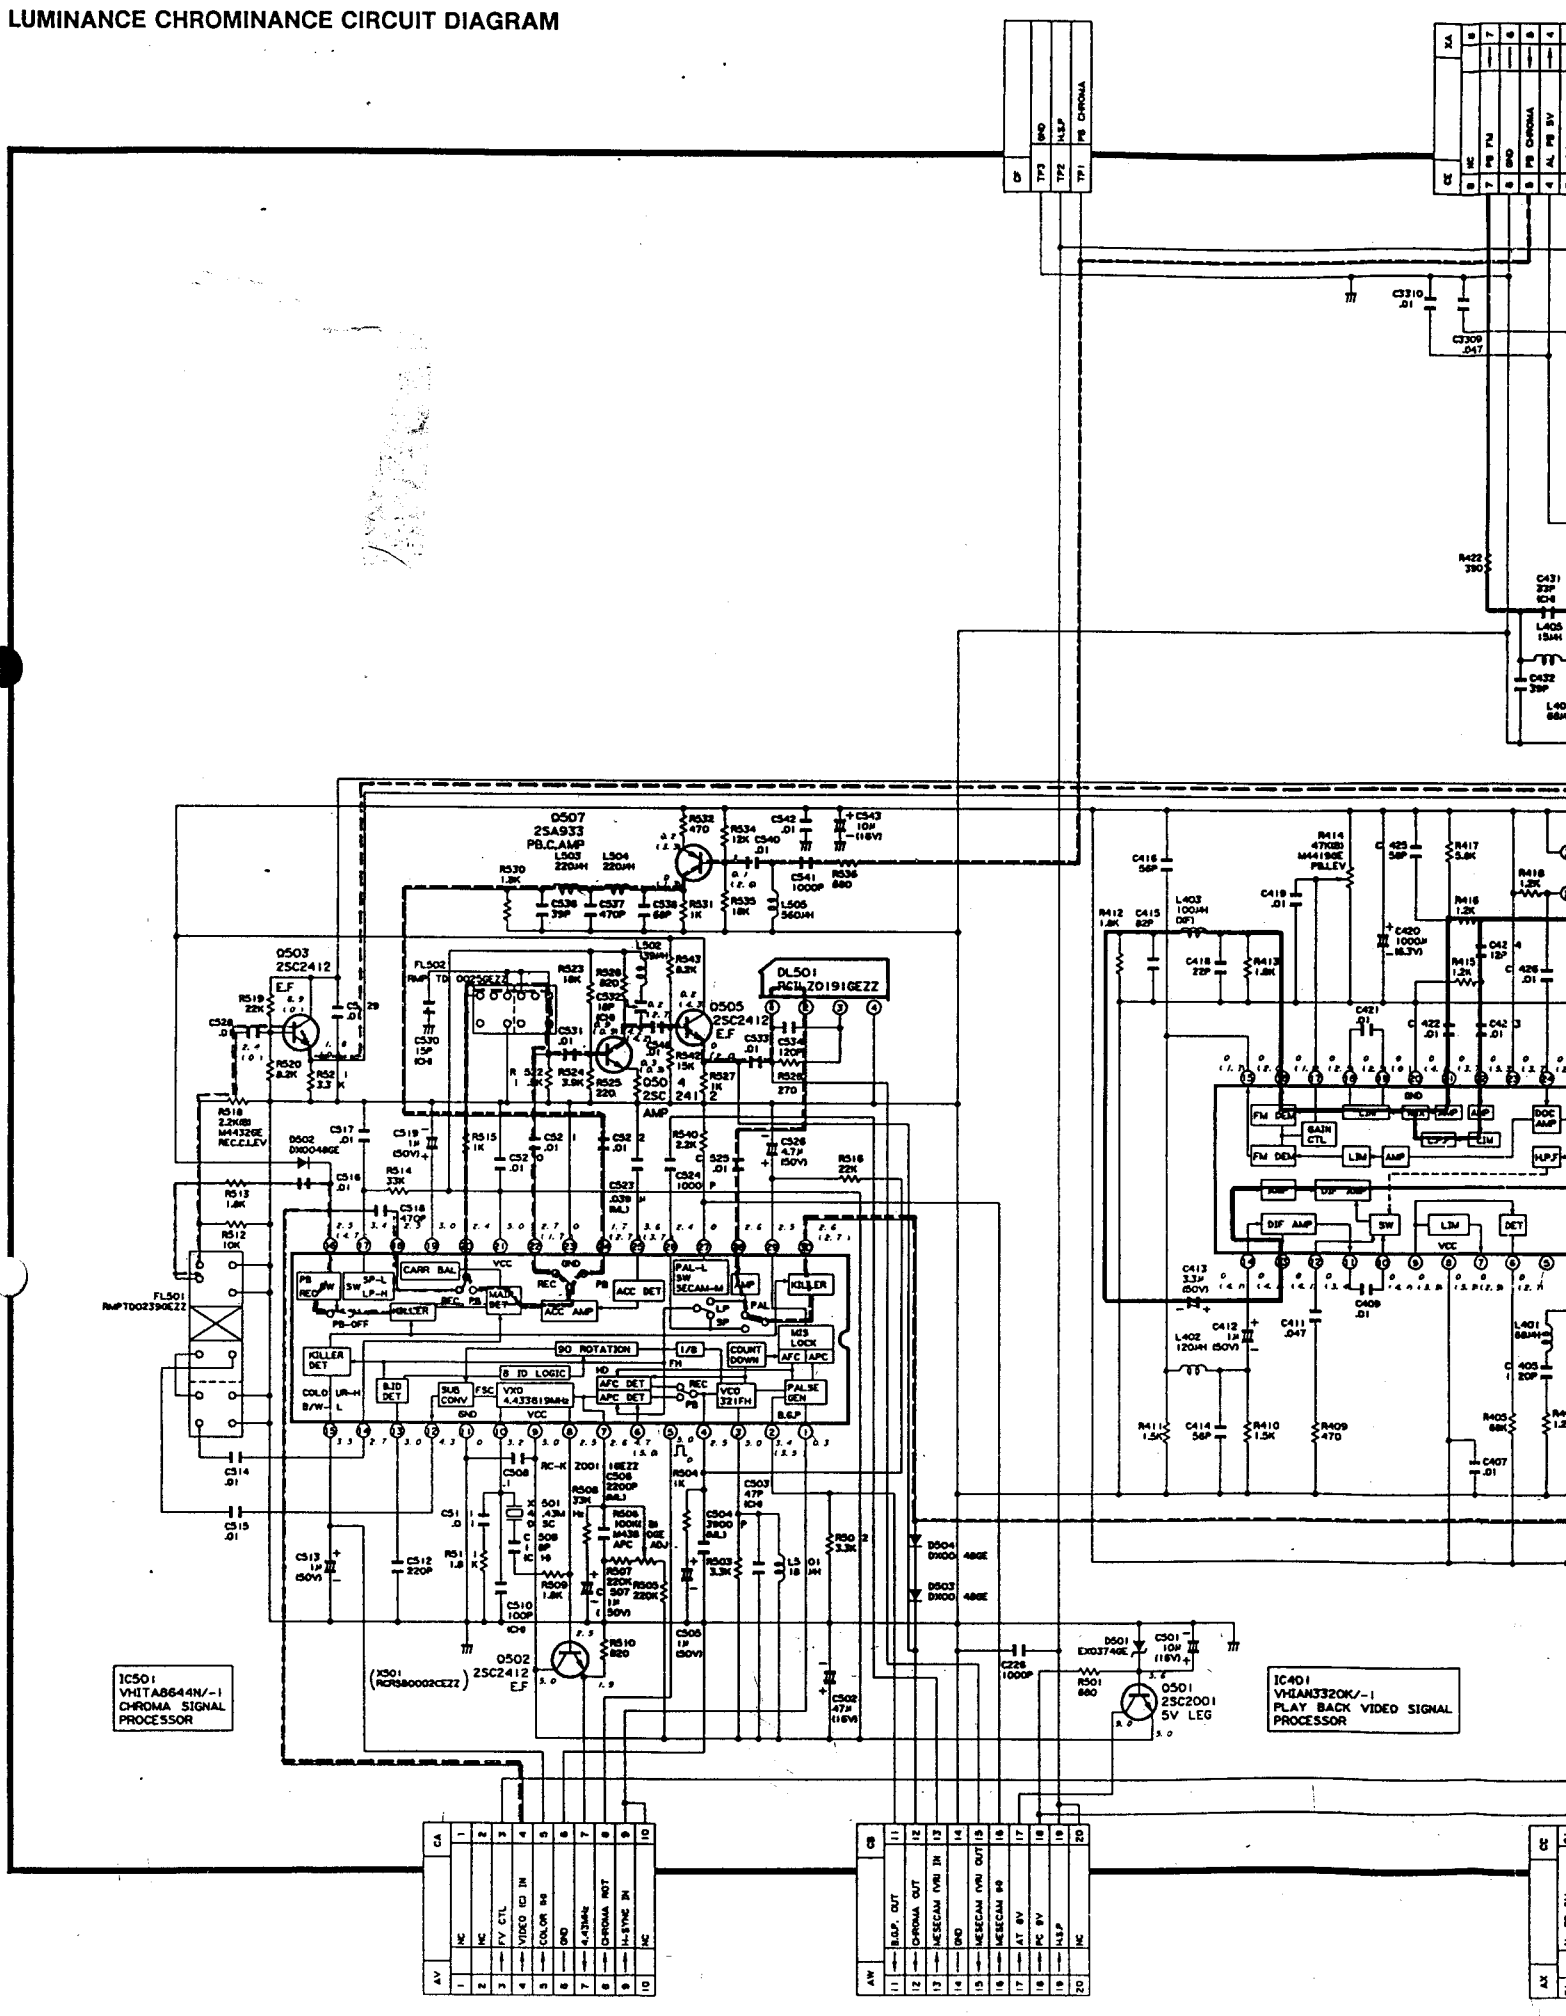

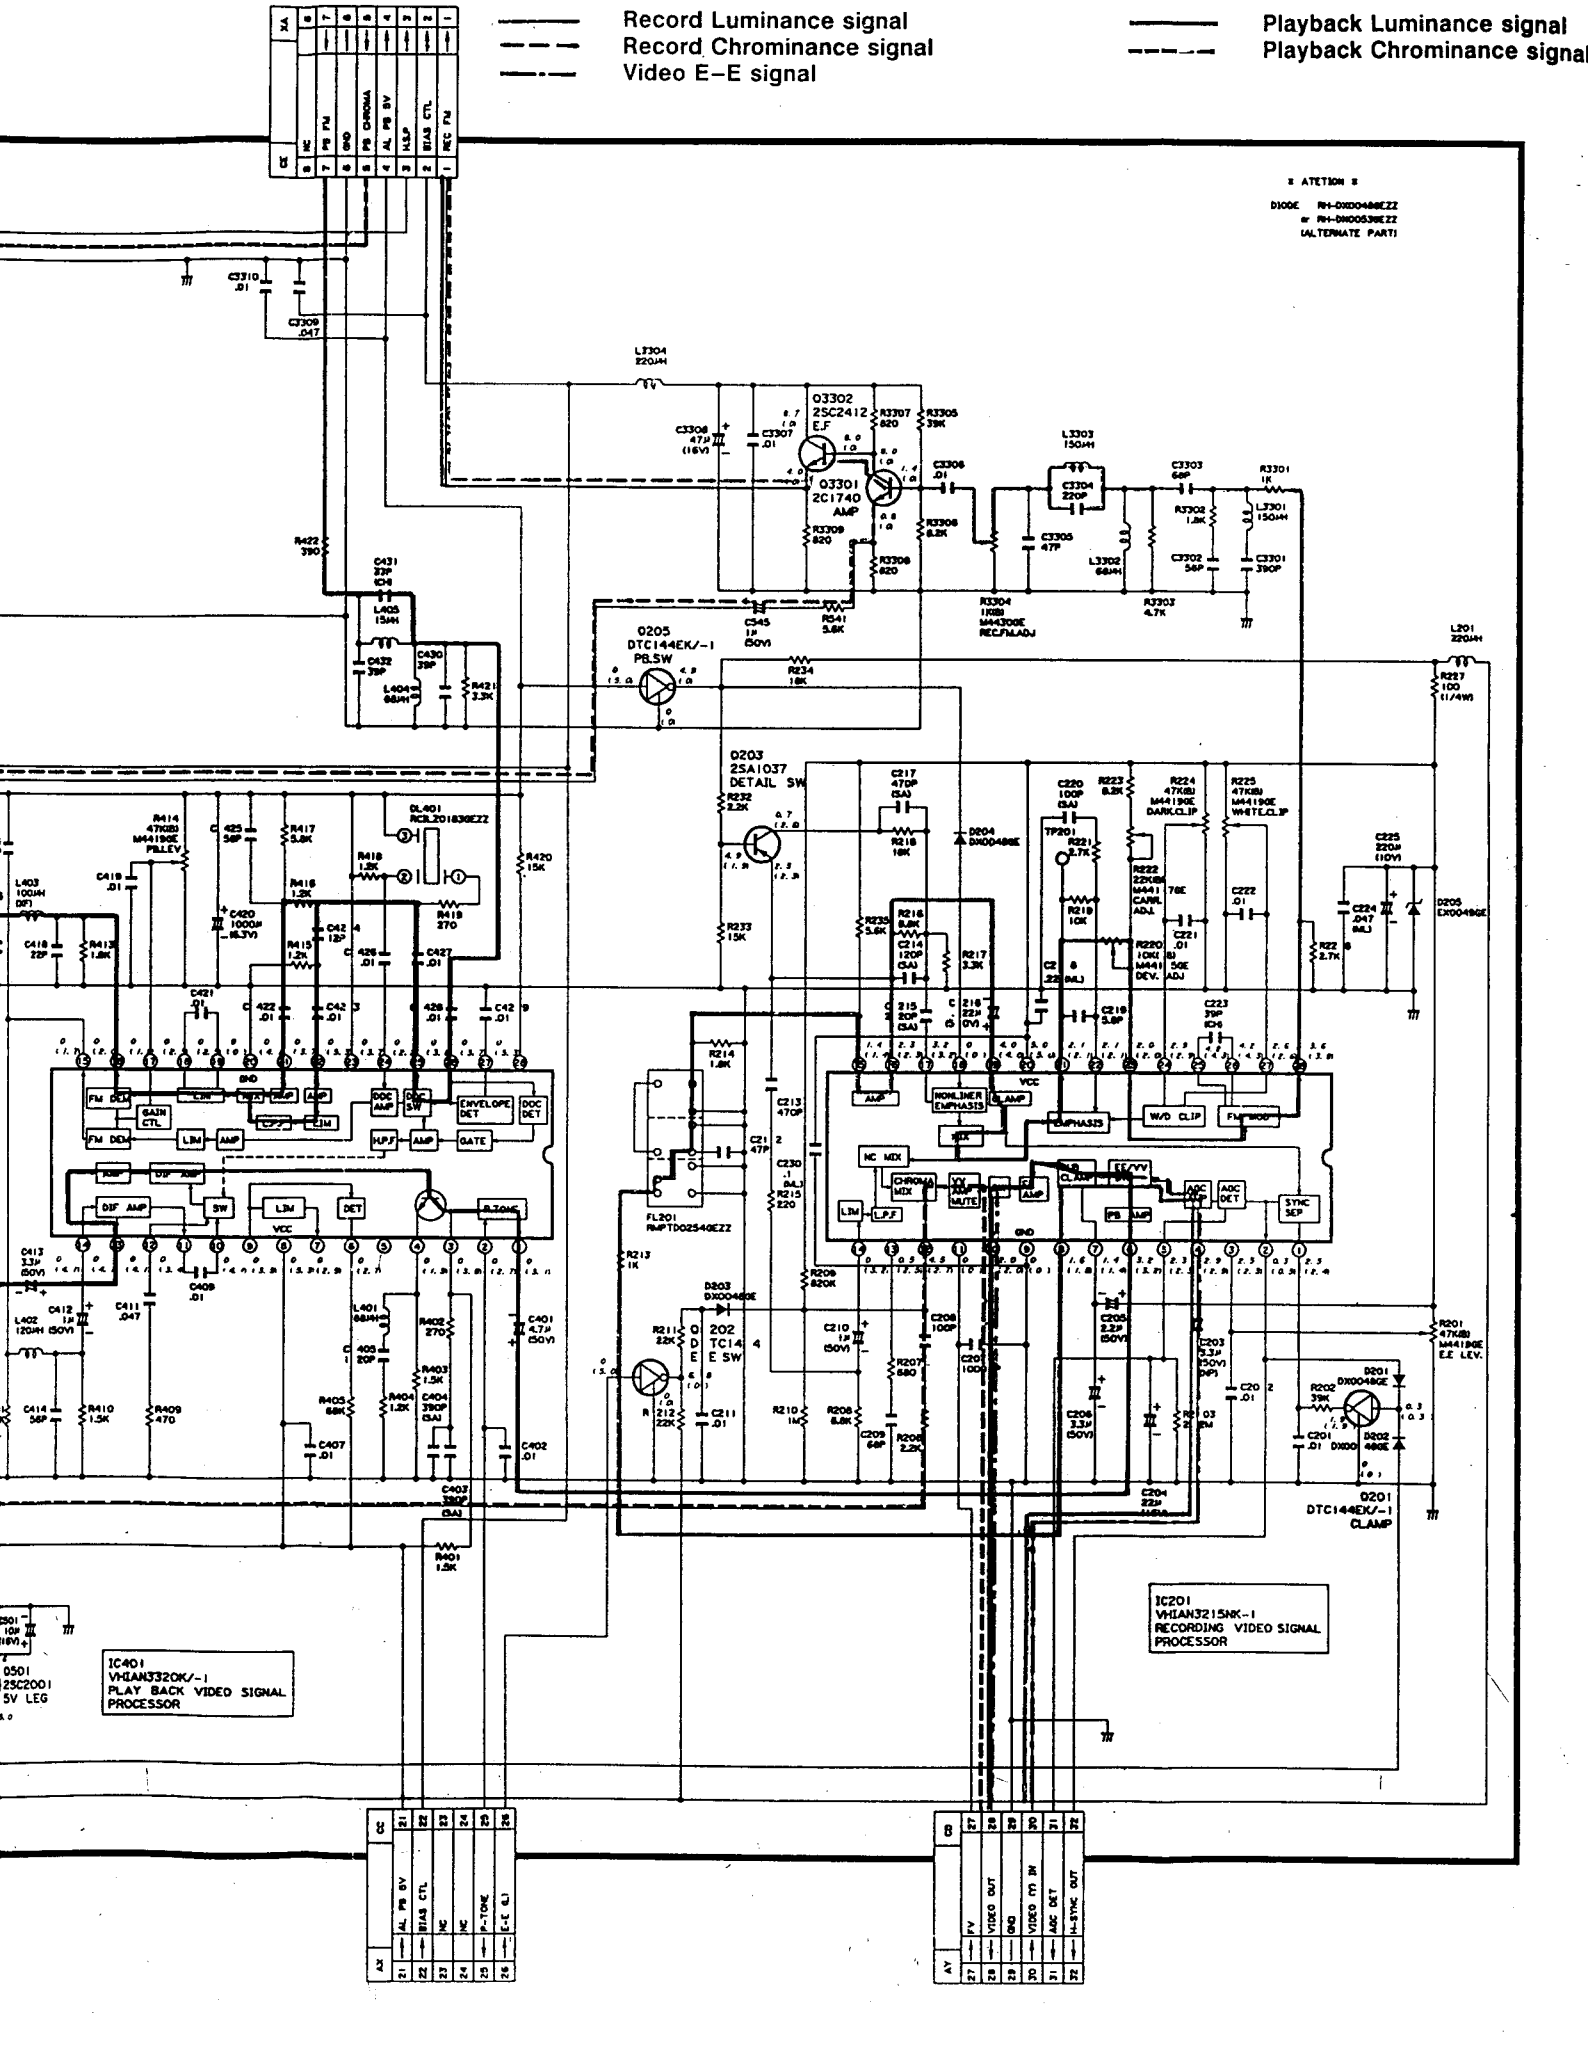
Record Luminance signal
Record Chrominance signal
Video E-E signal
Playback Luminance signal
Playback Chrominance signal
IC401
VHIAN3320K/-1
PLAY BACK VIDEO SIGNAL
PROCESSOR
IC201
VHIAN3215NK-1
RECORDING VIDEO SIGNAL
PROCESSOR
0205
DTC144EK/-1
PB.SW
0203
2SA1037
DETAIL SW
03302
2SC2412
E.F
03301
2C1740
AMP
0201
DTC144EK/-1
CLAMP
0501
2SC2001
5V LEG

UDIO CIRCUIT DIAGRAM

Audio Record signal
Audio Playback signal
Audio E-E signal

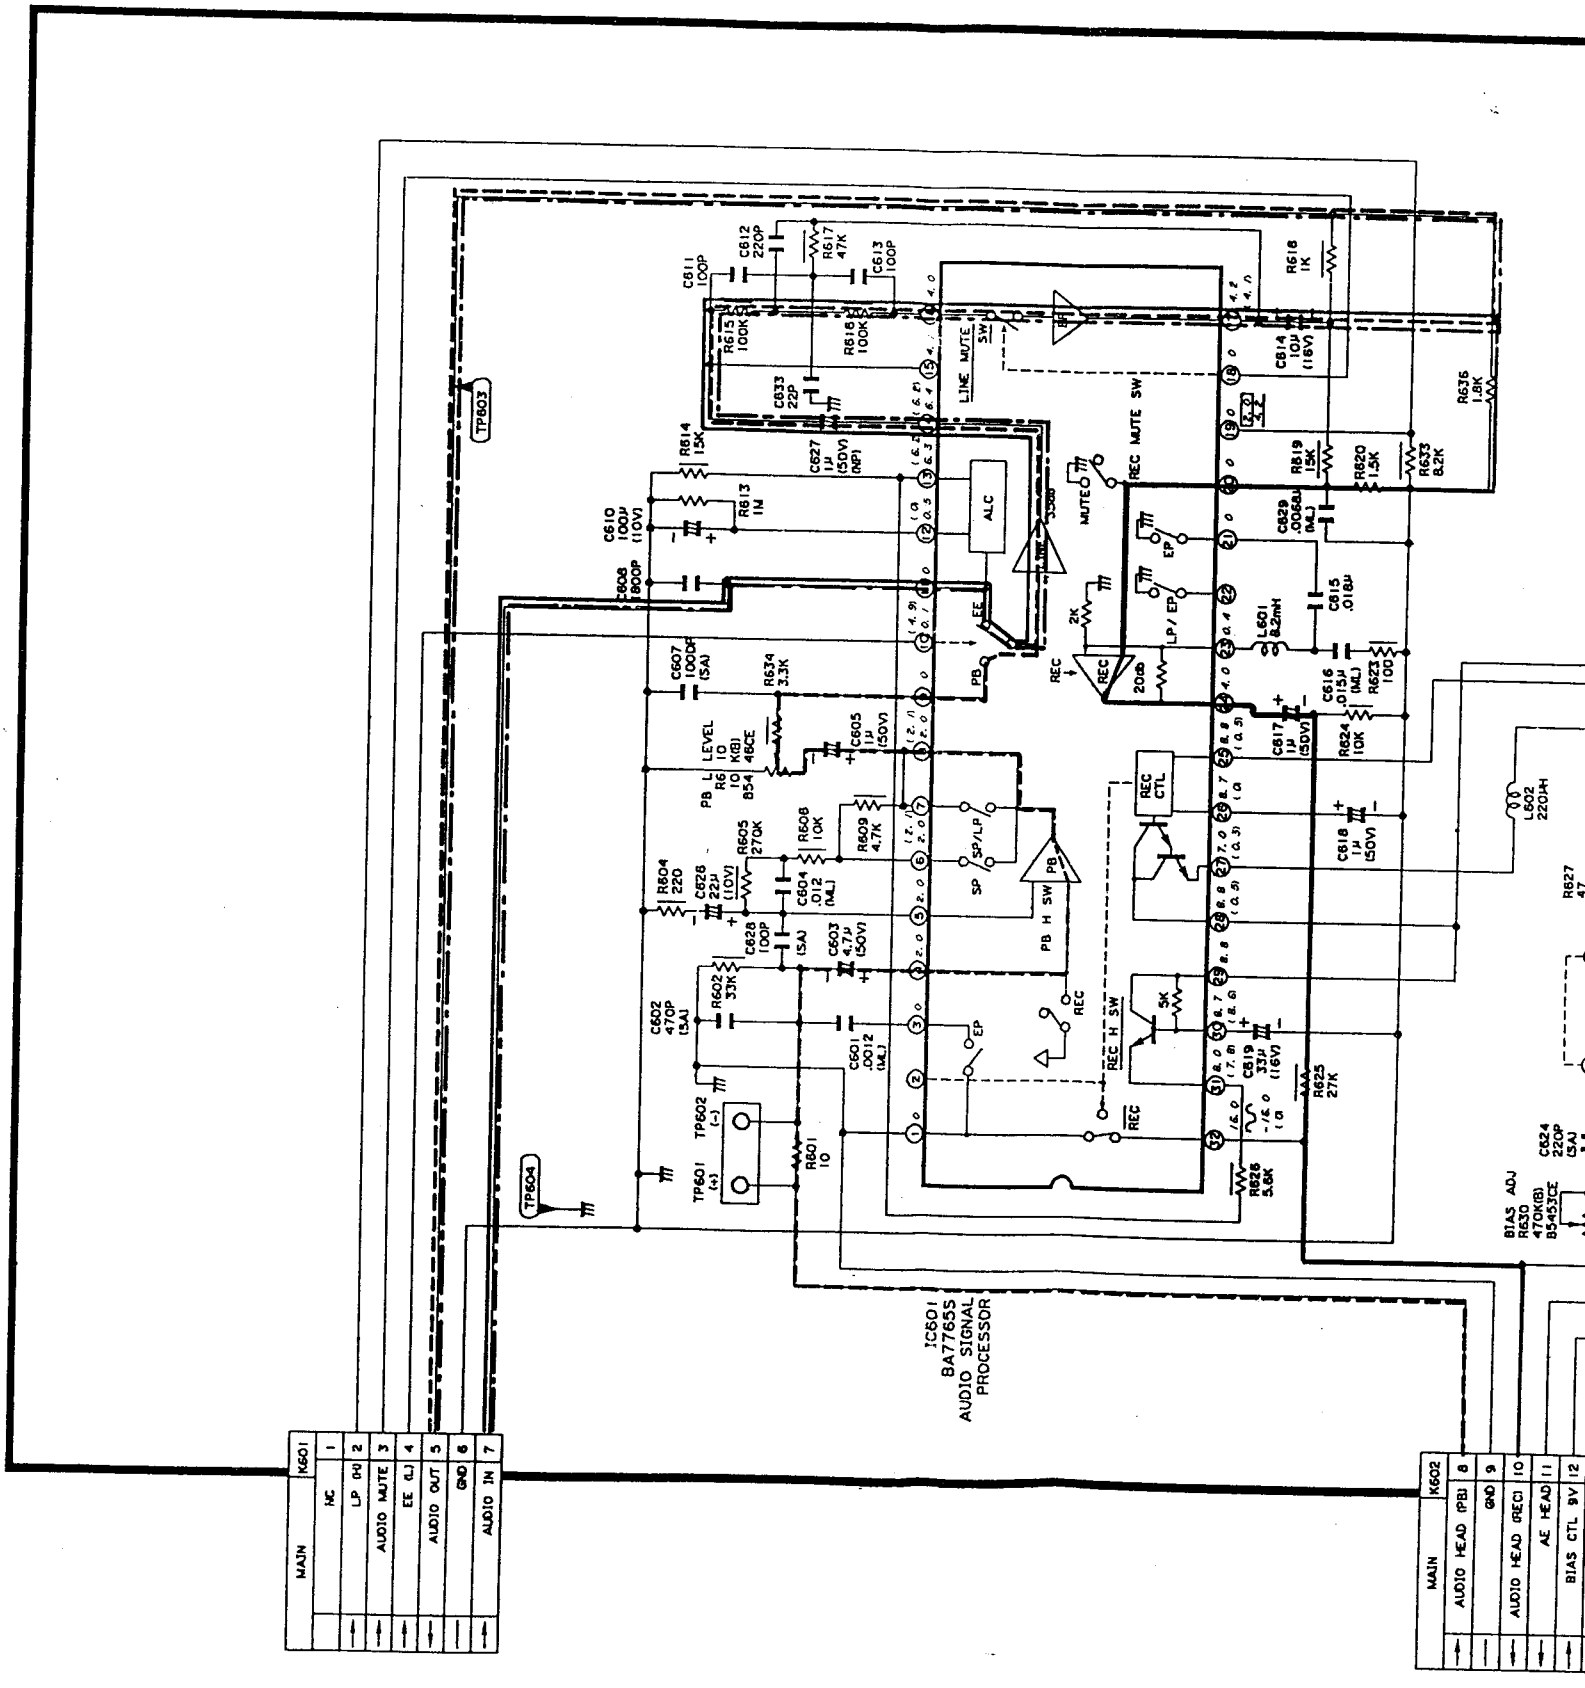

Audio Record signal
Audio Playback signal
Audio E-E signal

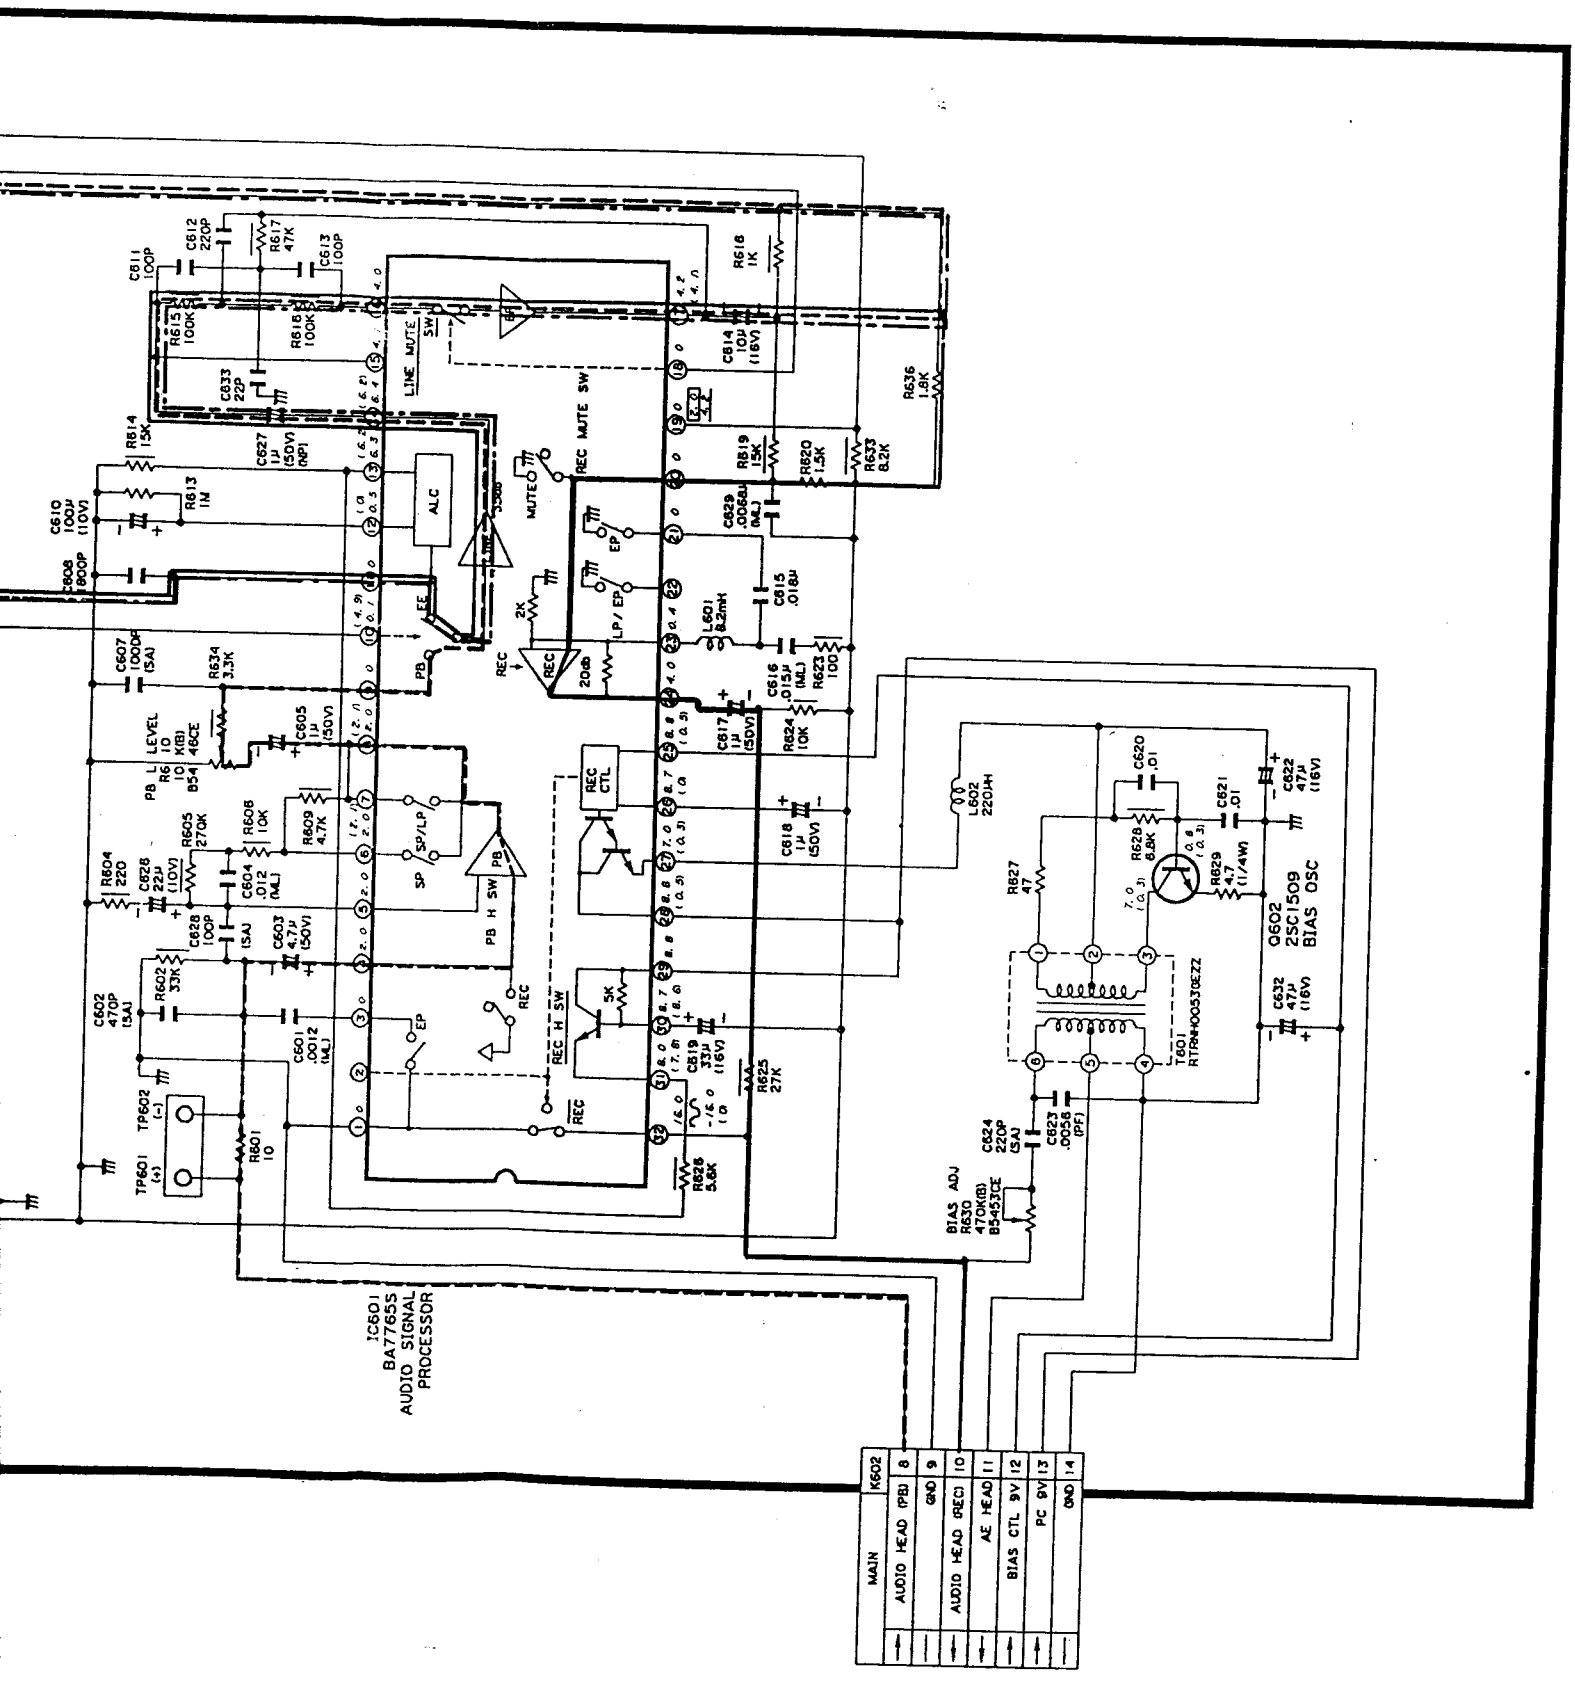

IF PACK CIRCUIT DIAGRAM

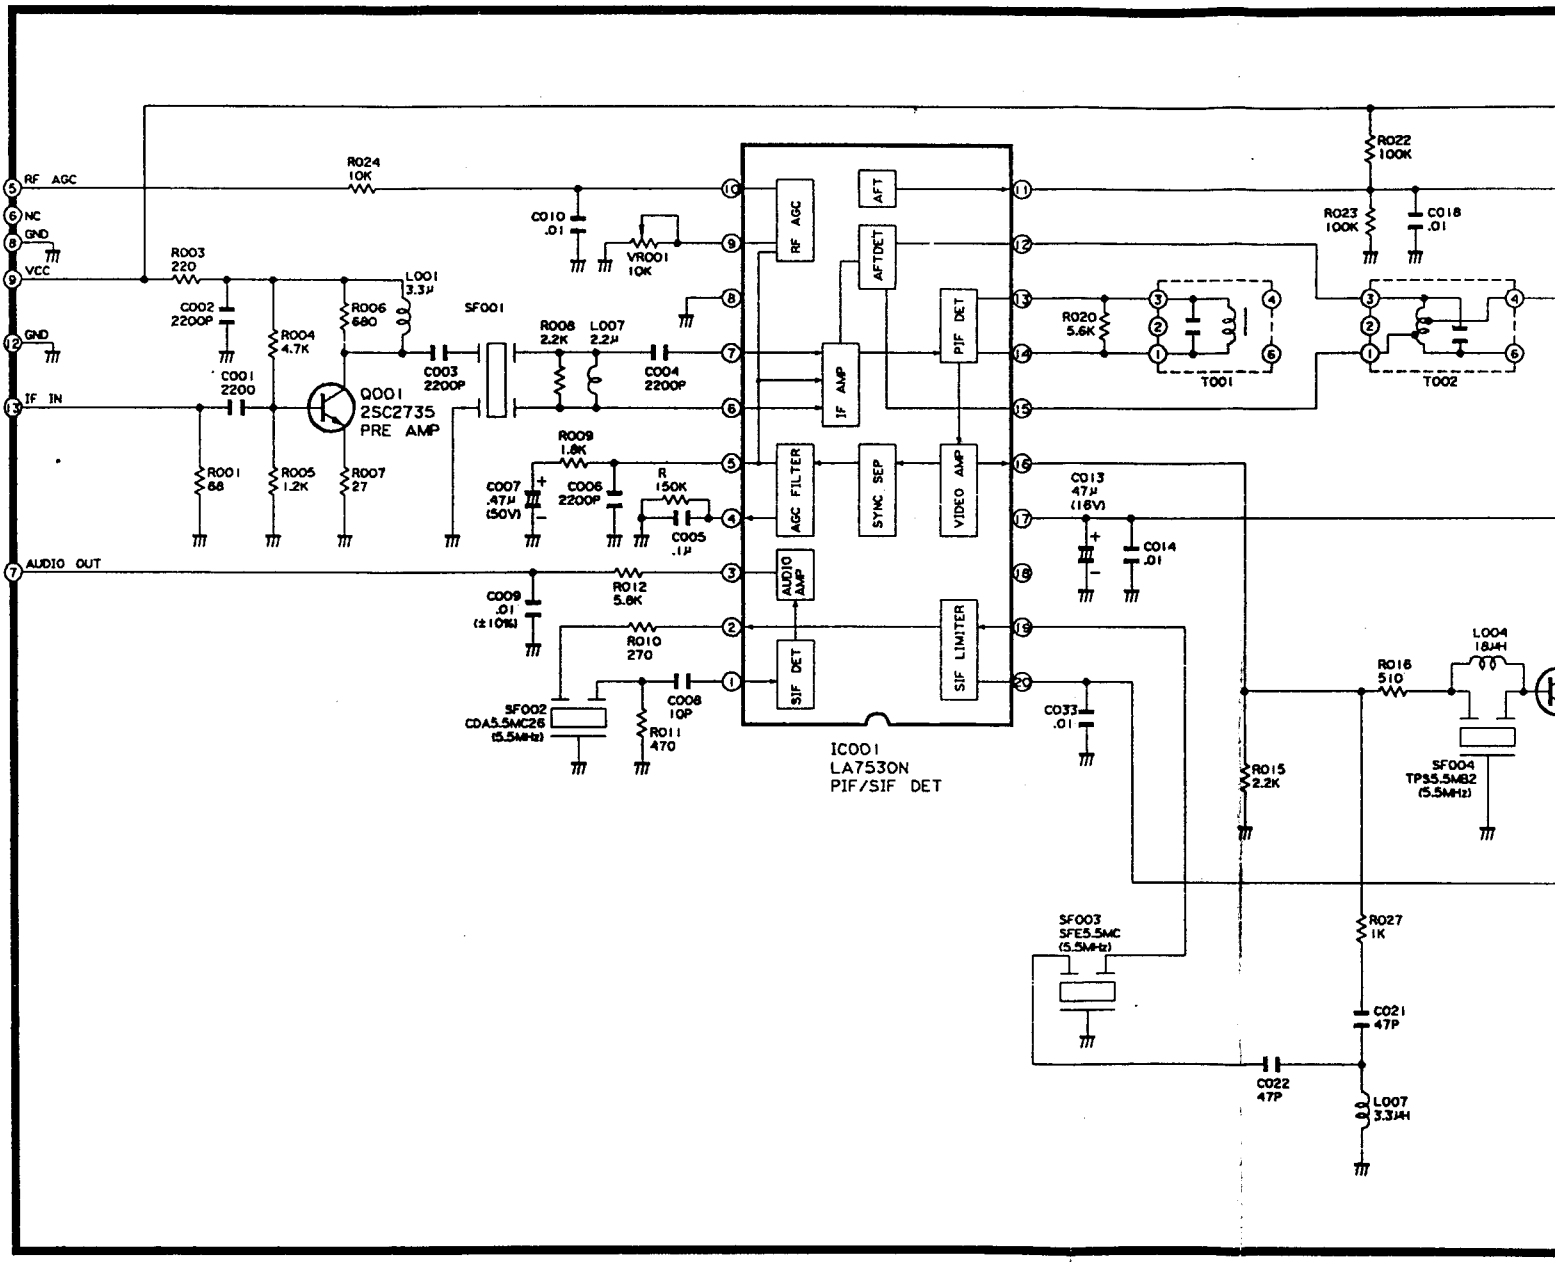

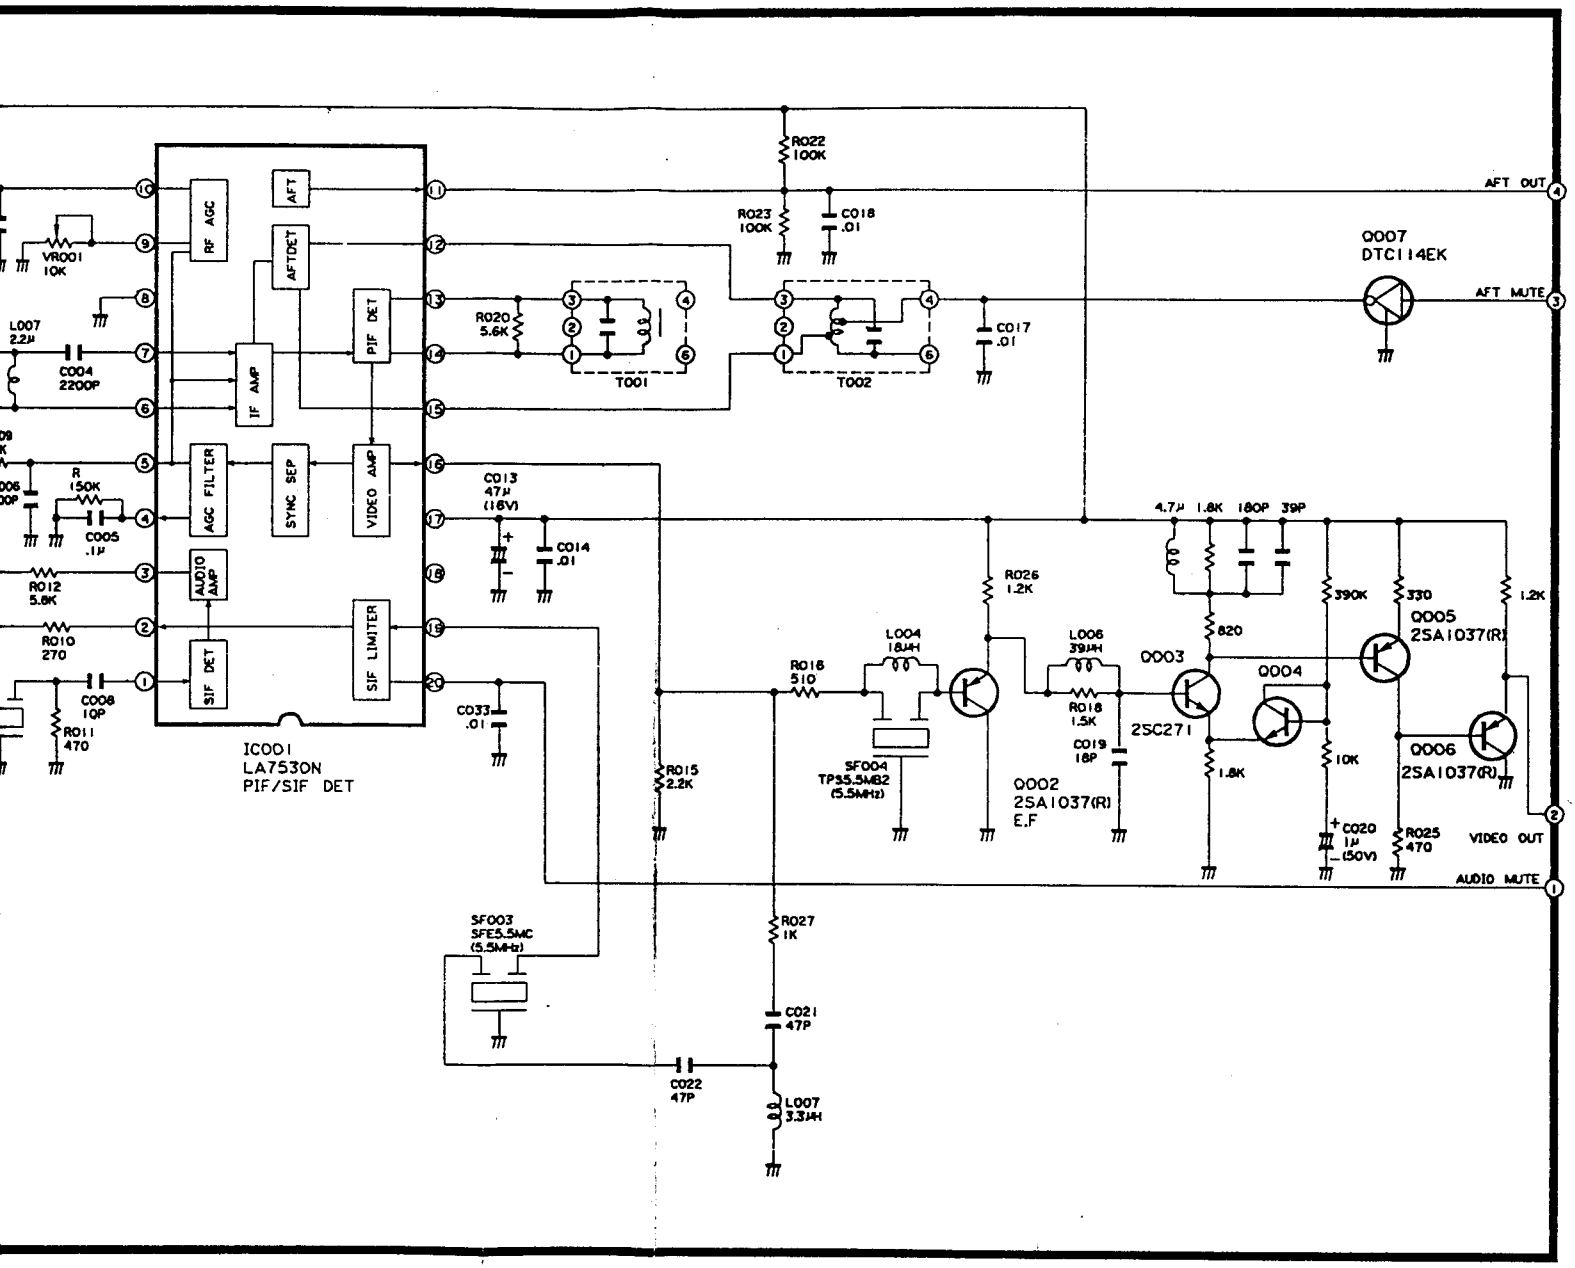
R022 100K
R023 100K
C018 .01
AFT OUT
Q007 DTC114EK
AFT MUTE
VR001 10K
L007 2.2μ
C004 2200P
R020 5.6K
T001
T002
C017 .01
R
150K
C005 .1μ
R012 5.6K
R010 270
C008 10P
R011 470
RF AGC
AFT
AFTDET
PIF DET
IF AMP
AGC FILTER
SYNC SEP
VIDEO AMP
AUDIO AMP
SIF DET
SIF LIMITER
IC001
LA7530N
PIF/SIF DET
C013 47μ (16V)
C014 .01
C033 .01
R026 1.2K
4.7μ 1.8K 180P 39P
390K
330
1.2K
820
Q005 2SA1037(R)
L004 18μH
L006 39μH
R018 510
R018 1.5K
Q003
Q004
2SC271
C019 18P
SF004 TP35.5MB2 (5.5MHz)
Q002 2SA1037(R) E.F
1.8K
10K
Q006 2SA1037(R)
C020 1μ (50V)
R025 470
VIDEO OUT
AUDIO MUTE
R015 2.2K
SF003 SFE5.5MC (5.5MHz)
R027 1K
C021 47P
C022 47P
L007 3.3μH

TIMER CIRCUIT DIAGRAM
OPERATION CIRCUIT DIAGRAM

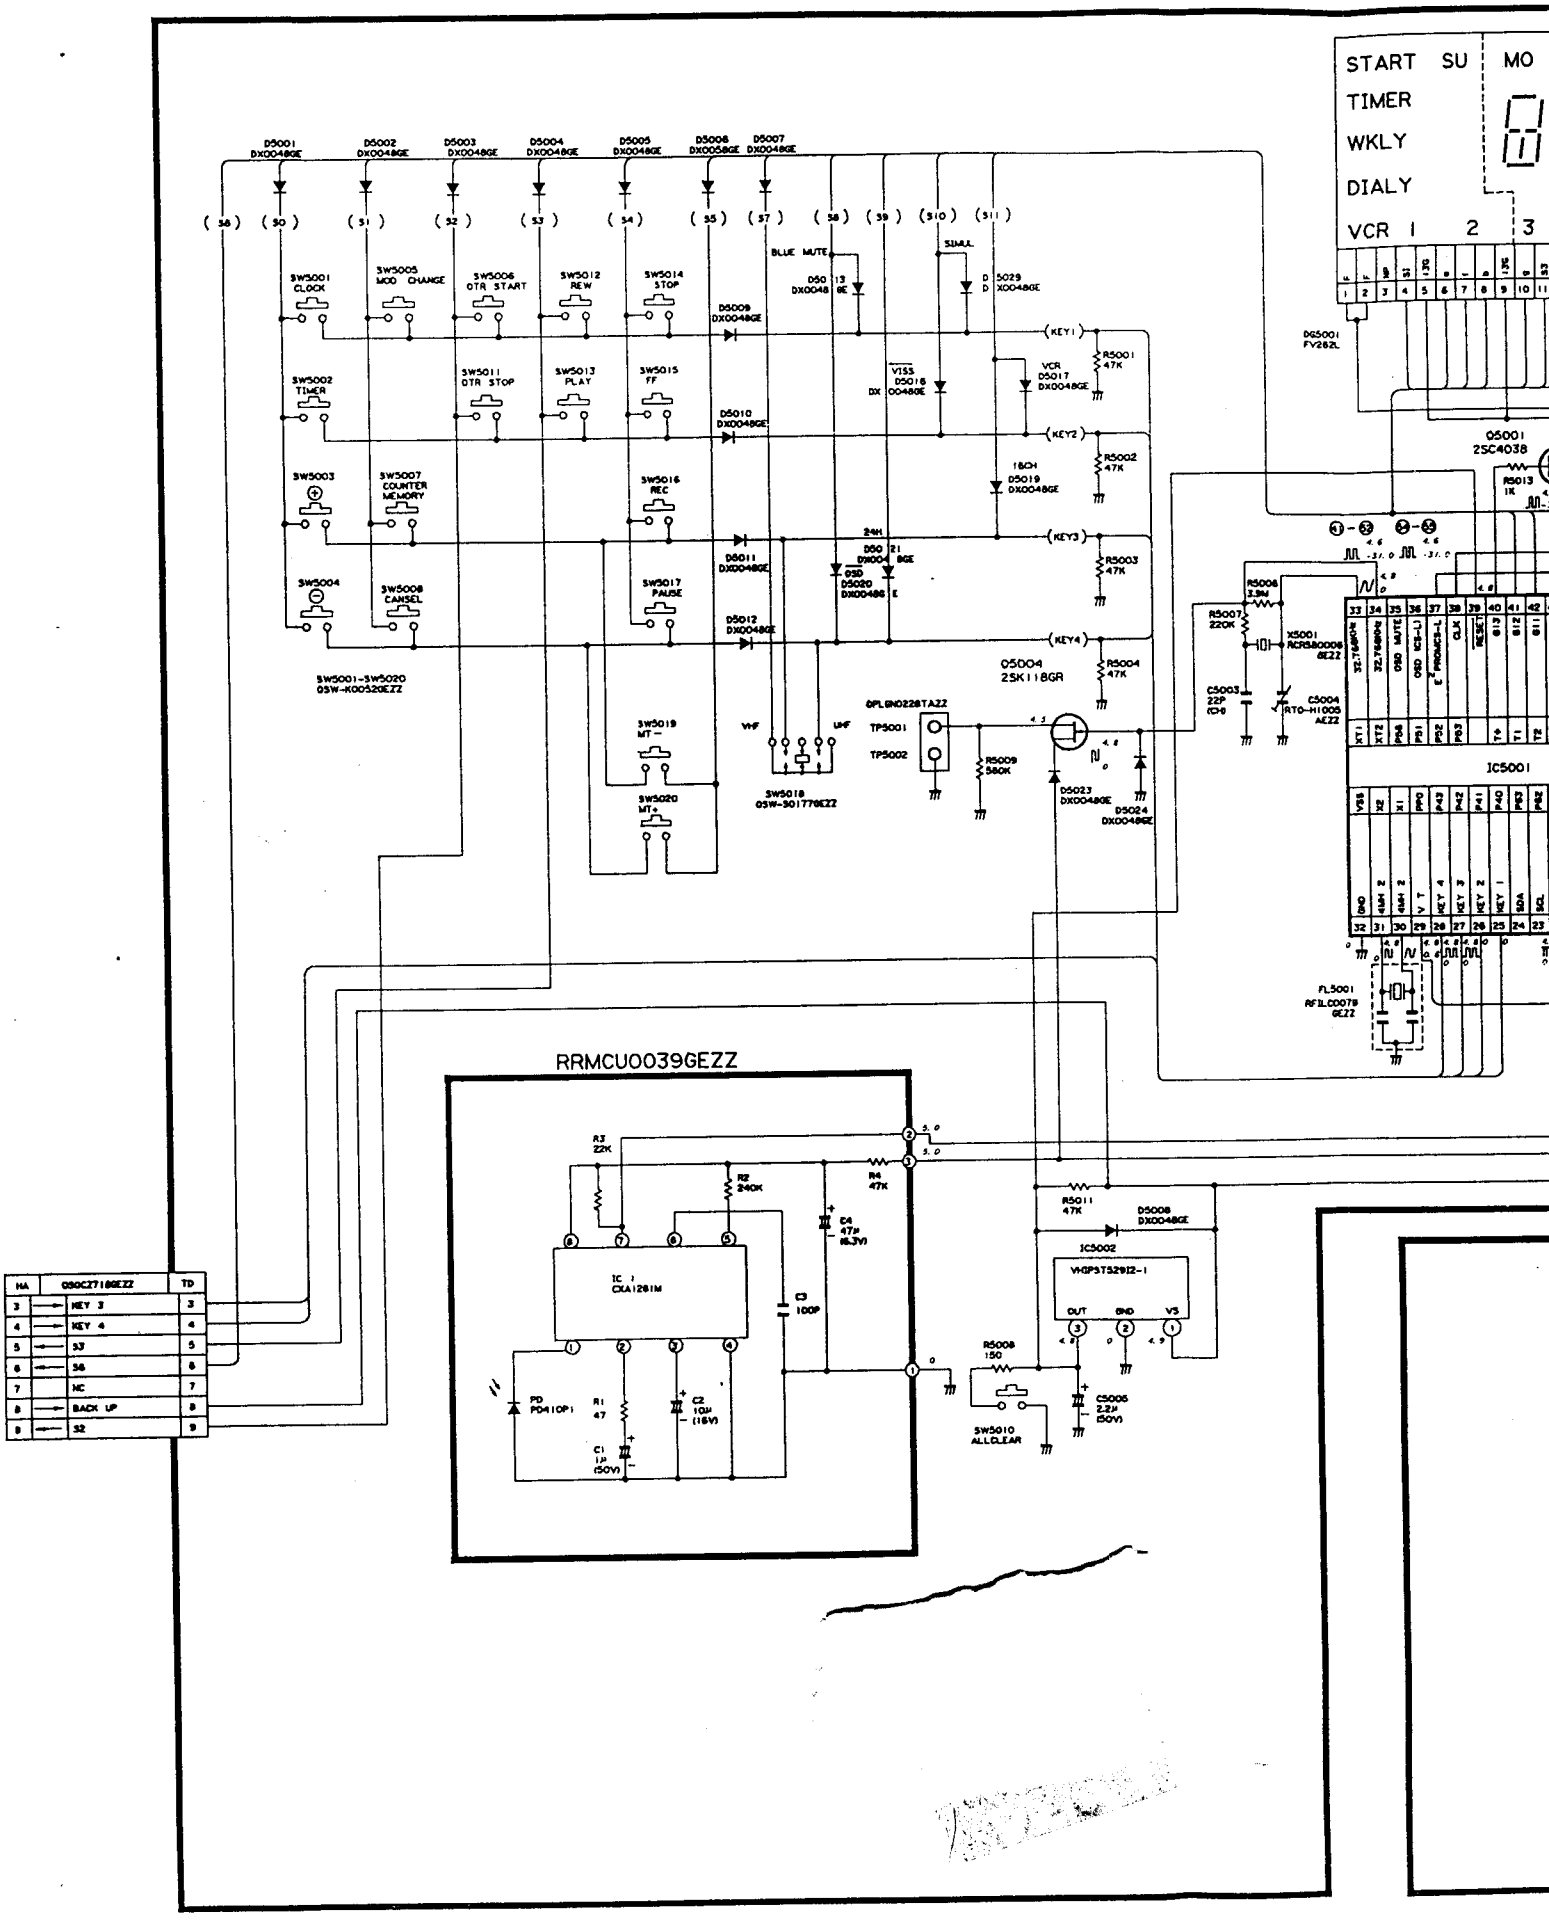

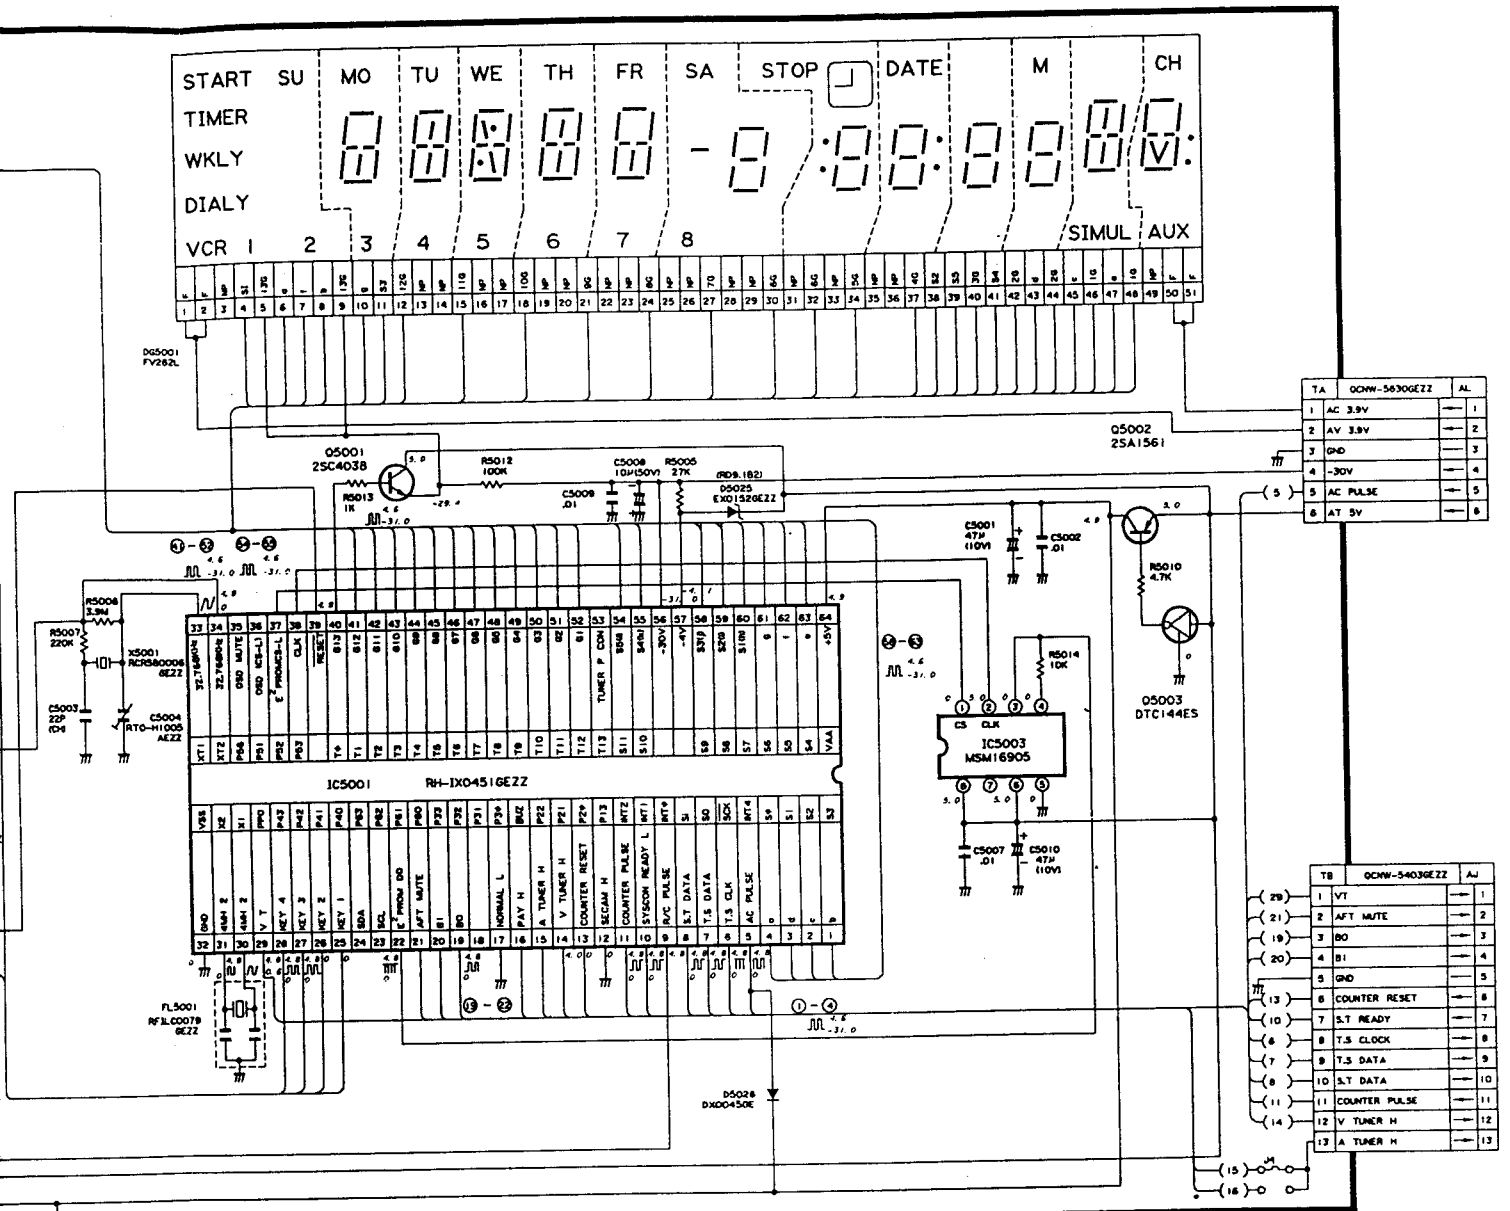
START SU MO TU WE TH FR SA STOP DATE M CH
TIMER
WKLY
DIALY
VCR 1 2 3 4 5 6 7 8
SIMUL AUX
Q5001
2SC4038
Q5002
2SA1561
Q5003
DTC144ES
IC5001 RH-IX0451GEZZ
IC5003
MSM16905
X5001
RCR580006
6EZZ
FL5001
RFILC0079
6EZZ
D5025
EX01520EZZ
D5028
DX00450E
TA QCNW-5630GEZZ AL
1 AC 3.9V
2 AV 3.9V
3 GND
4 -30V
5 AC PULSE
6 AT 5V
TB QCNW-5403GEZZ AJ
1 VT
2 AFT MUTE
3 BO
4 BI
5 GND
6 COUNTER RESET
7 S.T READY
8 T.S CLOCK
9 T.S DATA
10 S.T DATA
11 COUNTER PULSE
12 V TUNER H
13 A TUNER H

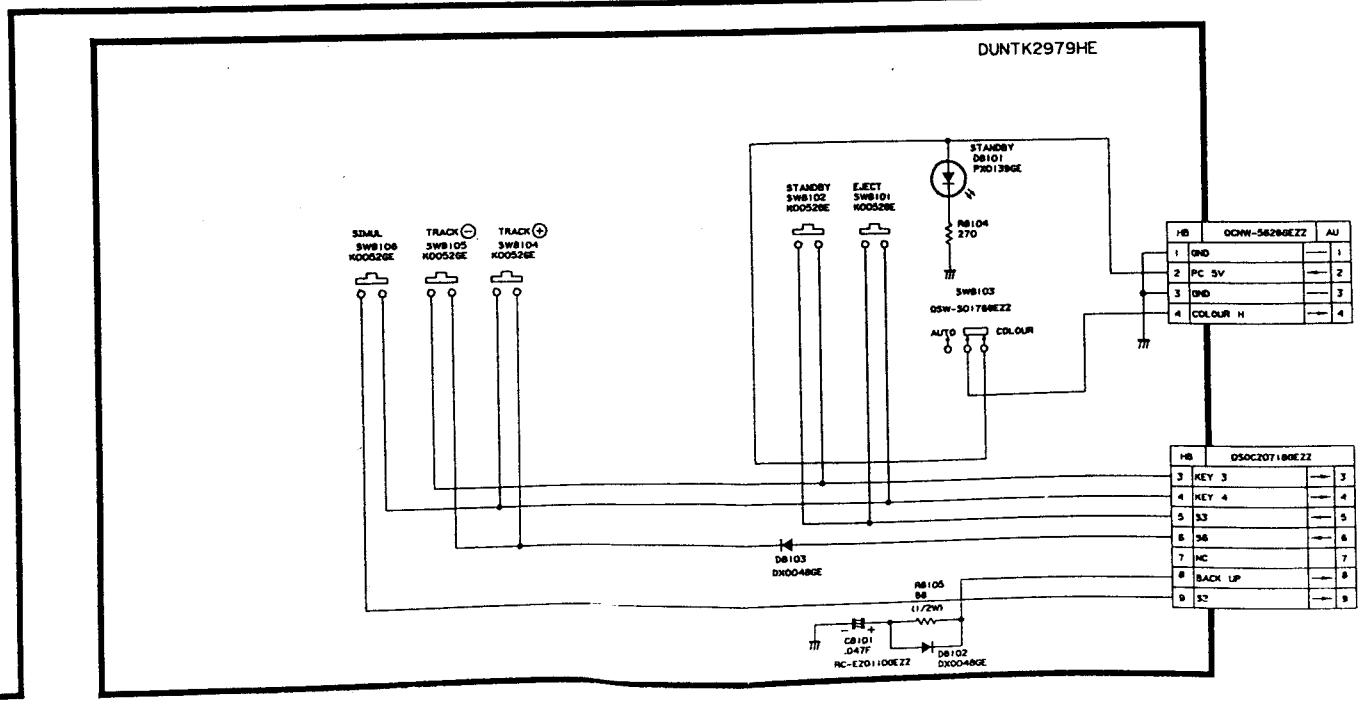
DUNTK2979HE
STANDBY
D8101
PMD139GE
STANDBY
SWB102
K00528E
EJECT
SWB101
K00528E
SIMUL
SWB106
K00528E
TRACK ⊖
SWB105
K00528E
TRACK ⊕
SWB104
K00528E
R8104
270
SWB103
QSW-301788EZZ
AUTO
COLOUR
D8103
DX00480E
R8105
68
(1/2W)
C8101
.047F
RC-EZ01100EZZ
D8102
DX00480E
HB QCNW-5628GEZZ AU
1 GND
2 PC 5V
3 GND
4 COLOUR H
HB D50C207180EZZ
3 KEY 3
4 KEY 4
5 S3
6 S6
7 NC
8 BACK UP
9 S2

HEAD AMPLIFIER CIRCUIT DIAGRAM

——— Playback Luminance signal
– – – – Playback Chrominance signal

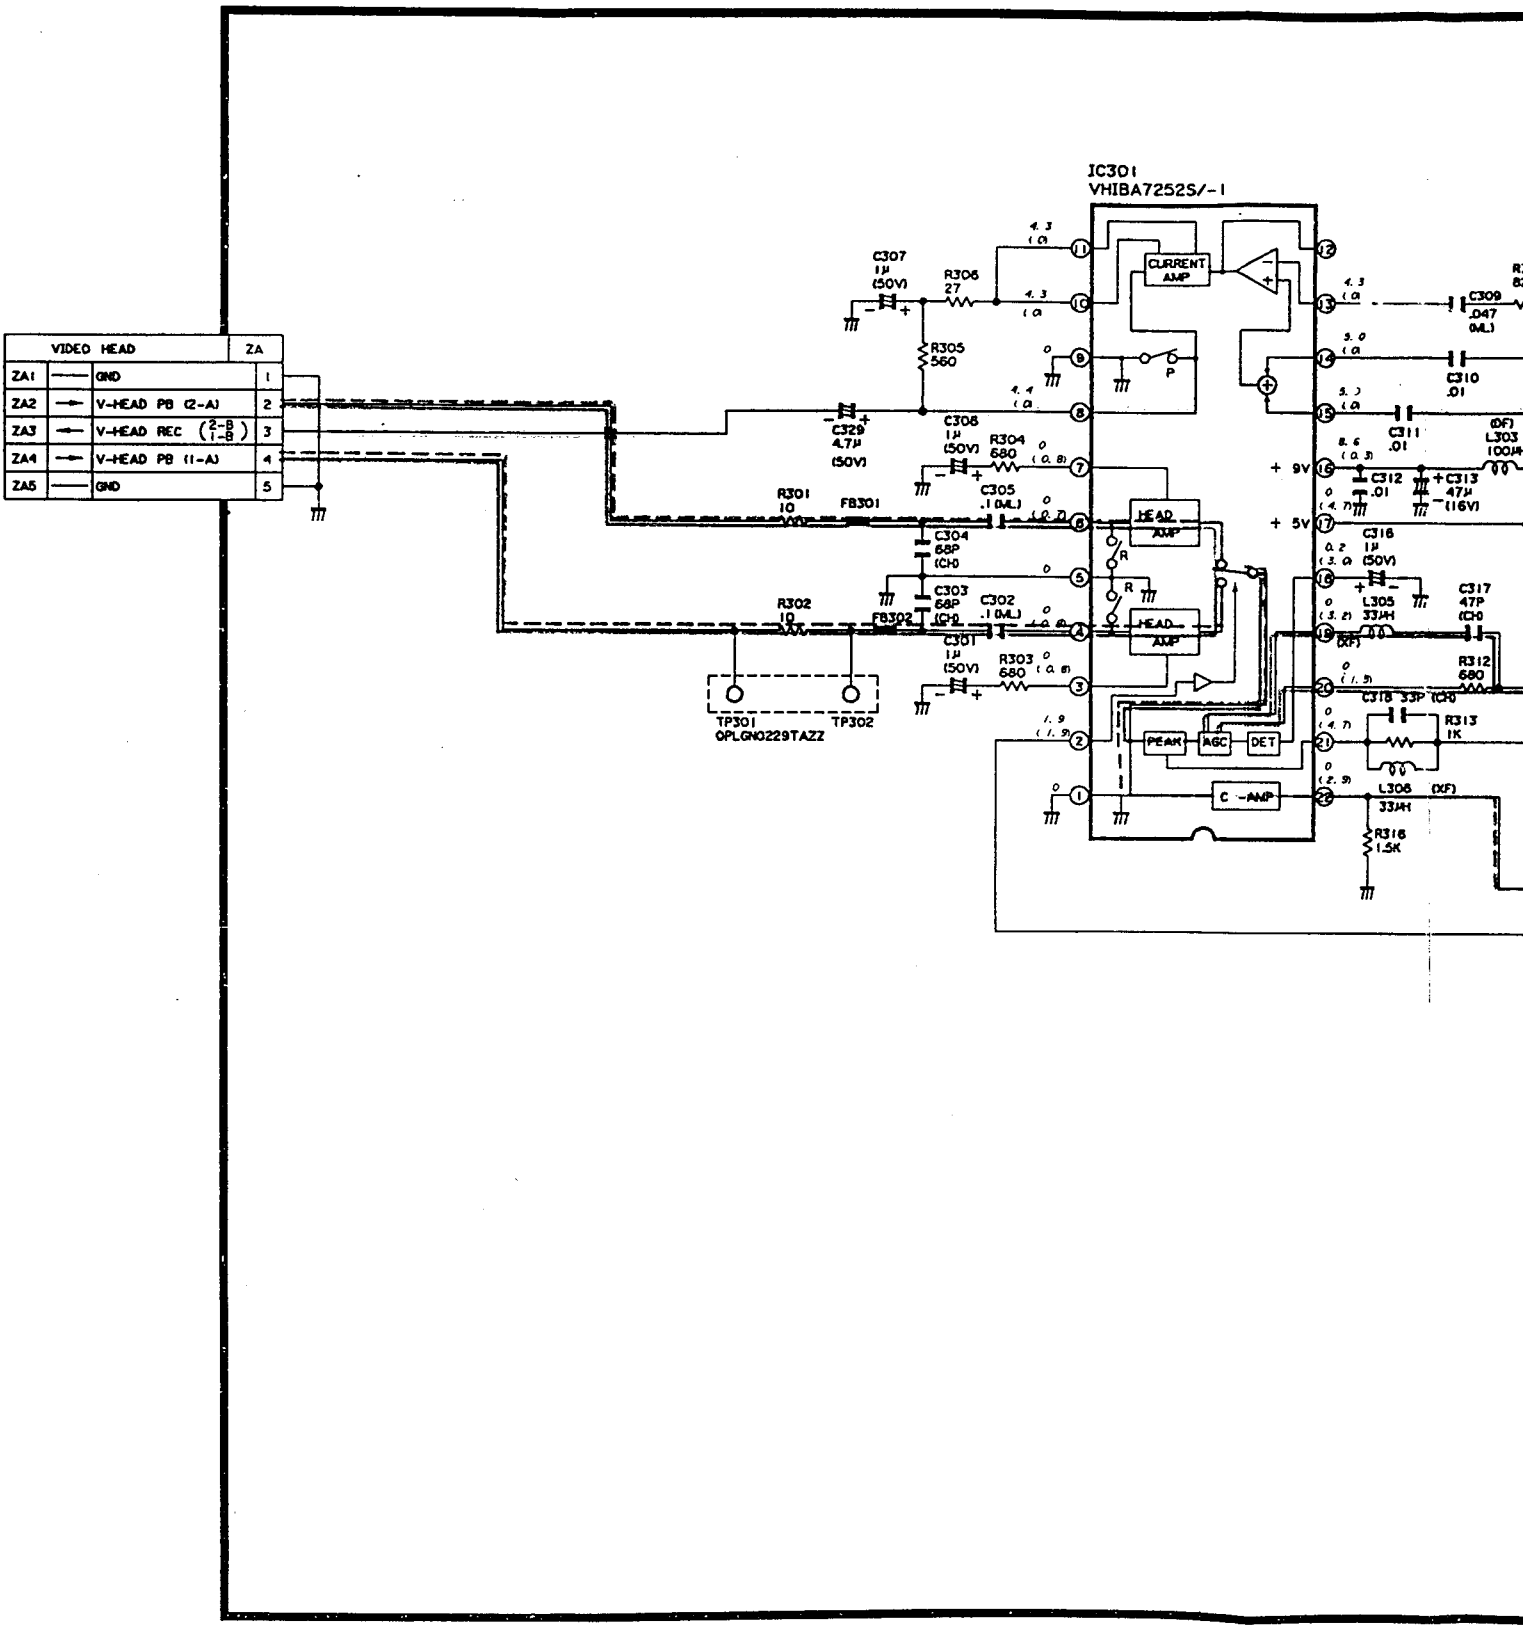

——— Playback Luminance signal
– – – – Playback Chrominance signal

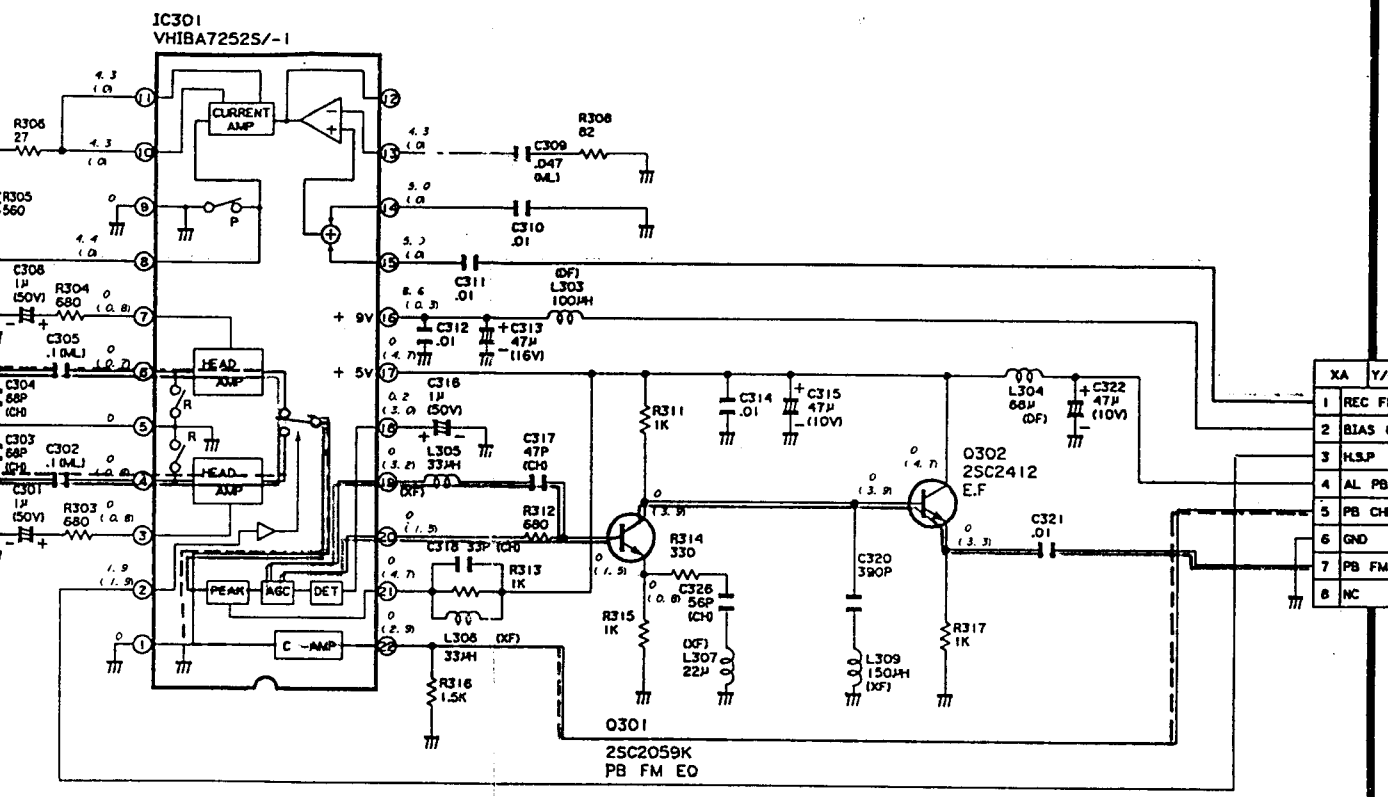

XA	Y/C.AUDIO		CE
1	REC FM	←	1
2	BIAS CTL 9V	←	2
3	H.SJP	←	3
4	AL PB 5V	←	4
5	PB CHROMA	←	5
6	GND	—	6
7	PB FM	→	7
8	NC		8

POWER CIRCUIT DIAGRAM

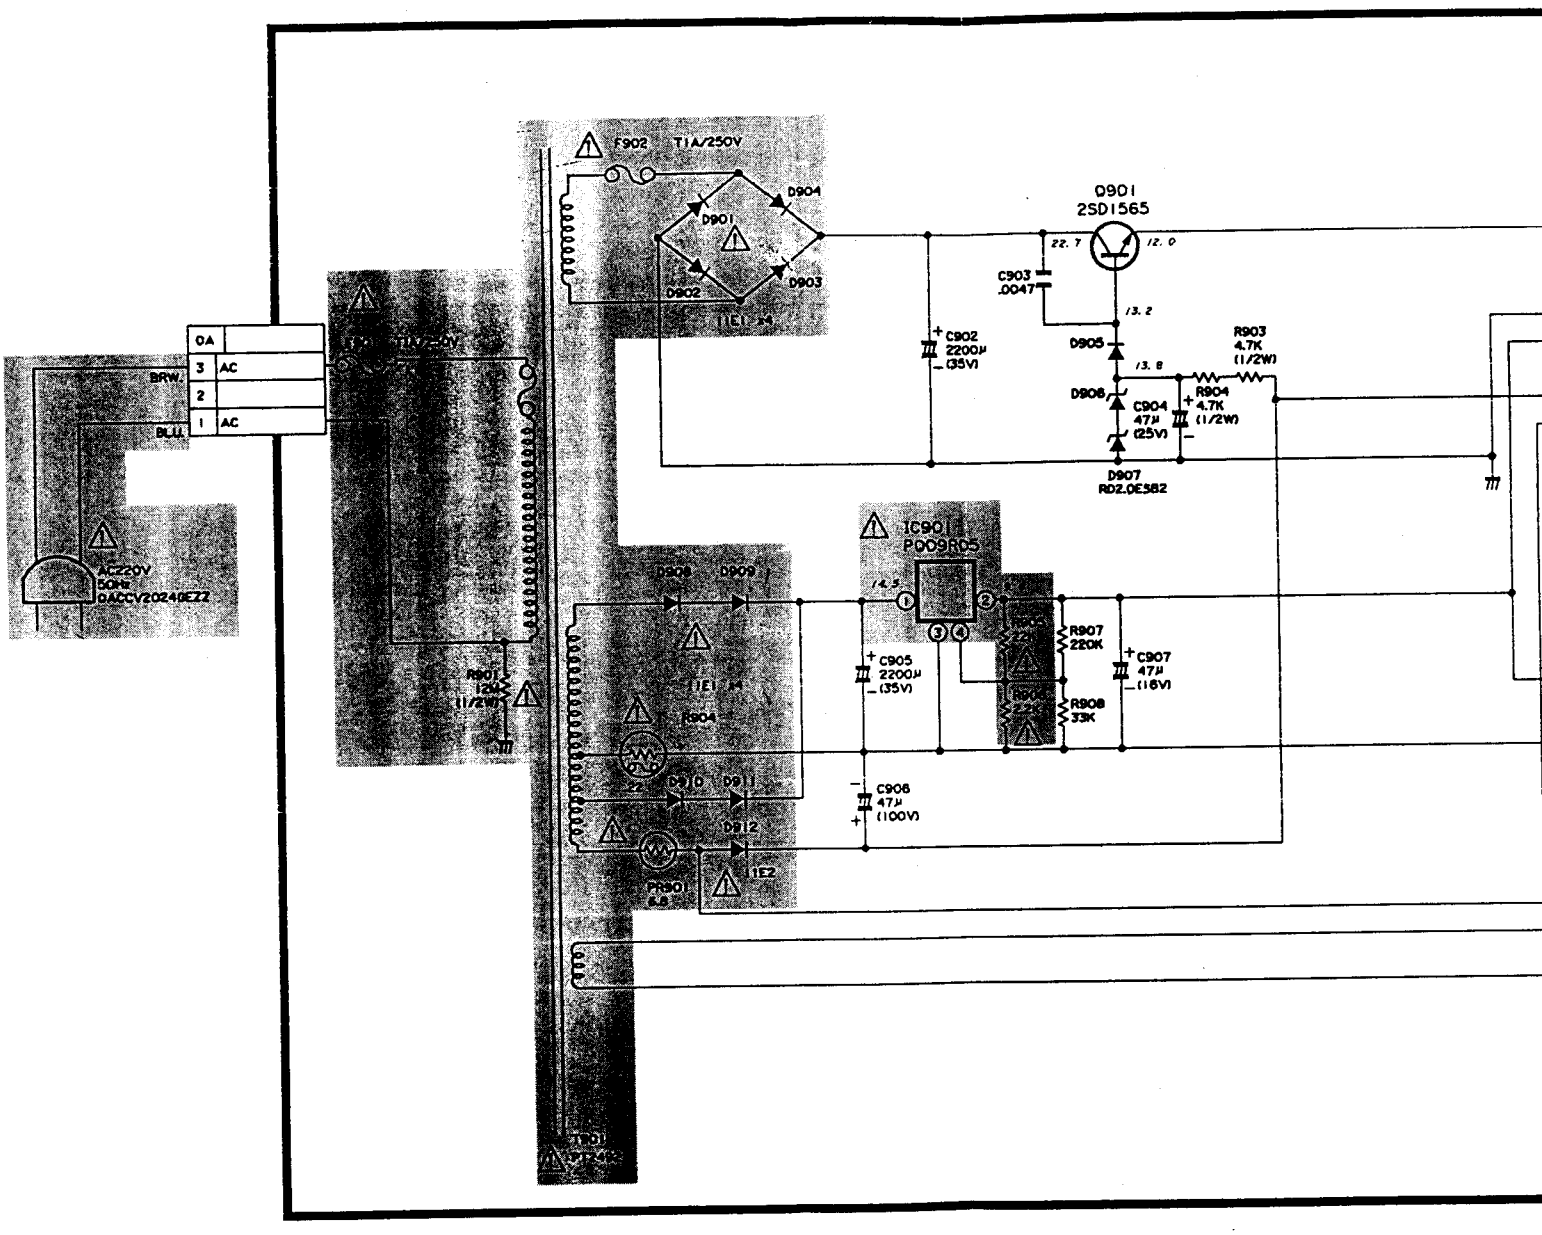

RCUIT DIAGRAM

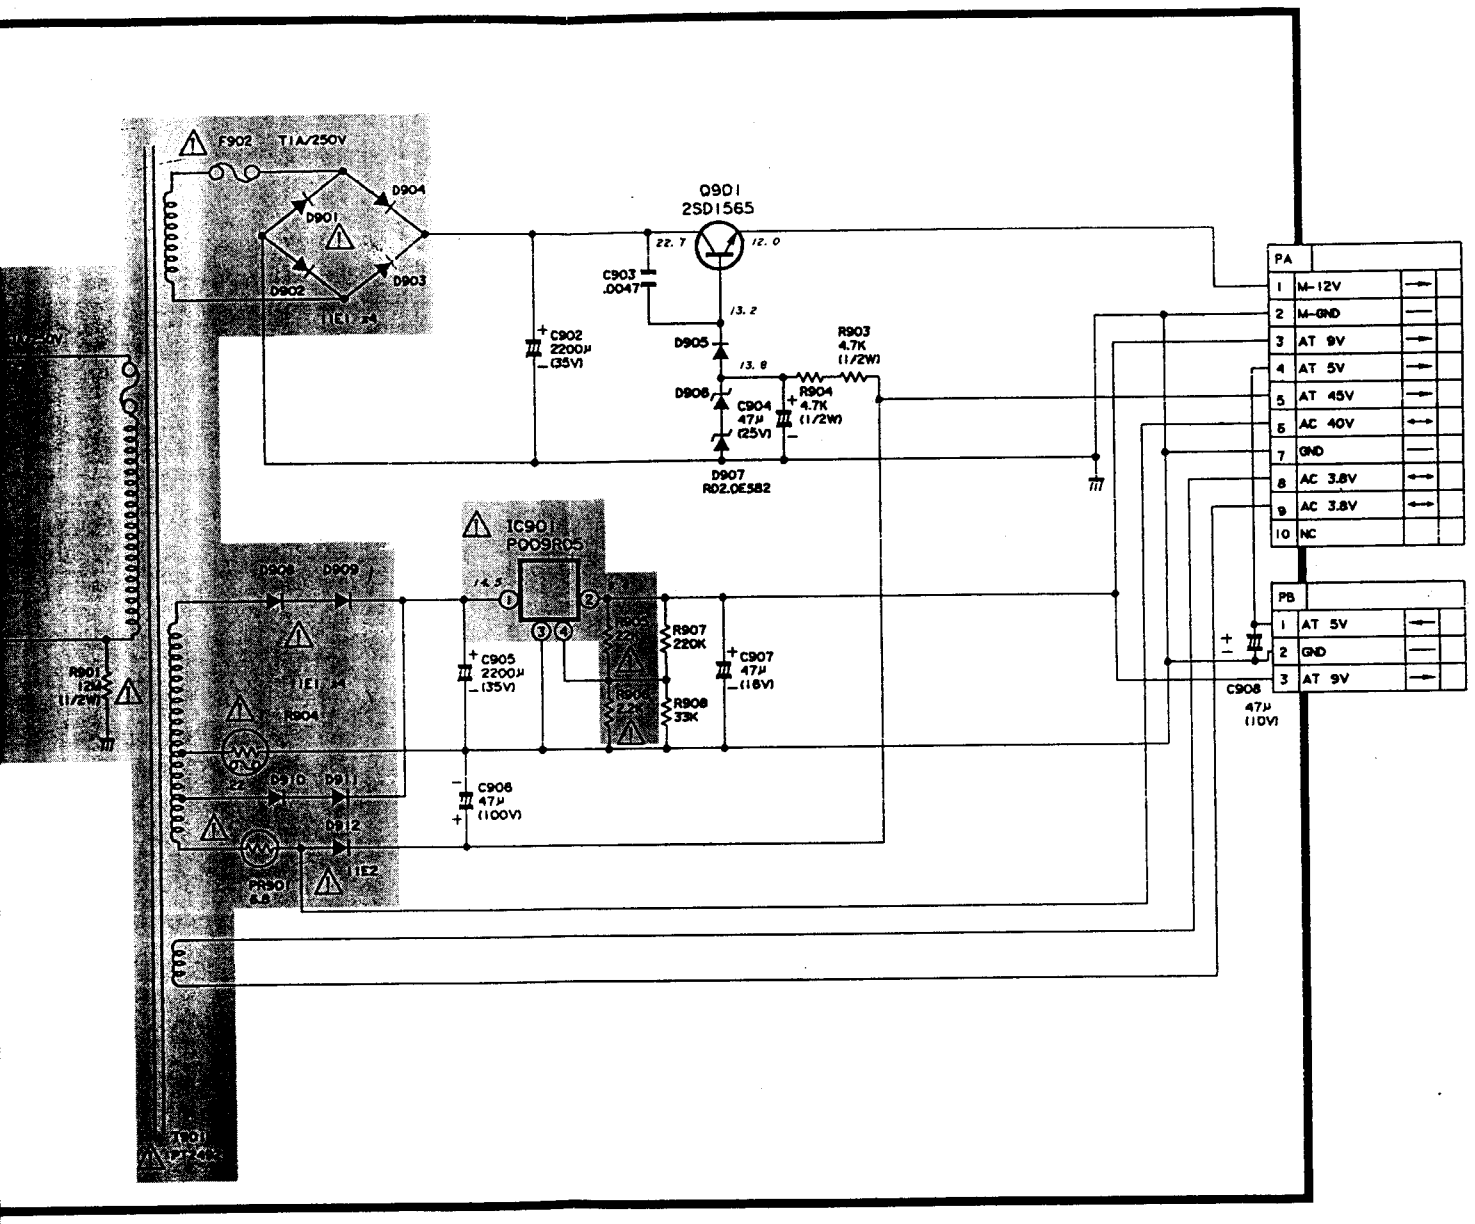

SERVO, SYSTEM CONTROL, IF TUNER CIRCUIT

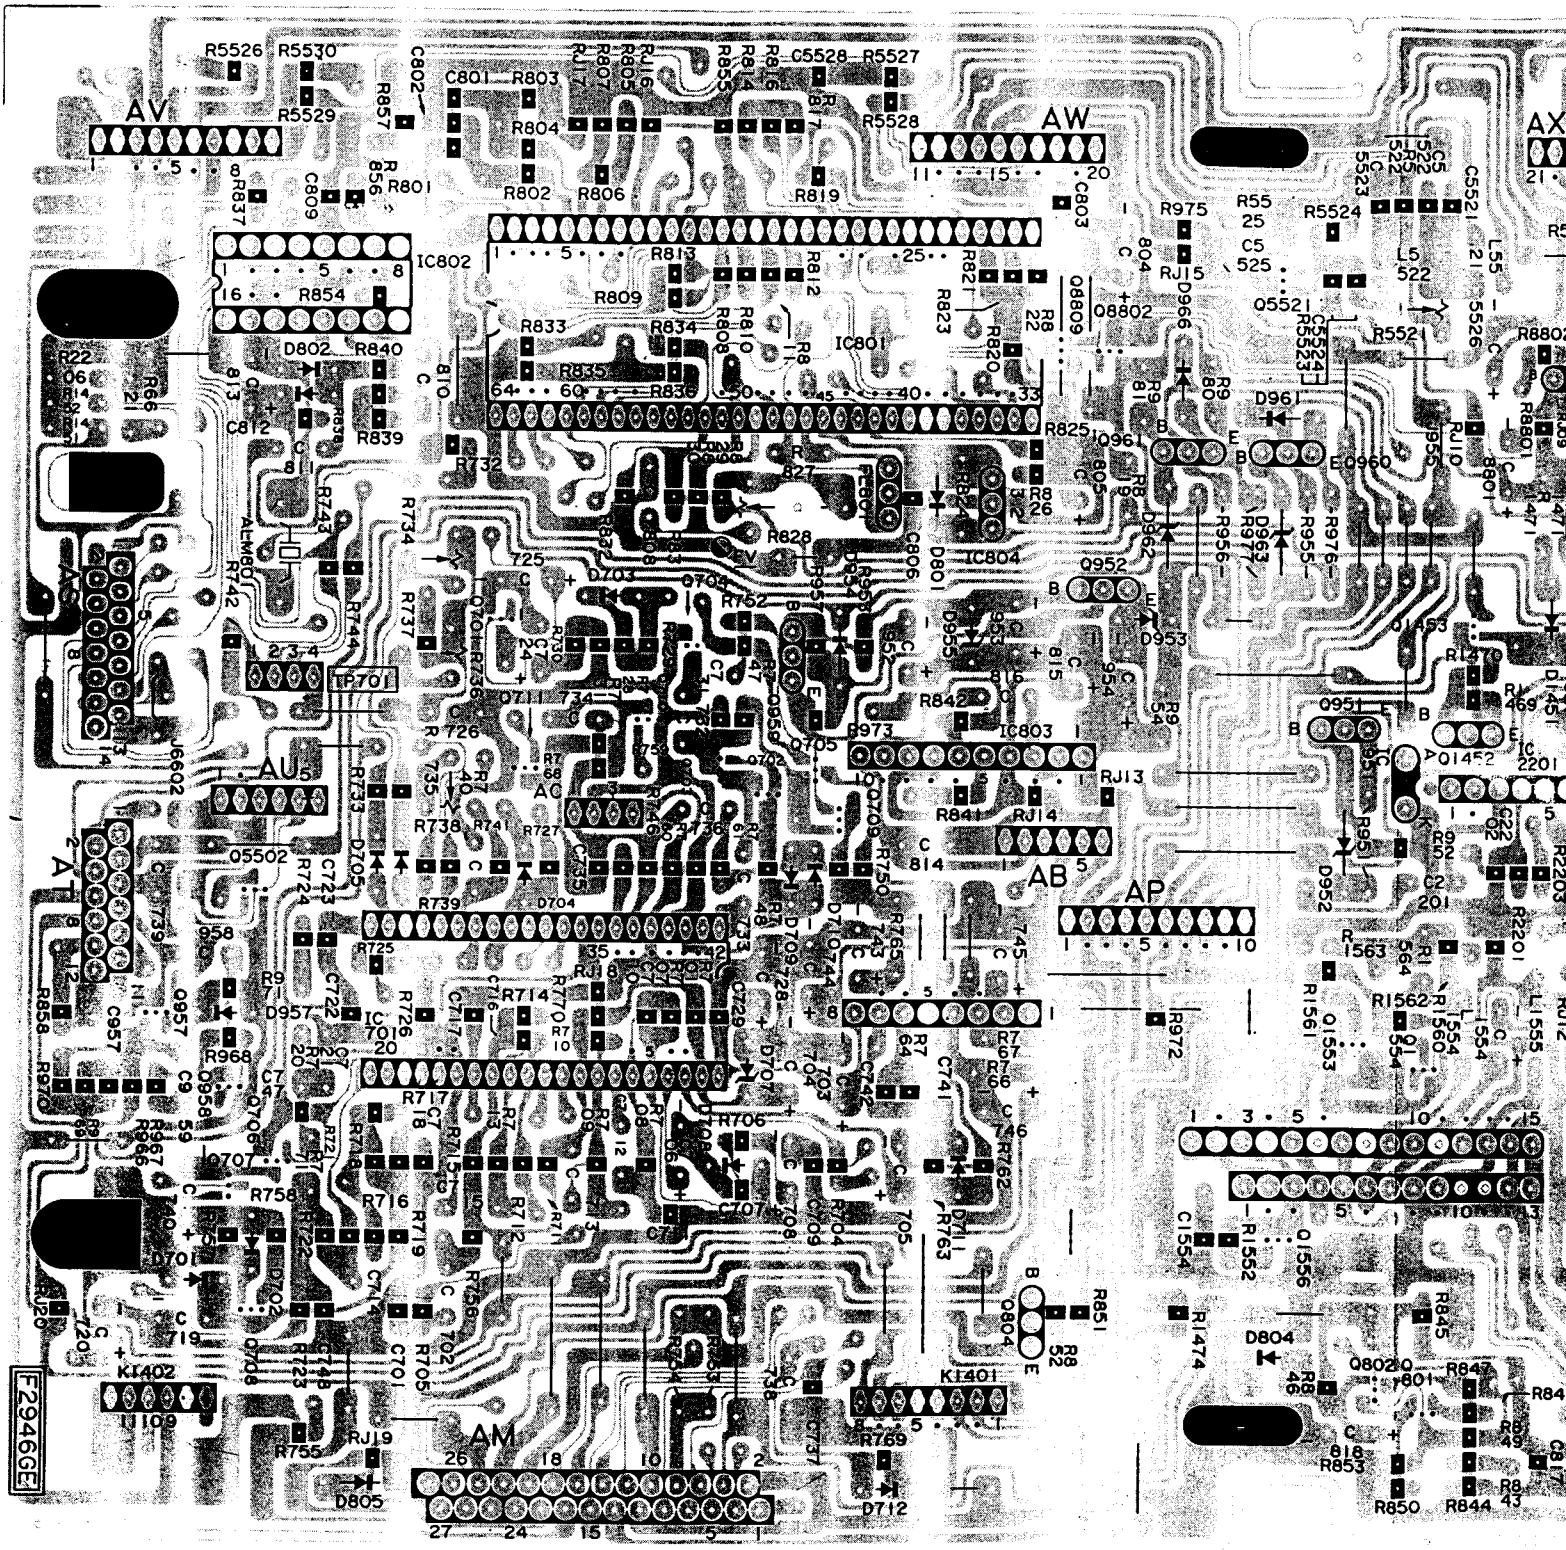

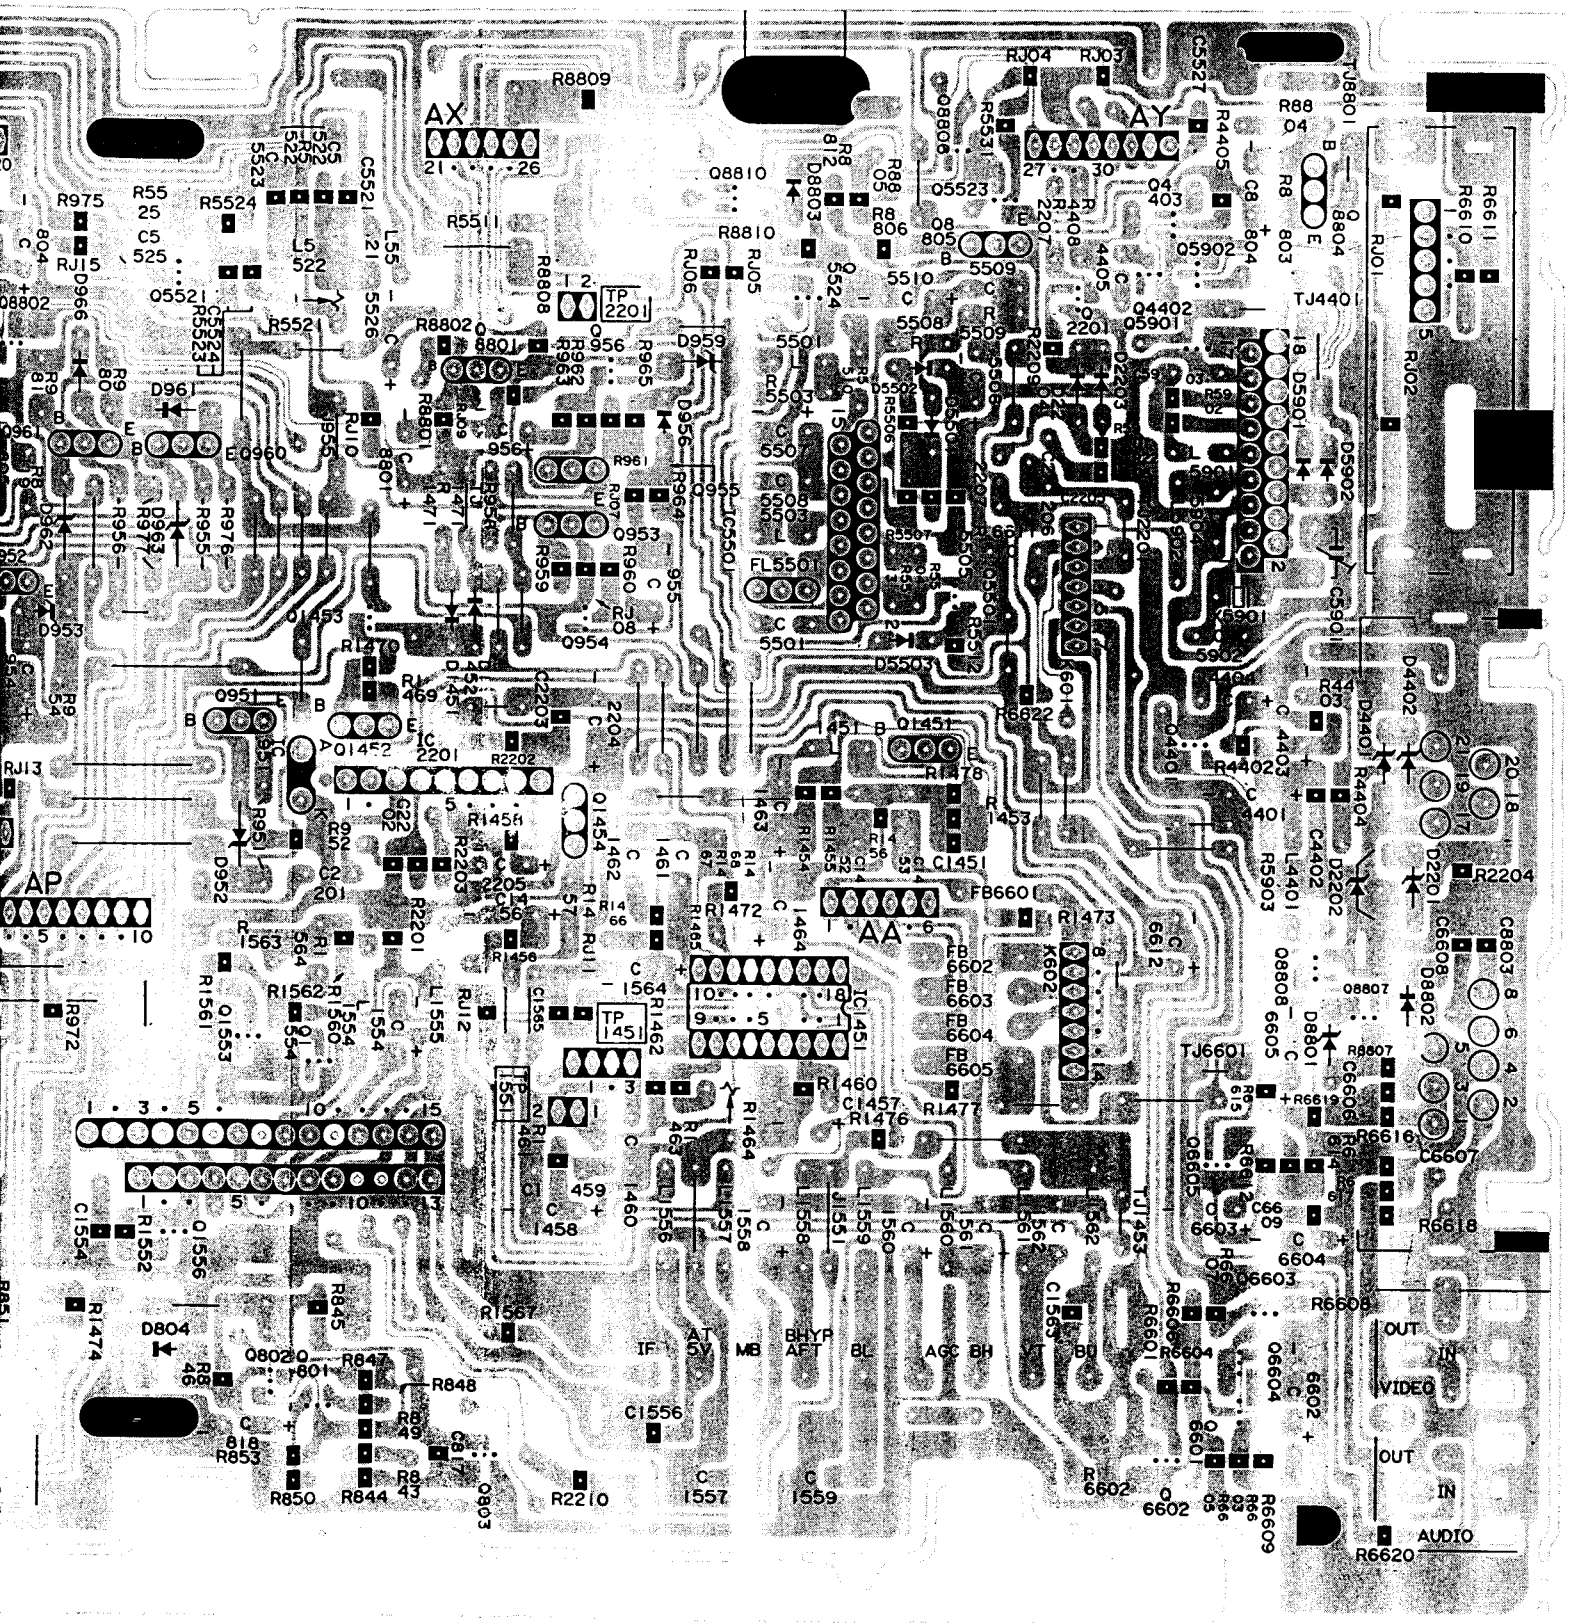
AX
AY
AP
AA
IC 2201
IC 1451
TP 2201
TP 1451
TP 1551
FL 5501
TJ 8801
TJ 4401
TJ 5901
TJ 6601
TJ 1453
OUT
IN
VIDEO
AUDIO
AT
5V
MB
AFT
BL
AGC
BH
VT
BU

SERVO, SYSTEM CONTROL, IF TUNER CIRCUIT

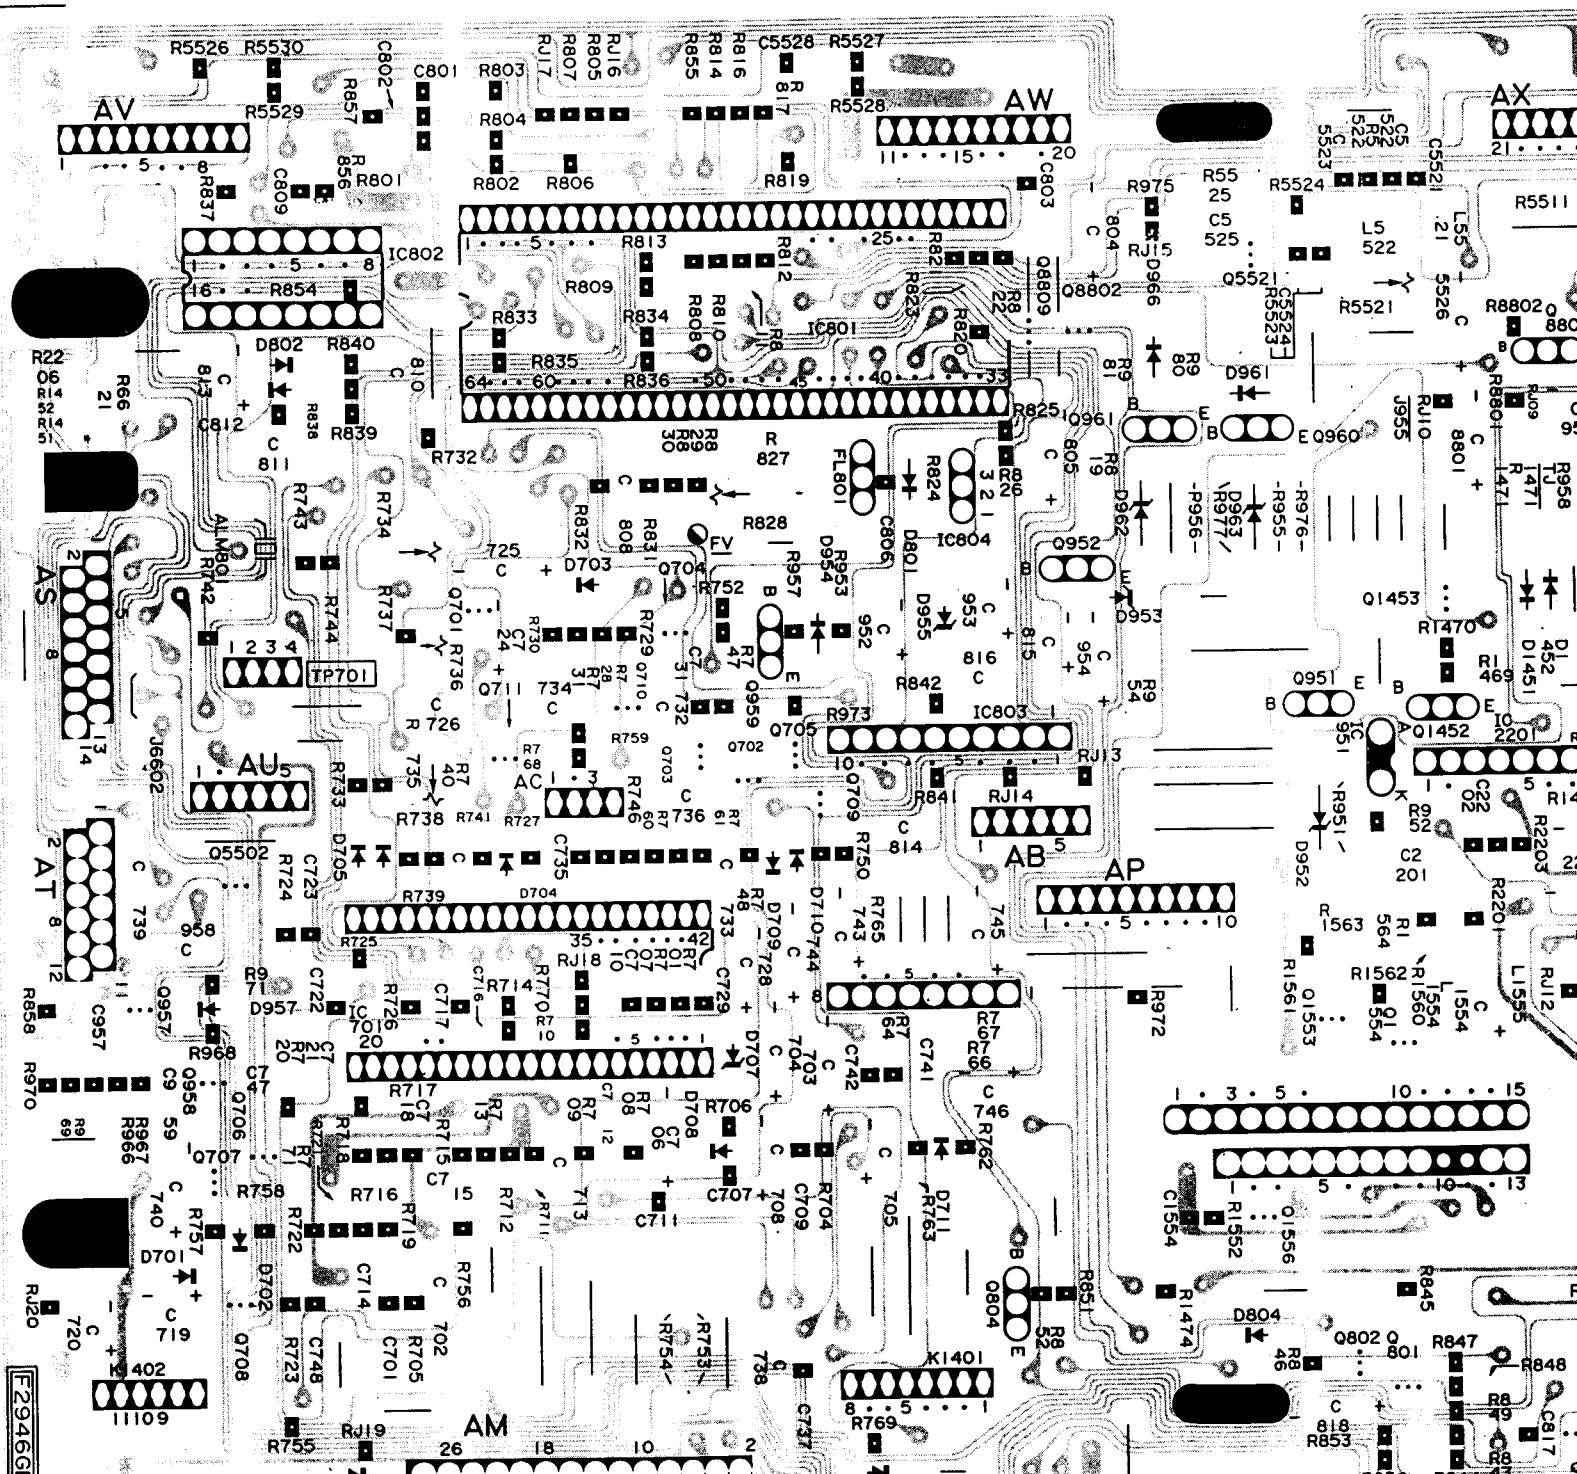

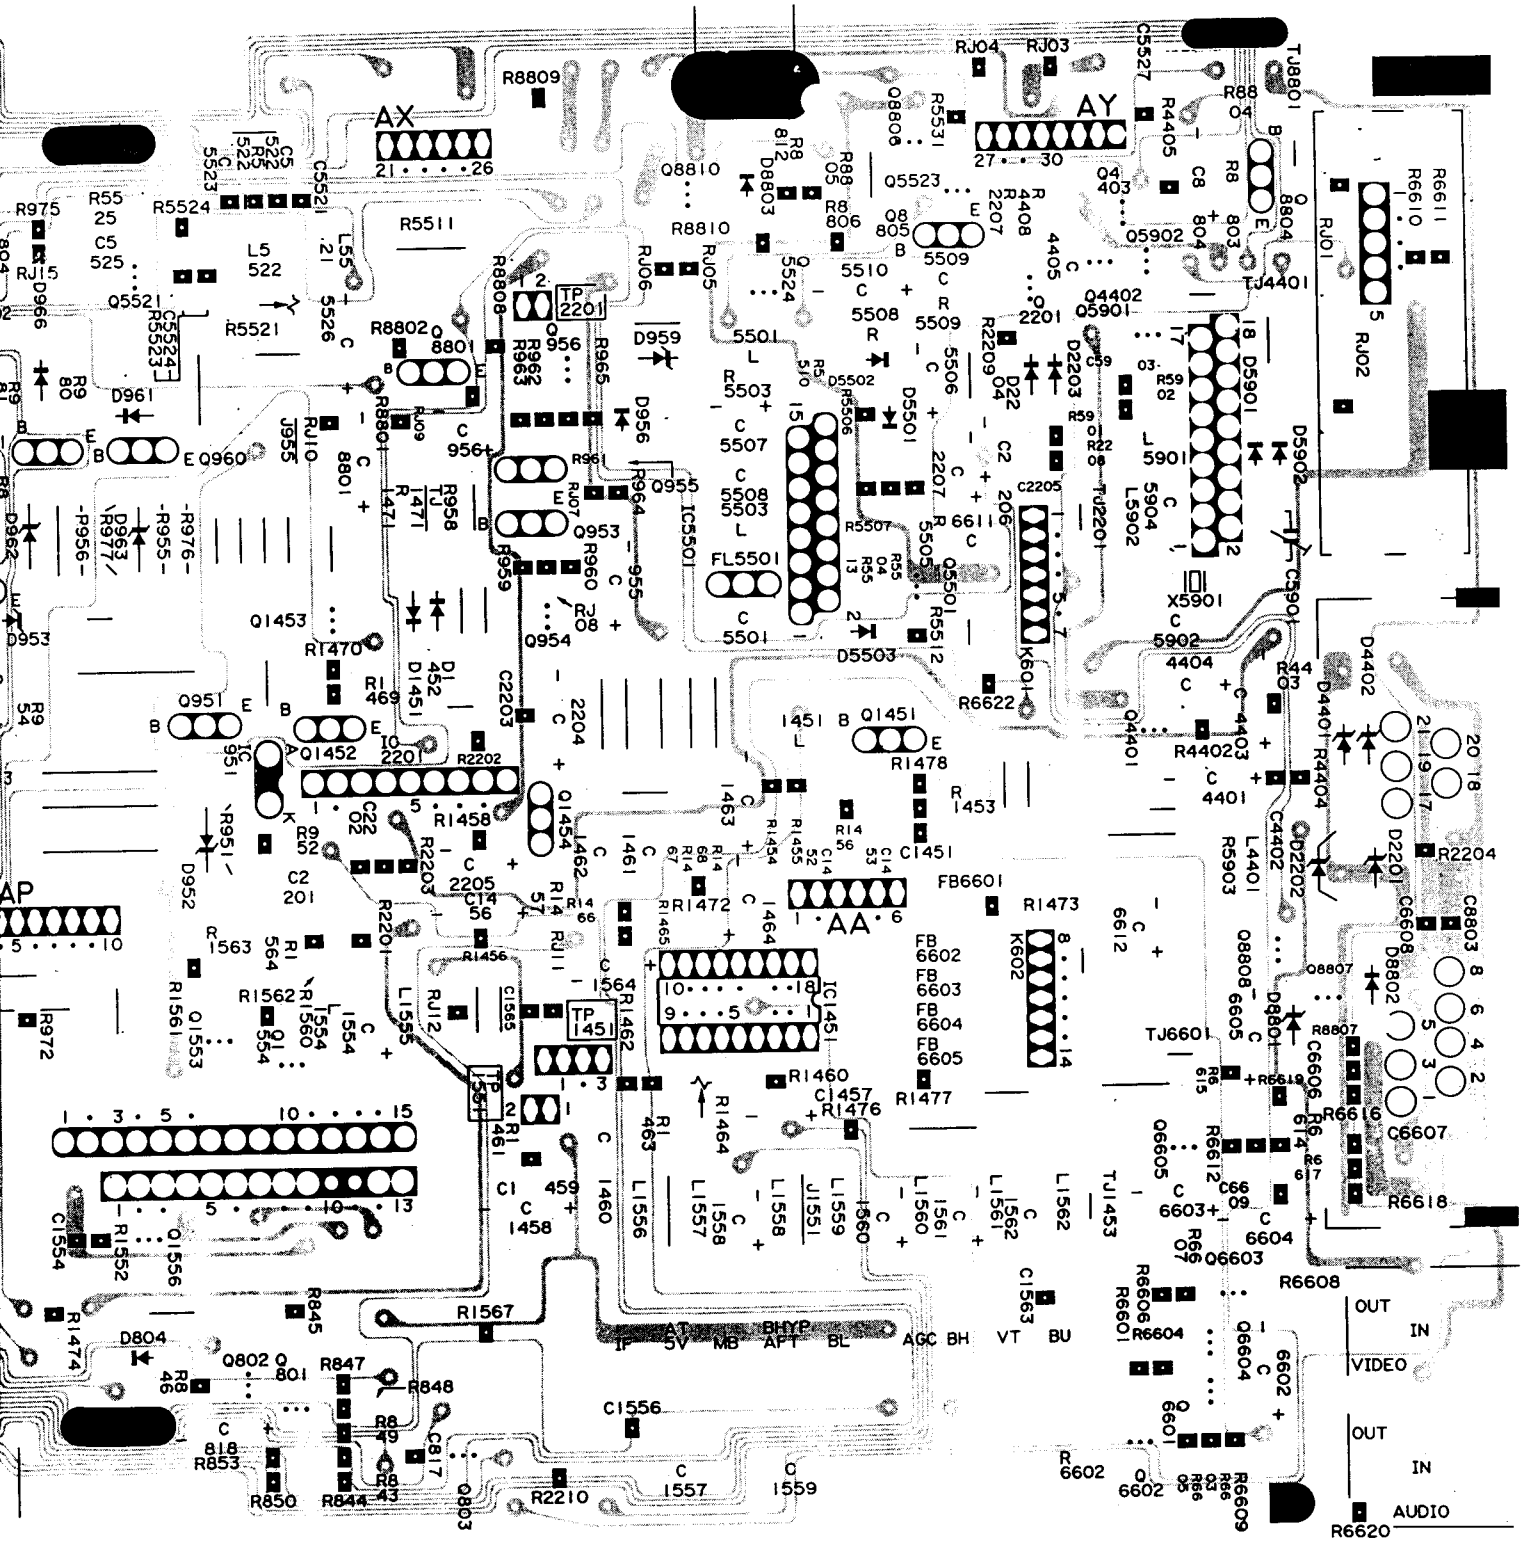
AX
AY
AP
TP 2201
TP 1451
TP 1551
IC 951
IC 5501
IC 1451
IC 220
FL5501
X5901
K601
K602
FB6601
FB 6602
FB 6603
FB 6604
FB 6605
TJ6601
TJ4401
TJ2201
TJ1453
J955
J1551
R8809
R8810
R1567
R1556
R1557
R1558
R1559
R1560
R1561
R1562
R1563
R1564
R1565
R1566
R1567
C1554
C1556
C1557
C1559
C1563
R6616
C6607
R6618
R6608
R6620
OUT
IN
VIDEO
AUDIO
IF
5V
MB
APT
BL
AGC
BH
VT
BU

CS

LUMINANCE-CHROMINANCE CIRCUIT

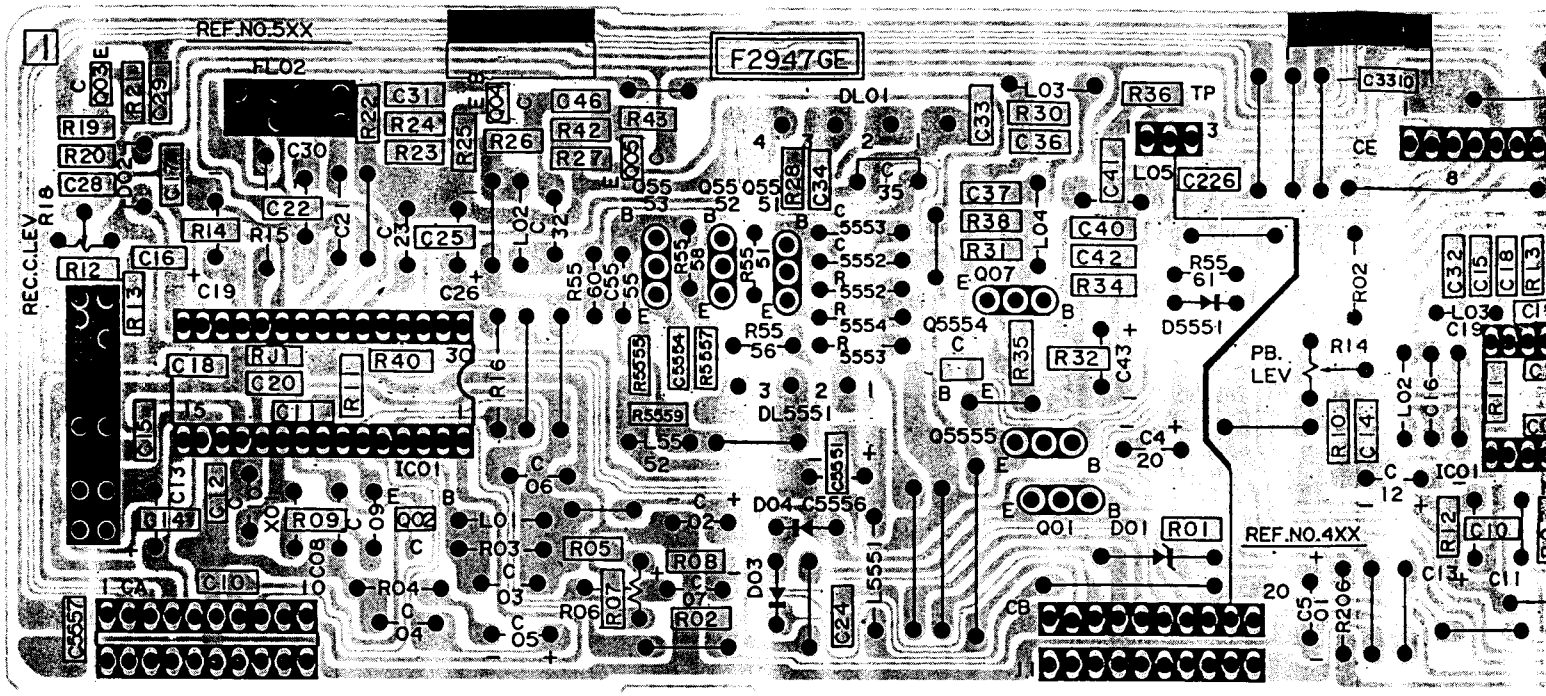

HEAD AMPLIFIER CIRCUIT

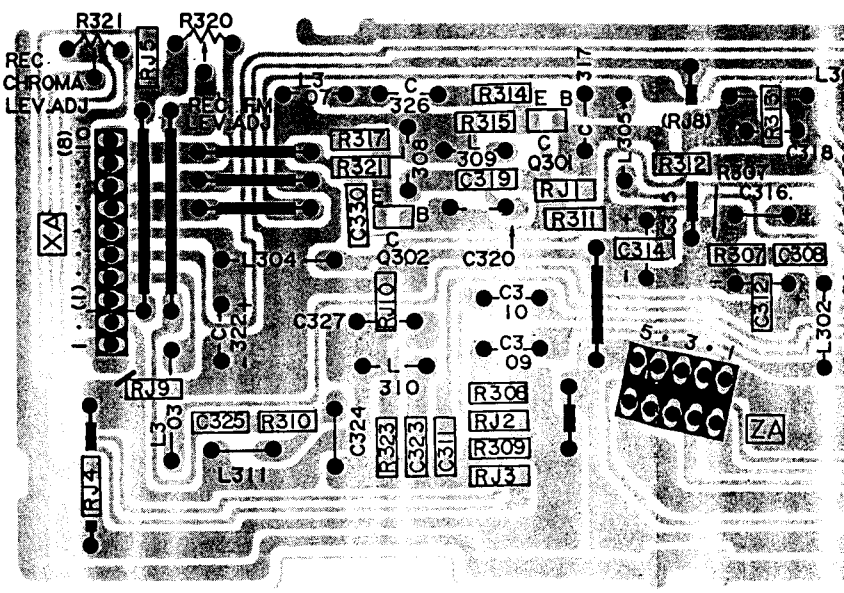

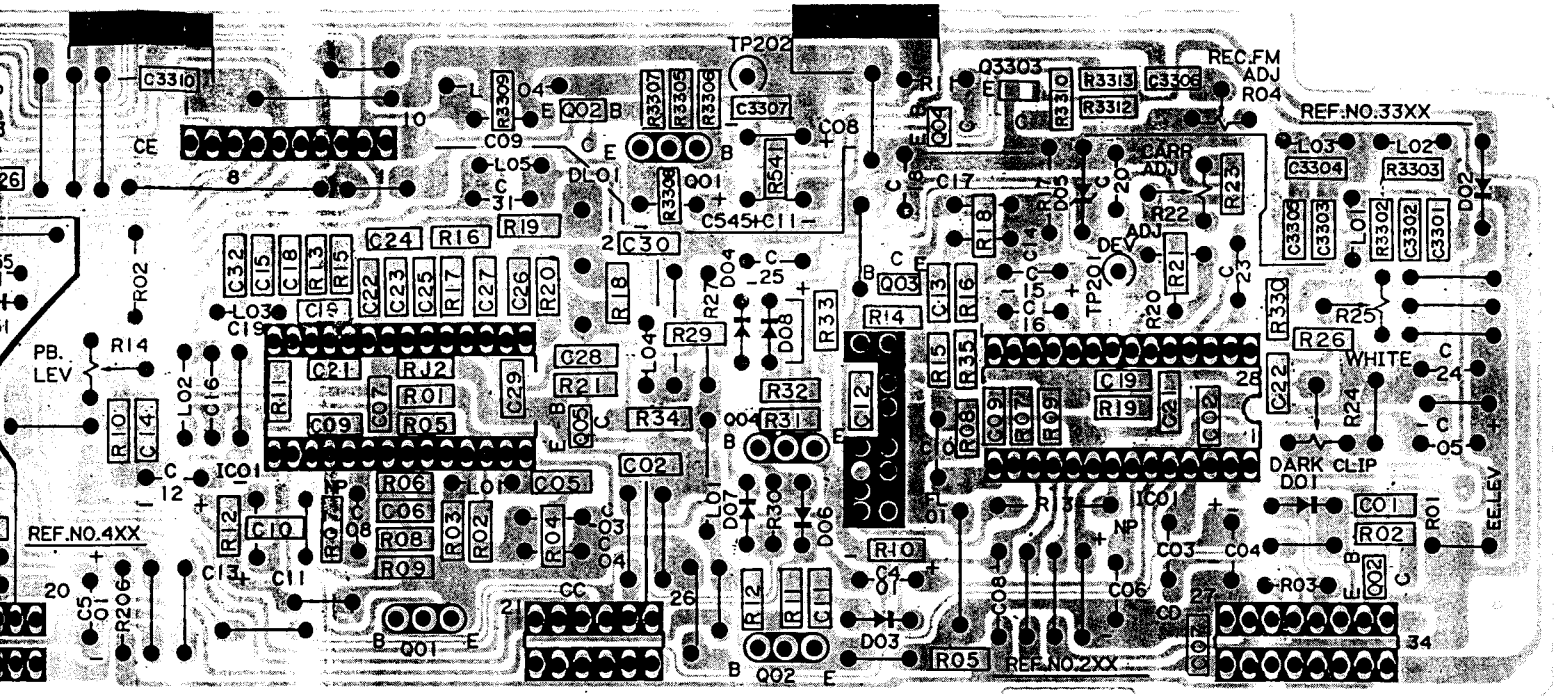
TP202
Q3303
REC.FM ADJ
R04
REF.NO.33XX
C3310
CE
C3307
CO8
CO9
DL01
Q001
C545
C11
R541
C3304
R3303
C3308
CARR ADJ
R23
R22
DEV ADJ
TP201
R21
R330
R25
R26
WHITE
C24
C22
R24
DARK CLIP
D01
C01
R02
R01
EE.LEV
C3309
Q002
C3307
R3308
R3307
R3305
R3310
R3313
R3312
C3306
C3305
C3303
C3302
C3301
D02
C30
R19
R18
R27
D04
D08
R33
R29
R32
R34
Q004
R31
C12
R14
C13
R15
R35
C19
R19
C21
C09
R07
R09
Q02
R08
C10
R12
R10
C14
R13
C15
C18
C17
R16
C16
C32
C24
R16
C22
C23
C25
R17
C27
C26
R20
C28
C29
R21
RJ2
R01
R05
C07
Q03
C08
Q08
R06
R03
R02
R04
C02
C03
C04
C05
L01
D07
R30
D06
R11
C11
D03
R05
REF.NO.2XX
ICO1
NP
CO3
CO4
CO6
CD
R03
Q07
34
REF.NO.4XX
C13
C11
CC
B Q01 E
B Q02 E
R206
C5
01
20
26
27
R02
R14
PB. LEV
L02
L03
L04
L05
L06
L07
L08
L09
L10
L11
L12
L13
L14
L15
L16
L17
L18
L19
L20
L21
L22
L23
L24
L25
L26
L27
L28
L29
L30
L31
L32
L33
L34
L35
L36
L37
L38
L39
L40
L41
L42
L43
L44
L45
L46
L47
L48
L49
L50
L51
L52
L53
L54
L55
L56
L57
L58
L59
L60
L61
L62
L63
L64
L65
L66
L67
L68
L69
L70
L71
L72
L73
L74
L75
L76
L77
L78
L79
L80
L81
L82
L83
L84
L85
L86
L87
L88
L89
L90
L91
L92
L93
L94
L95
L96
L97
L98
L99
L100

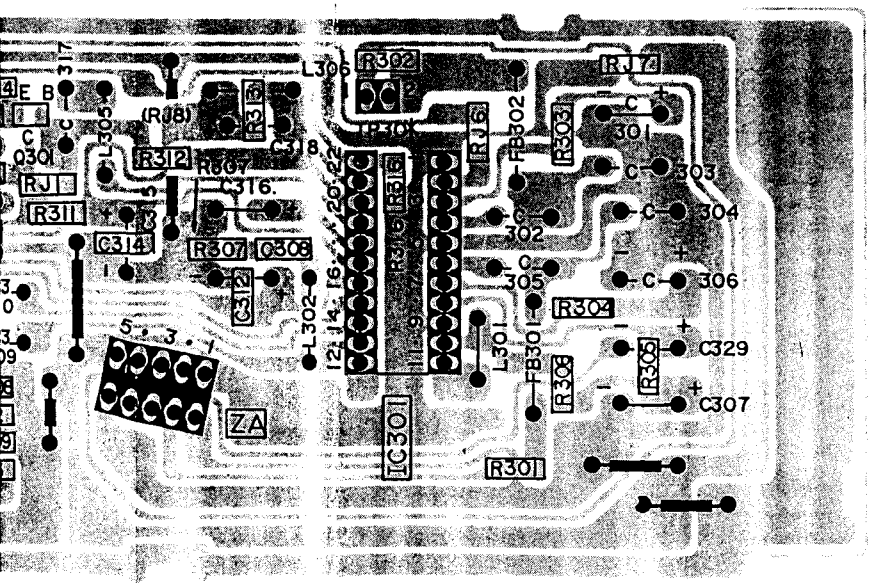
L306
R302
RJ7
(RJ8)
TP301
RJ6
R3302
R303
C301
Q303
C302
304
C305
306
R304
C329
R305
C307
R308
R301
IC301
ZA
Q301
RJ
R312
R311
C316
C314
R307
Q308
C312
L302
L301
R3301
5 3 1
12 14 16 18 20 22

OPERATION CIRCUIT

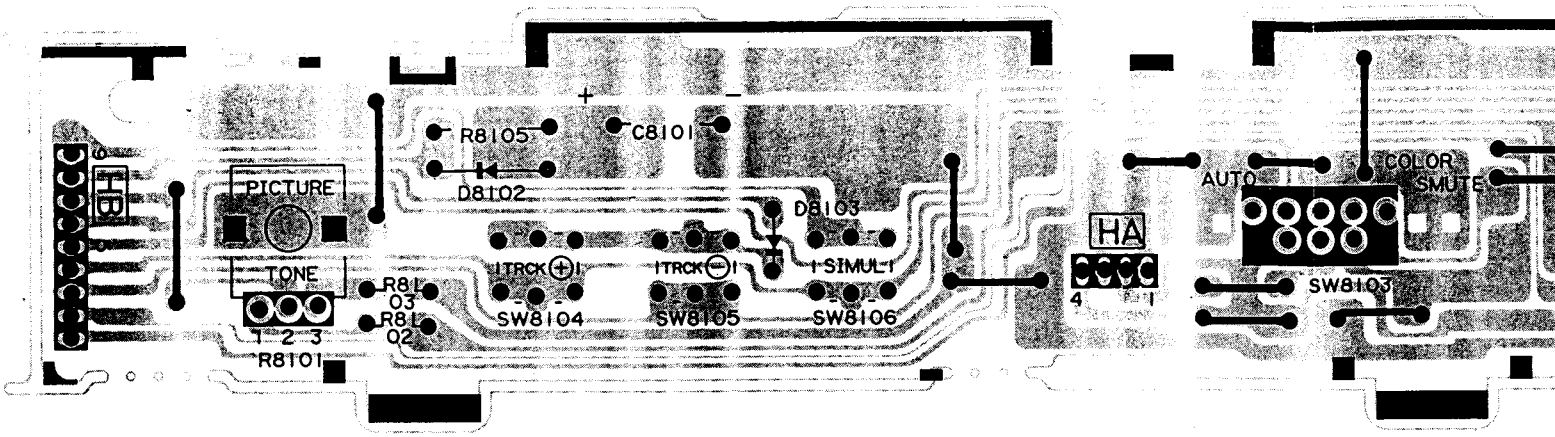

TIMER CIRCUIT

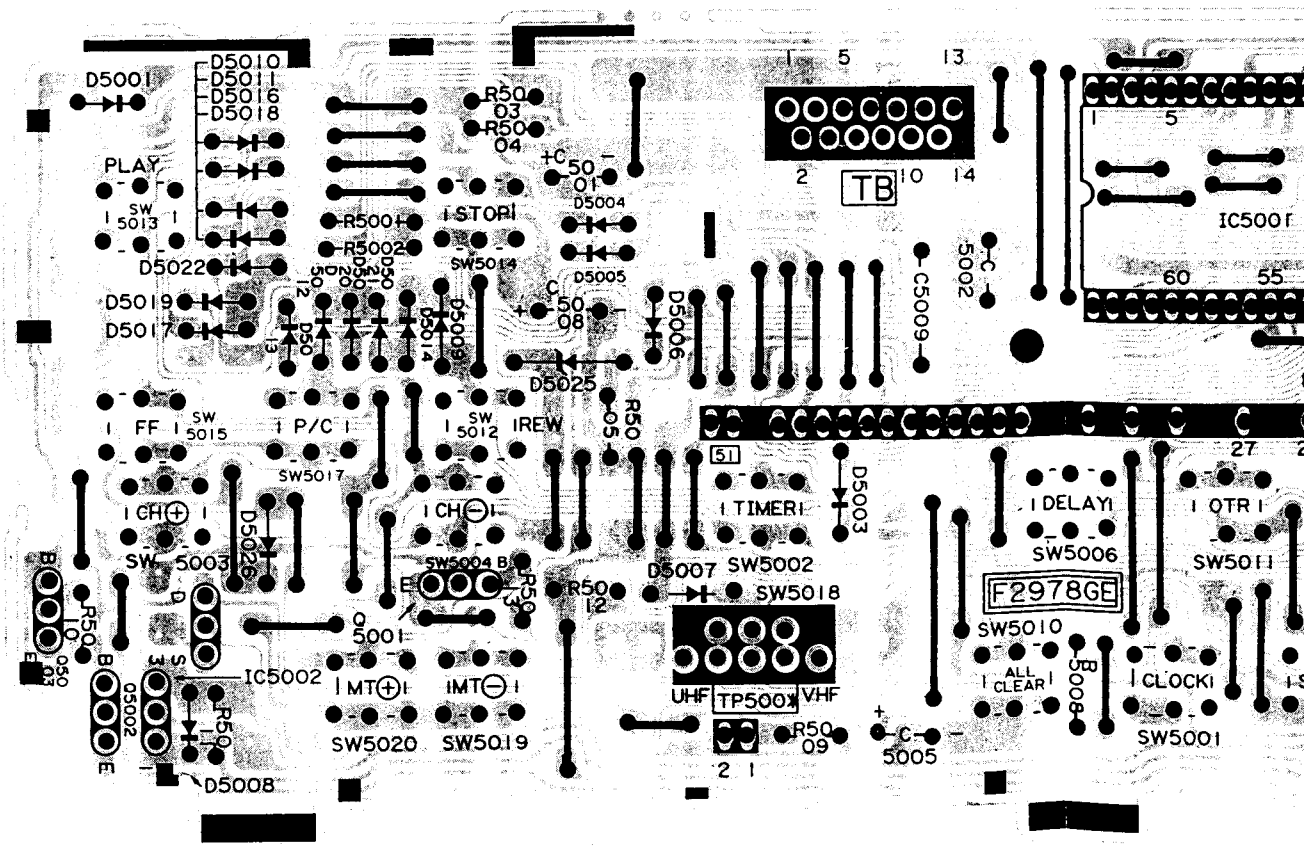

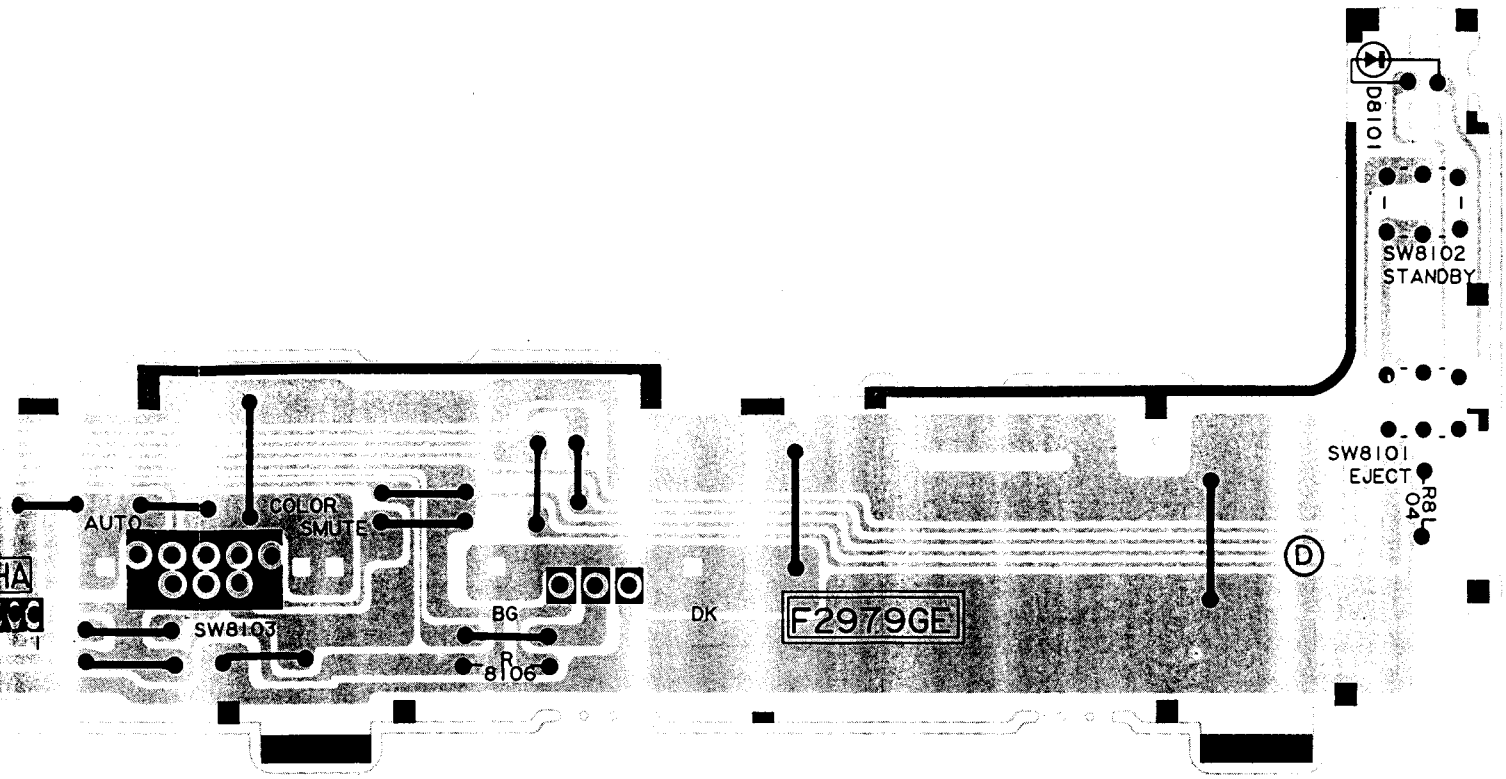
D8101
SW8102
STANDBY
SW8101
EJECT
R8104
AUTO
COLOR
SMUTE
SW8103
BG
R8106
DK
F2979GE
D

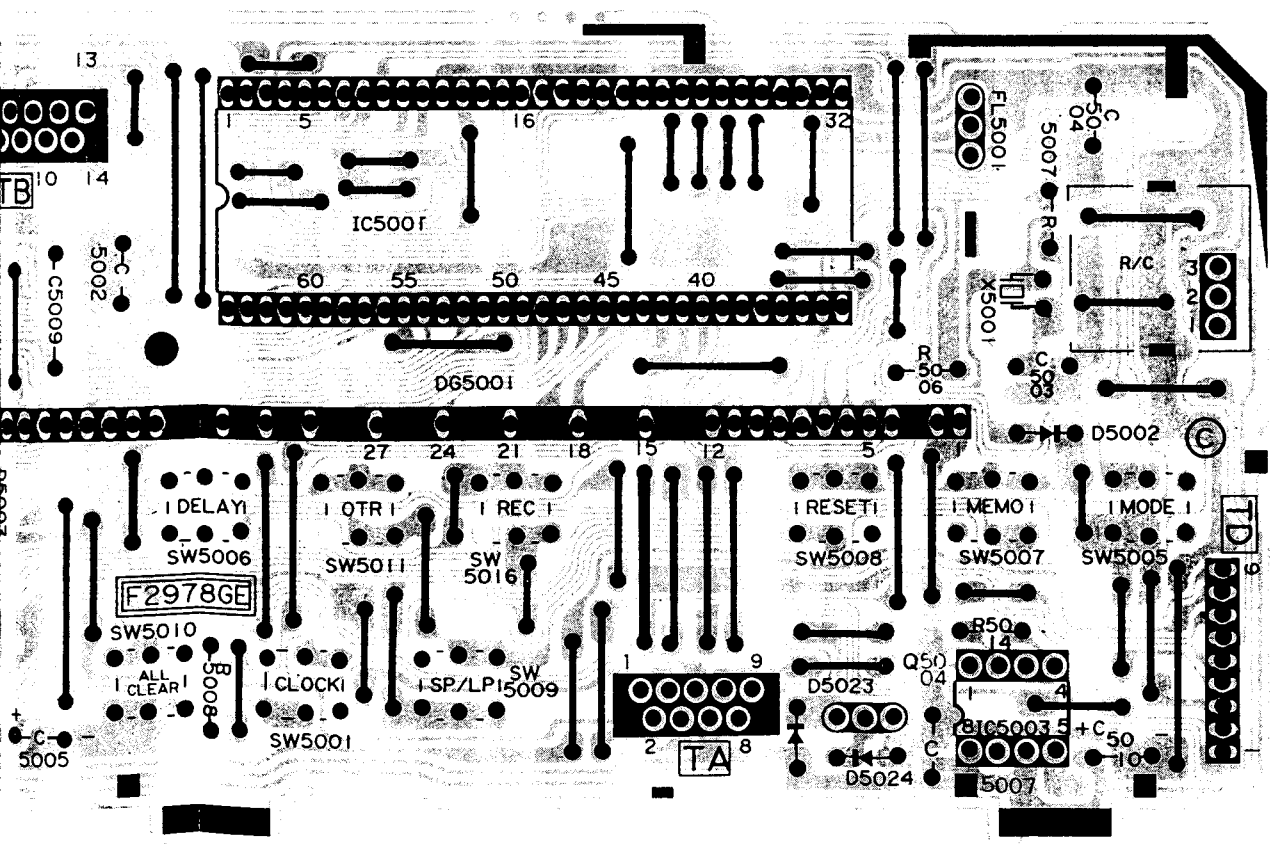
IC5001
D65001
FL5001
C5004
5007
R
X5001
R/C
R5006
C5003
D5002
C
DELAY
QTR
REC
RESET
MEMO
MODE
SW5006
SW5011
SW5016
SW5008
SW5007
SW5005
F2978GE
SW5010
ALL CLEAR
CLOCK
SP/LP
SW5009
SW5001
C5005
C5002
C5009
TA
TB
TD
D5023
D5024
Q5004
R5014
IC5003
C5007

POWER CIRCUIT

AUDIO CIRCUIT

AUDIO CIRCUIT

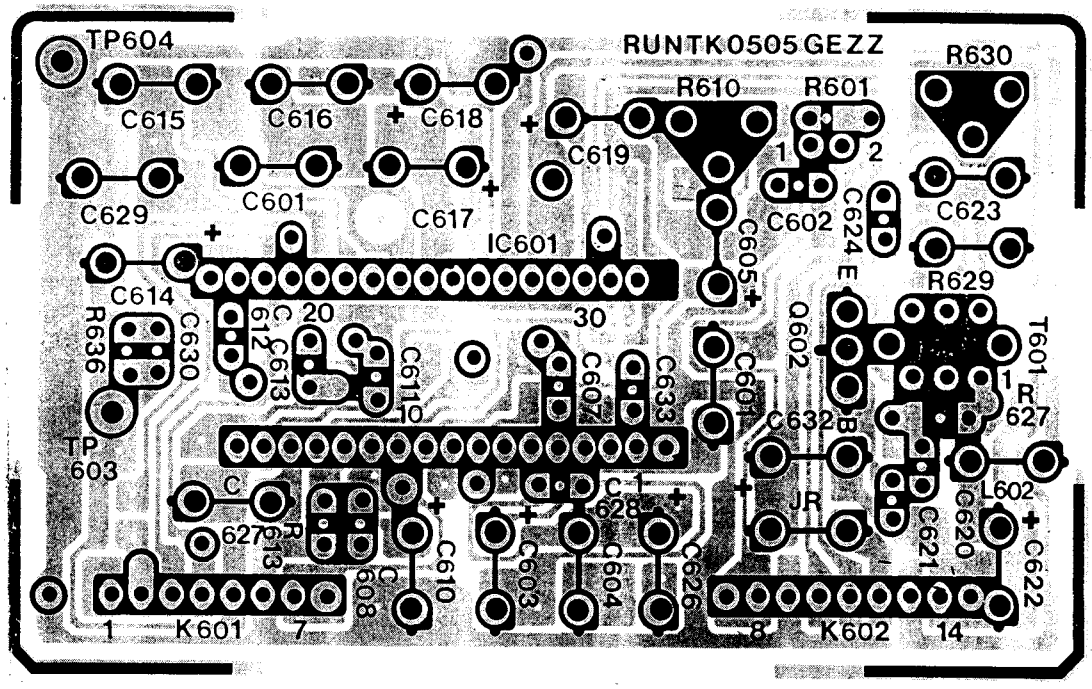

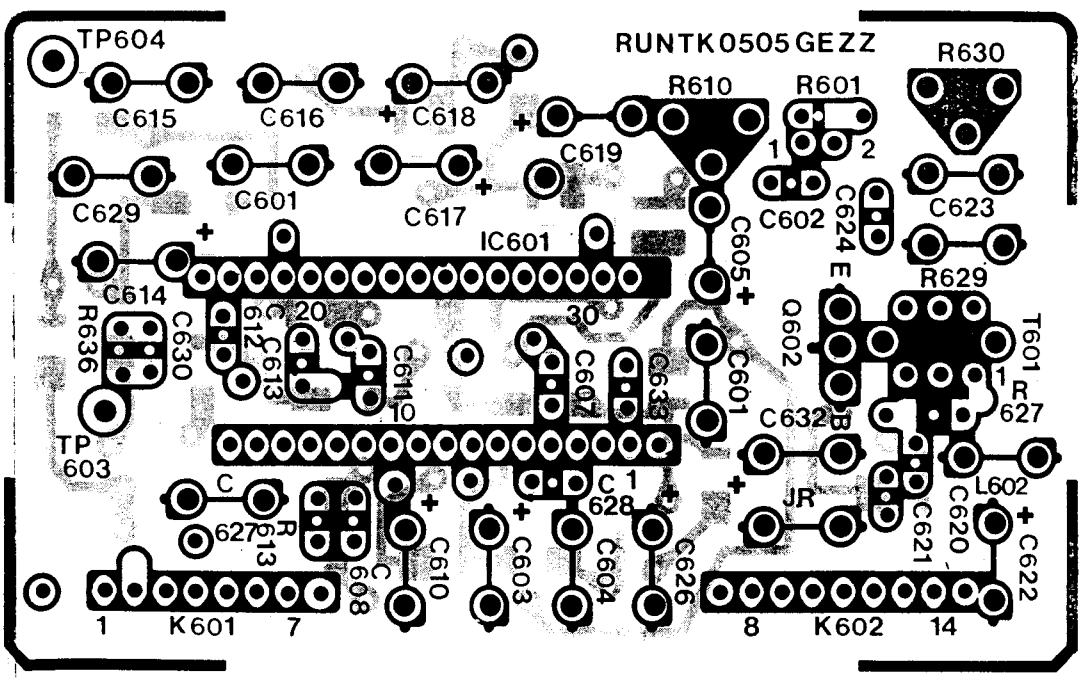

MECHANICAL PARTS

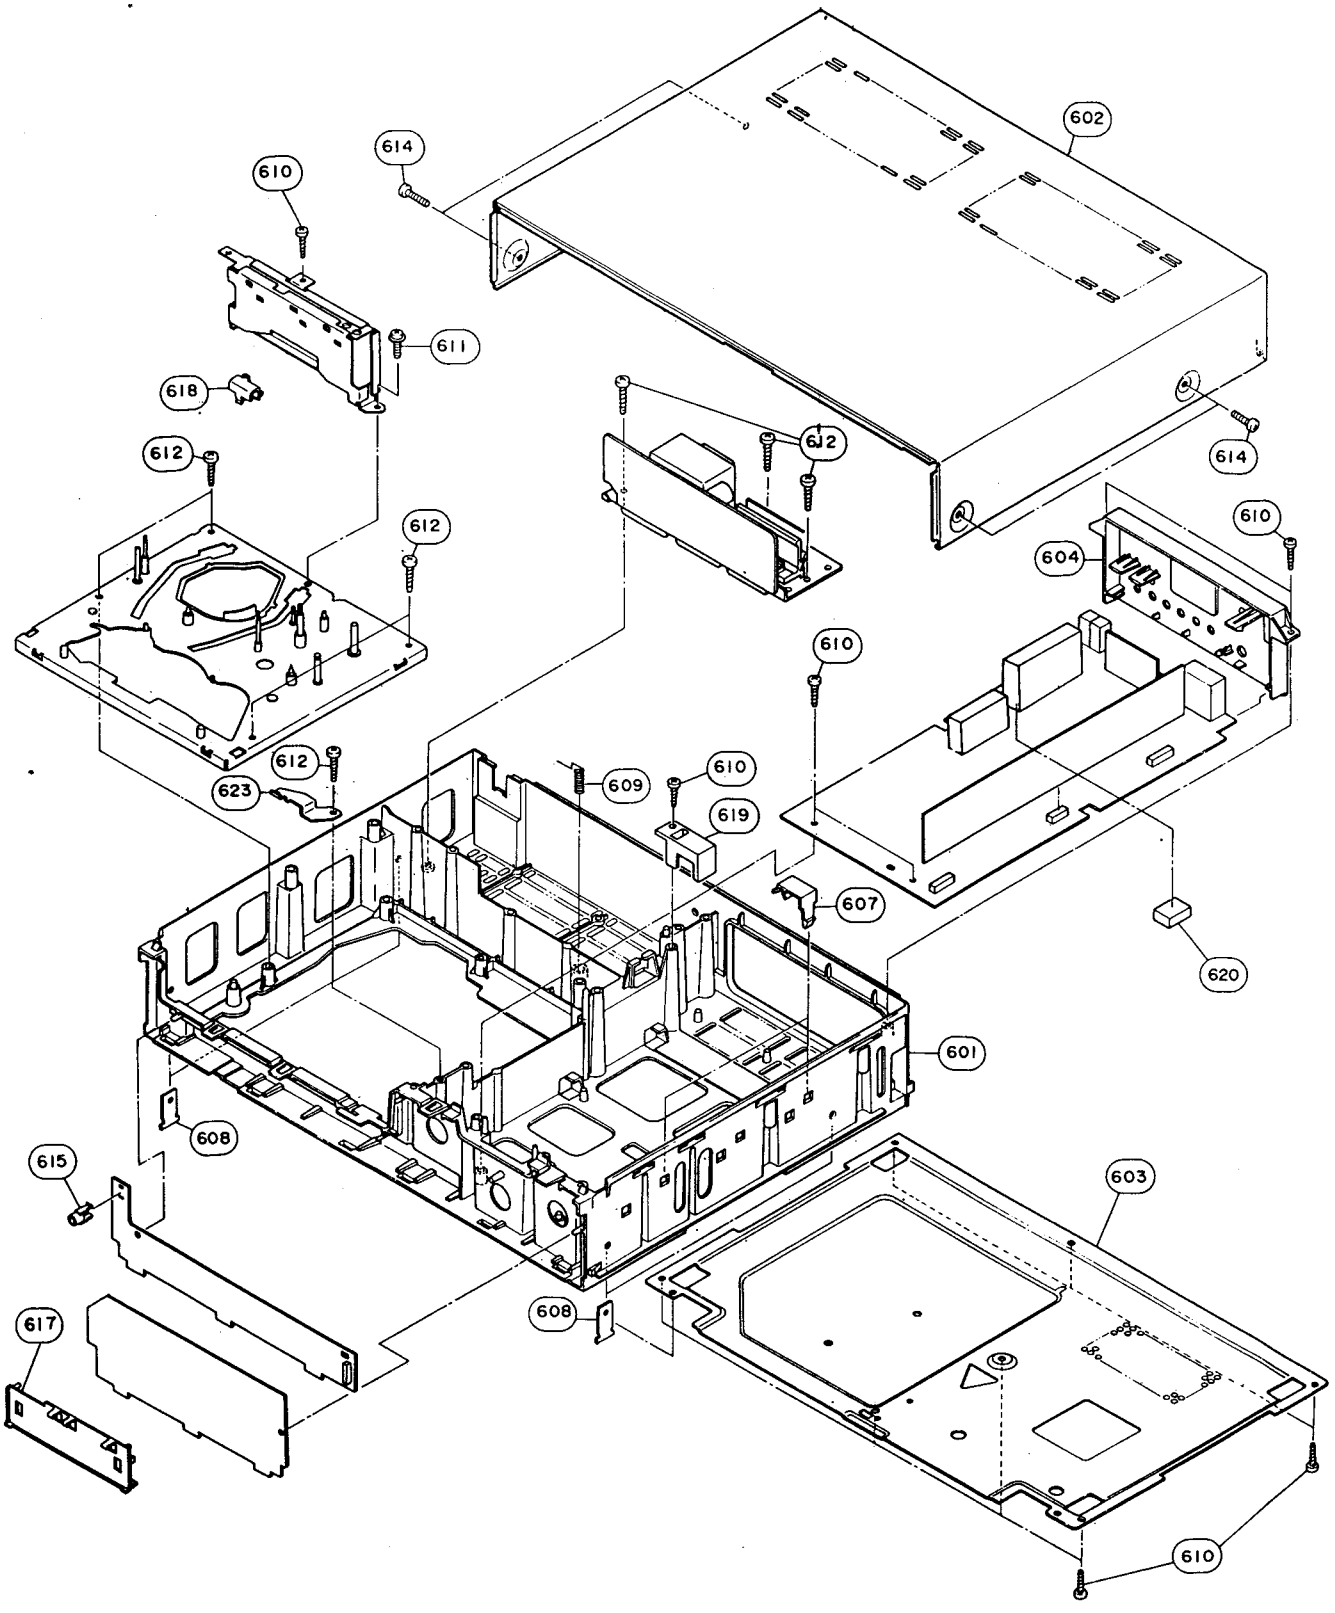

FRONT PARTS

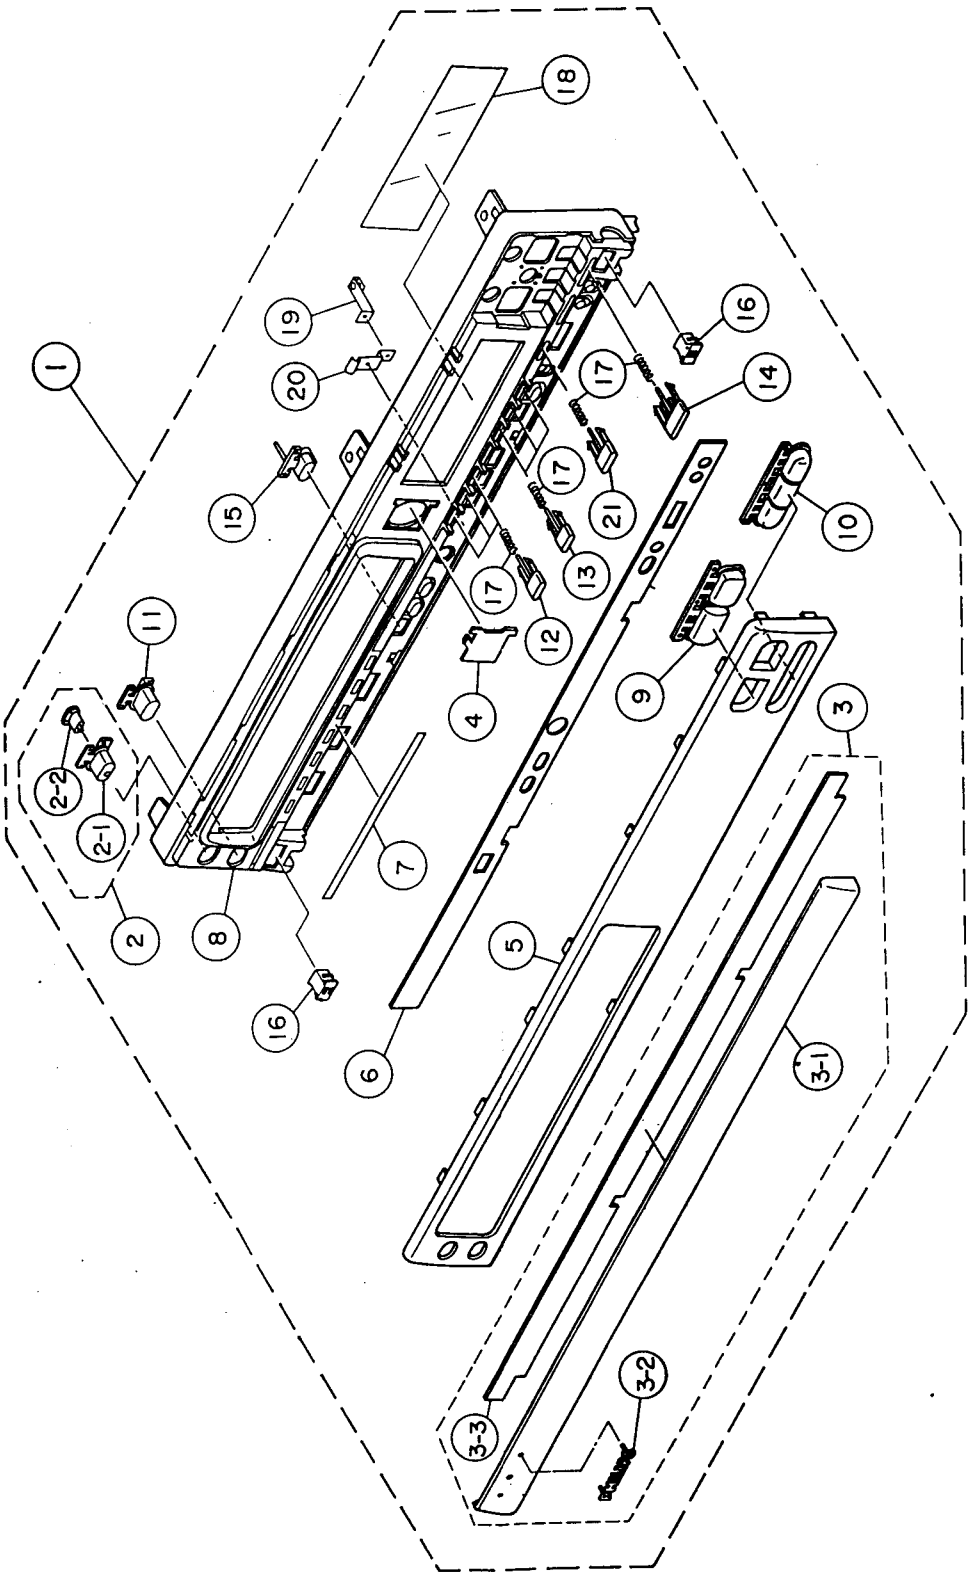

MECHANISM CHASSIS PARTS

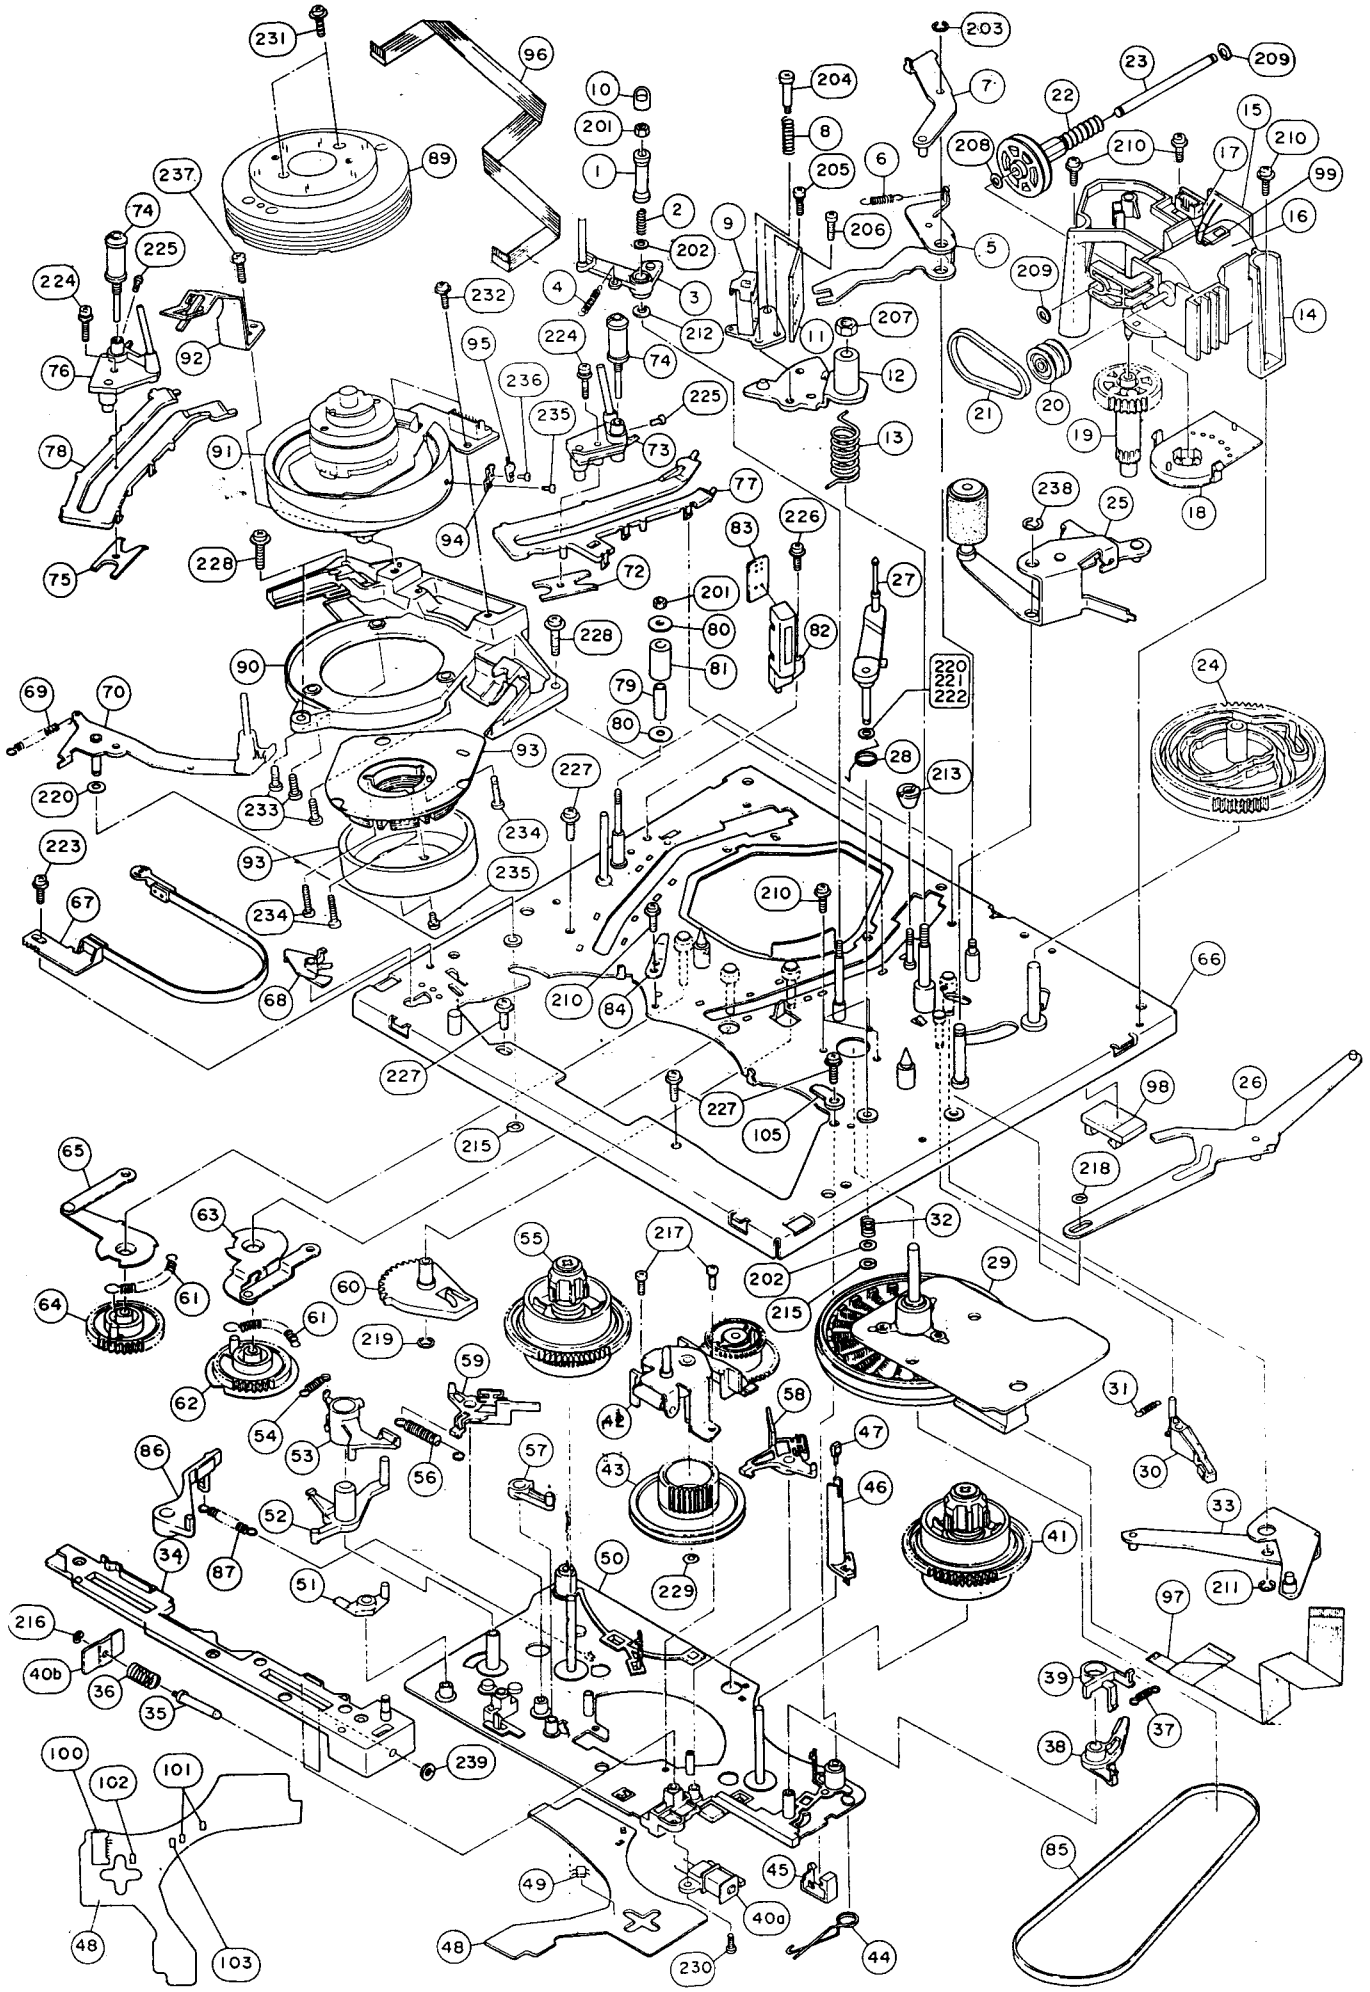

CASSETTE HOUSING CONTROL PARTS

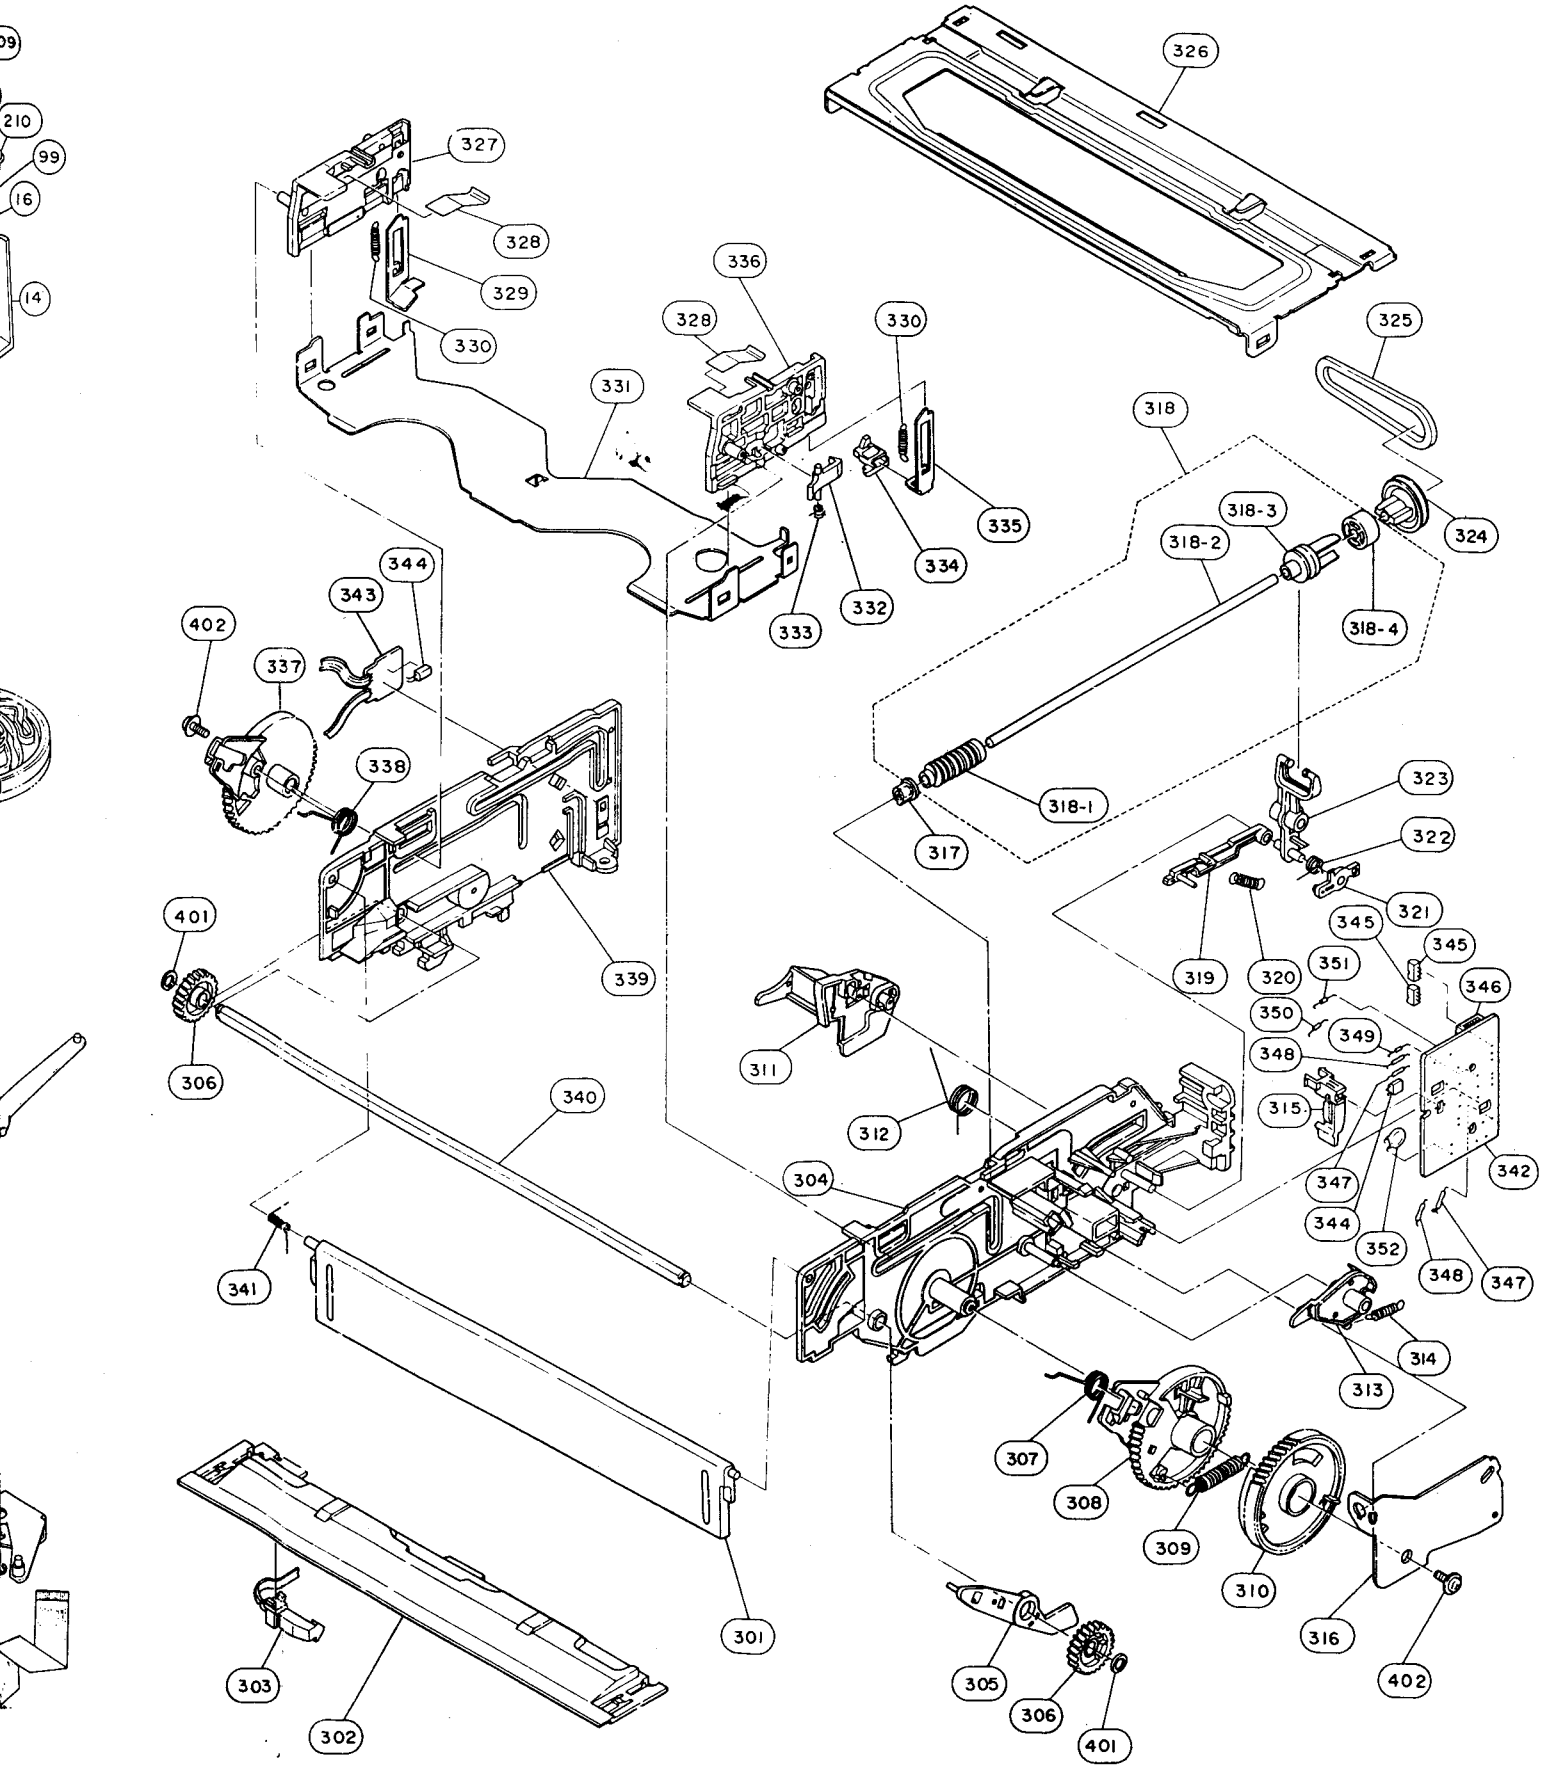

INFRARED REMOTE CONTROL

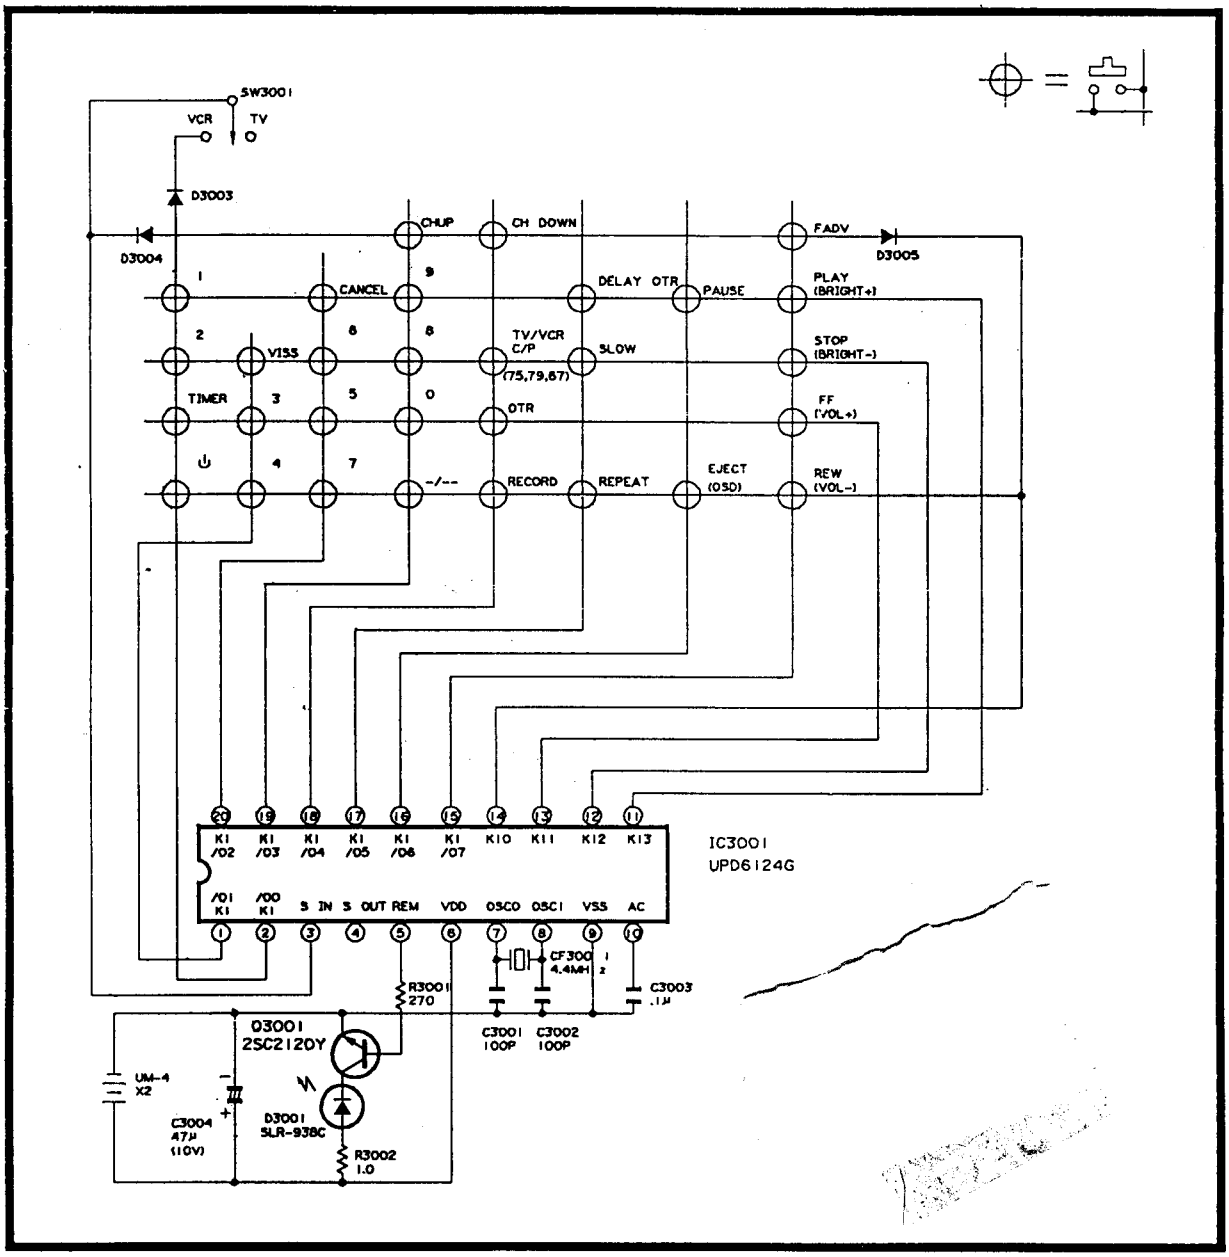

GLOSSARY

	Abbreviation	
A	ABSS	Auto Blank Section Scan
	AFC	Automatic Frequency Control
	AFT	Automatic Fine Tuning
	AGC	Automatic Gain Control
	ALC	Automatic Level Control
	APC	Automatic Phase Control
	AD	Address
	AL	After Loading
	ACL	All Clear
	AT	All Time
	AV (A/V)	Audio/Video
	A-Mute	Audio Mute
C	CAP	Capstan
	CAP.M.	Capstan Motor
	C.FG	Capstan Frequency Generator
	C.PG	Capstan Pulse Generator
	CST	Cassette
	CST.M.	Cassette Motor
	CSA	Cassette Switch-A
	CSB	Cassette Switch-B
	CSD	Cassette Swtich-D
	CH	Channel
	CTL	Control
D	D.D.	Direct Drive
	D.F.F.	D-Flip-Flop
	DM	Drum Motor
	D.FG	Drum Frequency Generator
	D.PG	Drum Pulse Generator
	D.TPG	Drum Trapezoidal Generator
	DET	Detector
	DUB	Dubbing
E	EE	Electric to Electric
	EF	Emitter Follower
	EP	Extended Play
	ES	End Sensor
F	F-ADV-P	Frame Advance Pulse
	FWD	Forward
	F/R	Forward/Reverse
	FF	Fast Forward
	FM	Frequency Modulation
	F.G.	Frequency Generator
	F.E.	Full Erase
	FV	False Vertical Sync.
H	HIFI	High Fidelity
	HPA	High Pass Amplifier
	HPF	High Pass Filter
	HS (H/S)	Half Speed
	HSP	Head Switching Pulse
	H. SYNC	Horizontal Sync.
I	ID	Identical Amplifier
	IF	Intermediate Frequency

	Abbreviation	
J	J.K.F-F	J.K.Flip-Flop
K	KE	Key Entry
L	LED	Light Emitting Diode
	LDM	Loading Motor
	LPF	Low Pass Filter
	LP	Long Play
M	MIC	Microphone
	MM	Mono-multi Vibrator
N	NC	Non Connection
	NS (N/S)	Normal Speed
O	OSC	Oscillator
P	PAD	Power Assisted Drive
	PAM	Pulse Amplitude Modulation
	PCM	Pulse Code Modulation
		Pulse Count Modulation
	PDM (PWM)	Pulse Duration Modulation
		Pulse Width Modulation
	PFM	Pulse Frequecny Modulation
	PPM	Pulse Phase Modulation
	PB	Playback
	PG	Phase Generator
	PR	Pinch Roller
	PWB	Printed Wiring Board
R	REC	Record
	REM (R/C)	Remote Control
	REV	Reverse
	REW	Rewind
	RF	Radio Frequency
S	S/H	Sample and Hold
	SN	Signal to Noise
	SP	Standard Play
	SS	Start Sensor
	SSVM	Solid State Voltmeter
	STILL-H	Still Mode High Level
	SUP-REEL	Supply Reel
	SW	Switch/Switching
T	TPG	Trapezoidal Generator
	TU-REEL	Take-up Reel
U	UL	Unloading
	UR	Un regulated
V	VCO	Voltage Controlled Oscillator
	VCR	Voltage Controlled Resistor
	V-MUTE	Video Mute
	V-LOCK	Vertical Lock for False Vertical Sync Signal
	VS (PS)	Video Search (Pictue Scan)
	VSF	Video Search Forward
	VSR	Video Search Reverse
	VTVM	Vacuum Tube Voltmeter

SPARE PARTSLIST VR6448/67S

FRONT PANEL PARTS

1	4822 443 40695	FRONT PANEL ASS'Y
2	4822 410 26709	STANDBY BUTTON ASS'Y
2-1	4822 462 71544	LED COVER,STANDBY
2-2	4822 410 26713	STANDBY BUTTON
3	4822 443 62573	DOOR ASS'Y
3-1	4822 443 62575	DOOR
3-2	4822 459 10835	BADGE "PHILIPS"
3-3	4822 403 53525	DOOR ANGLE
4	4822 432 30298	COVER
5	4822 454 20869	FRONT DECORATION
6	4822 454 20871	INDIC PLATE, TIMER
7	4822 454 20872	INDIC PLATE, LED
8	4822 443 40696	FRONT PANEL
9	4822 410 26711	BUTTON, PLAY/STOP
10	4822 410 26712	BUTTON, FF/REWIND
11	4822 410 26714	BUTTON, EJECT
12	4822 410 26715	BUTTON, COUNTER
13	4822 410 26716	BUTTON, RECORD
14	4822 410 26717	BUTTON, CHANNEL
15	4822 410 26719	BUTTON, SIMUL
16	4822 417 41015	MAGNET
17	4822 492 70057	SPRING
18	4822 450 61278	TIMER FILTER
19	4822 290 80819	EARTH SPRING A
20	4822 290 80821	EARTH SPRING B
21	4822 410 26718	BUTTON, TIMER

MECHANICAL PARTS

601	4822 464 50732	MAIN FRAME
602	4822 443 30735	UPPER CABINET
603	4822 443 51137	BOTTOM PLATE
604	4822 443 62574	ANT TERM COVER
607	4822 255 70244	Y/C HOLDER
608	4822 403 53552	EARTH PLATE
609	4822 492 42285	EARTH SPRING
610	4822 502 12542	SCREW
611	4822 502 11774	SCREW
612	4822 502 13157	SCREW
613	4822 502 11781	SCREW
614	4822 502 12993	SCREW, UPPER CABINET
615	4822 255 40802	LED HOLDER, POWER
617	4822 256 91274	DISPLAY HOLDER
619	4822 256 91343	TUNER HOLDER
620	4822 462 71545	SPACER

MISCELLANEOUS

4822 218 30451	I.R. remote control
4822 736 51522	Directions for use

PWB-A MAIN CIRCUIT

Q 701	4822 130 61272	2SC2412KQ
Q 702	4822 130 61272	2SC2412KQ
Q 703	4822 130 61272	2SC2412KQ
Q 704	4822 130 60145	DTC124EK
Q 705	4822 130 61269	2SA1037KQ
Q 706	4822 130 60145	DTC124EK
Q 707	4822 130 60557	DTA124EK
Q 708	4822 130 61269	2SA1037KQ
Q 709	4822 130 61269	2SA1037KQ
Q 710	4822 130 61268	DTC114EK
Q 711	4822 130 61268	DTC114EK
Q 801	4822 130 61272	2SC2412KQ
Q 802	4822 130 61272	2SC2412KQ
Q 803	4822 130 61272	2SC2412KQ
Q 804	4822 130 60258	2SC2001LK
Q 951	4822 130 60768	2SA988
Q 952	4822 130 60767	2SA1013
Q 953	4822 130 60151	2SB1117KU
Q 954	4822 130 60146	DTC144EK
Q 955	4822 130 60151	2SB1117KU
Q 956	4822 130 60146	DTC144EK
Q 957	4822 130 61272	2SC2412KQ
Q 1451	4822 130 42803	2SC383-WT
Q 2201	4822 130 61272	2SC2412KQ
Q 4401	4822 130 61269	2SA1037KQ
Q 5501	4822 130 61272	2SC2412KQ
Q 6601	4822 130 60146	DTC144EK
Q 6602	4822 130 61273	2SD1757KS
Q 6603	4822 130 61273	2SD1757KS
Q 6604	4822 130 60326	DTA144EK
Q 8801	4822 130 61271	2SA1271-Y
Q 8802	4822 130 60941	DTA114EK
Q 8804	4822 130 61271	(VR6448/67)
Q 8805	4822 130 61271	(VR6448/67)
Q 8809	4822 130 60941	DTA114EK

INTEGRATED CIRCUITS

IC 701	4822 209 73469	
IC 702	4822 209 72574	BA1521BN
IC 801	4822 209 73471	
IC 802	4822 209 72768	
IC 803	4822 209 73474	
IC 804	4822 209 73476	
IC 951	4822 209 72022	UPC574JT
IC1451	4822 209 72771	
IC2201	4822 209 72016	BA7021
IC5501	4822 209 82553	BA7007

DIODES

D 701	4822 130 80969	1N4531
D 702	4822 130 80969	1N4531
D 703	4822 130 80969	1N4531
D 704	4822 130 80969	1N4531
D 707	4822 130 80988	HZS2C3/TA
D 708	4822 130 80969	1N4531
D 709	4822 130 80969	1N4531
D 710	4822 130 80969	1N4531

D 712	4822 130 80969	1N4531
D 801	4822 130 80969	1N4531
D 804	4822 130 80969	1N4531
D 805	4822 130 80411	ERA1502
D 954	4822 130 80411	ERA1502
D 952	4822 130 80413	HZS6.2EB3
D 953	4822 130 80493	HZS5.6EB1
D 955	4822 130 80416	HZS33EB3
D 956	4822 130 80969	1N4531
D 957	4822 130 80969	1N4531
D 959	4822 130 31919	RD5.6EB
D 5501	4822 130 80969	1N4531
D 5502	4822 130 80969	1N4531
D 5503	4822 130 80969	1N4531

COILS AND FILTERS

L 1451	4822 157 10232	12UH
L 4401	4822 157 10135	220UH
L 5501	4822 156 40881	220UH
L 5503	4822 157 10218	15MH
FL 801	4822 242 72279	
FL5501	4822 154 10048	

CONTROLS

R 736	4822 100 11219	100K(B), SLOW/STILL
R 740	4822 100 11219	100K(B), PHASE GEN M
R 828	4822 100 11189	100K(B), FALSE VERT

CAPACITORS

C 702	4822 124 41037	1.0UF,50V,ELECTR
C 712	4822 124 41037	1.0UF,50V,ELECTR
C 713	4822 121 51246	0.1UF, 50V, METAL PO
C 715	4822 124 22623	2.2UF, 50V, ELECTR
C 719	4822 124 90372	100UF, 6.3V, ELECTR
C 726	4822 121 51246	0.1UF 50V METAL POL
C 727	4822 121 51363	0.047UF, 50V, METAL
C 728	4822 124 90372	100UF, 6.3V, ELECTR
C 732	4822 122 33264	.1UF, 25V, CERAMIC
C 733	4822 124 41036	10UF, 16V, ELECTR
C 736	4822 121 90043	4.7UF, 5V, ELECTR
C 738	4822 122 33264	.1UF, 25V, CERAMIC
C 739	4822 121 51364	0.39UF< 50V< METAL
C 743	4822 124 22486	47UF, 10V, ELECTR
C 814	4822 124 41037	1.0UF,50V,ELECTR
C 1452	4822 121 51365	0.33UF, 50V, METAL P
C 1453	4822 121 51246	0.33UF 50V METAL POL
C 1564	4822 124 40866	100UF 16V ELECTR
C 2201	4822 124 41037	1.0UF,50V,ELECTR
C 4401	4822 124 40866	100UF, 16V, ELECTR
C 4403	4822 124 41302	470UF, 6.3V, ELECTR
C 5556	4822 124 40866	100UF, 16V, ELECTR
C 8801	4822 124 90382	220UF, 10V, ELECTR

MISCELLANEOUS

4822 214 32308	IF pack
4822 214 32307	RF converter
4822 264 30251	Jack Audio/Video in
4822 267 20245	Plug 2 pins (TP2201)
4822 265 40331	Plug 3 pins (AC)
4822 265 30232	Plug 4 pins (AU)
4822 265 40507	Plug 5 pins (AA,AB)
4822 264 50185	Plug 6 pins (AX,AY)
4822 265 40746	Plug 10 pins (AW,AV)
4822 267 40805	Socket Female 6 pins (AT)
4822 267 50794	Socket Female 10 pins (AP)
4822 267 50847	Socket Female 12 pins
4822 267 50848	Socket Female 13 pins
4822 267 60241	Socket Female 27 pins (AM)

PWB-B LUMINANCE/CROMINANCE CIRCUIT

TRANSISTORS.

Q201	4822 130 60146	DTC144EK
Q202	4822 130 42594	DTC144ES
Q203	4822 130 61269	2SA1037KQ
Q205	4822 130 60146	DTC144EK
Q501	4822 130 60258	2SC2001L
Q502	4822 130 61272	2SC2412KQ
Q503	4822 130 61272	2SC2412KQ
Q504	4822 130 61272	2SC2412KQ
Q505	4822 130 61272	2SC2412KQ
Q507	4822 130 60148	2SA933
Q3301	4822 130 60147	2SC1740SQT
Q3302	4822 130 61272	2SC2412KQ

INTEGRATED CIRCUITS

IC201	4822 209 73467	
IC401	4822 209 83522	AN3320K
IC501	4822 209 72478	TA8644N/-1

DIODES AND CRYSTAL

IC201	4822 130 80969	1N4531
IC202	4822 130 80969	1N4531
IC203	4822 130 80969	1N4531
IC204	4822 130 80969	1N4531
IC205	4822 130 33716	MTZ5.1A
IC501	4822 130 80552	HZS6A3/TA
IC503	4822 130 80969	1N4531
IC504	4822 130 80969	1N4531
X501	4822 242 70337	CRYSTAL

CAPACITORS

C203	4822 124 41038	3.3UF, 50V, 20% ELEC
C218	4822 121 51357	022UF, 50V, METAL.PO
C224	4822 121 51363	0.047UF, 50V, METAL.
C225	4822 124 90382	220UF, 10V, 20% ELEC
C230	4822 121 42333	0.1UF, 63V, METAL.
C240	4822 124 90381	100UF,6.3UV 20%

COILS AND FILTERS

L201	4822 157 10135	220UH
L401	4822 157 10271	68UH
L402	4822 157 10266	120UH
L403	4822 157 10231	100UH
L404	4822 157 10271	68UH
L405	4822 157 10267	15UH
L501	4822 157 53278	18UH
L502	4822 157 10269	39UH
L503	4822 157 10276	220UH
L504	4822 157 10276	220UH
L505	4822 157 10264	560UH
L3301	4822 157 10274	150UH
L3302	4822 157 10271	68UH
L3303	4822 157 10274	150UH
L3304	4822 157 10135	220UH
DL401	4822 158 10741	DELAY LINE
DL501	4822 320 40143	DELAY LINE
FL201	4822 157 53147	FILTER
FL501	4822 157 52771	FILTER
FL502	4822 157 53148	FILTER

CONTROLS

R201	4822 100 11279	47K(B), EE LEVEL
R220	4822 100 11278	10K(B), DEVIATION
R222	4822 100 11396	20K(B), CARRIER
R224	4822 100 11279	47K(B), DARK CLIP
R225	4822 100 11279	47K(B), WHITE CLIP
R414	4822 100 11279	47K(B), PLAYB.LEVEL
R506	4822 100 11237	100K(B), APC
R518	4822 100 11239	2.2K(B), REC.COL.LEV
R3304	4822 100 11238	1K(B), RECORD FM

MISCELLANEOUS

	4822 264 40246	Plug 3 pins (CF)
	4822 265 40744	Plug 8 pins (CE)
	4822 267 50788	Socket 6 pins (CC CD)
	4822 267 50846	Socket 10 pins (CA CB)

PWB-X HEAD AMPLIFIER CIRCUIT

TRANSISTORS

Q 301	4822 130 60903	2SC2059K
Q 302	4822 130 61272	2SC2412

INTEGRATED CIRCUITS

IC 301	4822 209 72468	BA7252S

CAPACITORS

C 302	4822 121 42333	0.1UF,63V METAL POLY
C 305	4822 121 42333	0.1UF,63V METAL POLY
C 309	4822 121 51204	0.047UF,63V MET:POLY

COILS

L 303	4822 157 10141	100UH
L 304	4822 157 10271	68UH
L 305	4822 157 53154	33UH
L 306	4822 157 53154	33UH
L 307	4822 157 10234	22UH
L 309	4822 157 10274	150UH

MISCELLANEOUS

4822 265 30331	Plug 2 pins (TP 301 302)
4822 265 30573	Plug 8 pins (XA)
4822 267 40804	Socket 5 pins (ZA)

PWB-T TIMER CIRCUIT

TRANSISTORS

Q5001	4822 130 61276	2SC4038
Q5002	4822 130 61278	2SC1561
Q5003	4822 130 61274	DTC144
Q5004	4822 130 60154	2SK118GR

INTEGRATED CIRCUITS

IC5001	4822 209 73472
IC5002	4822 209 73447
IC5003	4822 209 73475

DIODES AND CRYSTAL

D5001	4822 130 80969	1N4531
D5002	4822 130 80969	1N4531
D5003	4822 130 80969	1N4531
D5004	4822 130 80969	1N4531
D5005	4822 130 80969	1N4531
D5006	4822 130 80969	1N4531
D5007	4822 130 80969	1N4531
D5008	4822 130 80969	1N4531
D5009	4822 130 80969	1N4531
D5010	4822 130 80969	1N4531
D5011	4822 130 80969	1N4531
D5012	4822 130 80969	1N4531
D5013	4822 130 80969	1N4531
D5016	4822 130 80969	1N4531
D5017	4822 130 80969	1N4531
D5019	4822 130 80969	1N4531
D5020	4822 130 80969	1N4531
D5021	4822 130 80969	1N4531
D5023	4822 130 80969	1N4531
D5024	4822 130 80969	1N4531
D5025	4822 130 80549	HZS9.1EB2
D5026	4822 130 80969	1N4531
D5029	4822 130 80969	1N4531
X5001	4822 242 72283	CRYSTAL

FILTER

FL5001	4822 242 72251	

TRIMMER

C5004	4822 125 50366	TRIMMER

MISCELLANEOUS

DG5001	4822 130 90586	FLUORES.DISPLAY TUBE
SW5001	4822 276 12216	SWITCH, CLOCK
SW5002	4822 276 12216	SWITCH, TIMER
SW5003	4822 276 12216	SWITCH,(+)
SW5004	4822 276 12216	SWITCH,(-)
SW5005	4822 276 12216	SWITCH,MOD CHANGE
SW5006	4822 276 12216	SWITCH,OTR START
SW5007	4822 276 12216	SWITCH,COUNT.MEMORY
SW5008	4822 276 12216	SWITCH,CANSEL
SW5010	4822 276 12216	SWITCH,ALL CLEAR
SW5011	4822 276 12216	SWITCH,OTR STOP
SW5012	4822 276 12216	SWITCH,REWIND
SW5013	4822 276 12216	SWITCH,PLAYBACK
SW5014	4822 276 12216	SWITCH,STOP
SW5015	4822 276 12216	SWITCH,FAST FORWARD
SW5016	4822 276 12216	SWITCH,RECORD
SW5017	4822 276 12216	SWITCH,PAUSE
SW5018	4822 276 12477	SWITCH, VHF/UHF
SW5019	4822 276 12216	SWITCH,MANUAL TUN
SW5020	4822 276 12216	SWITCH,MANUAL TUN
	4822 267 20245	Plug 2 pins (TP5001)
	4822 265 40745	Plug 7 pins (TD)
	4822 276 40408	Socket 6 pins (TA)
	4822 267 50849	Socket 13 pins (TB)
	4822 218 20829	Infrared remote control receiver

PWB-H OPERATION CIRCUIT

DIODES

D 8101	4822 130 80417	LED, STANDBY
D 8102	4822 130 80969	1N4531
D 8103	4822 130 80969	1N4531

CAPACITORS

C 8101	4822 124 22615	.047, 5.5V, ELECTR

MISCELLANEOUS

SW8101	4822 276 12216	SWITCH,EJECT
SW8102	4822 276 12216	SWITCH,STANDBY
SW8103	4822 276 12474	SWITCH,AUTO/COLOUR
SW8104	4822 276 12216	SWITCH,TRACK (+)
SW8105	4822 276 12216	SWITCH,TRACK (-)
SW8106	4822 276 12216	SWITCH,SIMUL

PWB-P POWER CIRCUIT

TRANSISTOR

INTEGRATED CIRCUITS

IC 901	4822 209 72481	PQ09R05

DIODES

D 901	4822 130 80205	11E1
D 902	4822 130 80205	11E1
D 903	4822 130 80205	11E1
D 904	4822 130 80205	11E1
D 905	4822 130 32424	1SS55
D 906	4822 130 80989	RD12ESB2
D 907	4822 130 80991	RD2.0ESB2
D 908	4822 130 80205	11E1
D 909	4822 130 80205	11E1
D 910	4822 130 80205	11E1
D 911	4822 130 80205	11E1
D 912	4822 130 33721	ERA15-02

CAPACITORS

C 902	4822 124 41432	2200UF, 35V, ELECTR
C 905	4822 124 41432	2200UF, 35V, ELECTR
C 906	4822 124 41274	47UF, 100V, ELECTR

RESISTORS

R 901	4822 116 53279	12M OHM, 1/2W,SOLID
R 904	4822 116 80898	.22 OHM, FUSIBLE RES
R 905	4822 116 80905	22K OHM, 1/4W
R 906	4822 116 80906	2.2K OHM, 1/4W
PR 901	4822 116 90452	6.8 OHM THERMISTOR

TRANSFORMER

T 901	4822 146 21366	PT2492

MISCELLANEOUS

	4822 321 10525	Mains cord
F 901	4822 253 30222	FUSE, T1A/250V
F 902	4822 253 30223	FUSE, T1A/250V
	4822 265 30223	Plug 3 pins (OA)
	4822 265 40748	Plug 10 pins (PA)
	4822 265 30638	Plug 3 pins (PB)

INFRARED REMOTE CONTROL

TRANSISTORS

Q 3001	4822 130 42292	2SC2120Y

INTEGRATED CIRCUIT

IC3001	4822 209 73473	UPD6124G

D 3001	4822 130 80421	LED, SLR-938C
D 3003	4822 130 80992	1SS270
D 3004	4822 130 80992	1SS270
D 3005	4822 130 80992	1SS270
CF3001	4822 242 72284	OSCIL CBS440EB1 4.4
SW3001	4822 276 12476	SWITCH, VCR/TV

CABINET PARTS

4822 432 30316	Upper cabinet
4822 443 51133	Lower cabinet
4822 443 62197	Battery cover
4822 454 20862	Indication plate
4822 411 61537	Slider knob
4822 410 26697	Rubber key
4822 242 71848	Infrared filter
4822 290 80777	Battery terminal +
4822 290 80778	Battery terminal -
4822 290 80776	Battery terminal +/-
4822 502 12927	Screw

PWB-C AUDIO CIRCUIT

TRANSISTOR

Q 602	4822 130 61275	2SC3939R

INTEGRATED CIRCUIT

IC 601	4822 209 73482	BA7765S

CAPACITORS

C 610	4822 124 40905	100UF 10V ELECTR.
C 623	4822 124 22622	0.0056UF 500V POLY
C 627	4822 124 41037	1UF 50V ELECTR.

COILS AND TRANSFORMERS

L 601	4822 157 10221	8.2MH
L 602	4822 157 53645	220UH
T 601	4822 146 21365	

CONTROLS

R 610	4822 100 11397	10K(B)PLAYBACK LEVEL
R 630	4822 100 11398	470K(B)BIAS

MISCELLANEOUS

4822 265 30331	Plug 2 pins (TP601,602)
4822 265 40747	Plug 7 pins (K601,602)

MECHANICAL CHASSIS PARTS

1	4822 528 90691	RETAINING GUIDE
2	4822 492 70049	RET GUIDE SPRING
3	4822 403 53507	HALF-LOADING LEVER

5	4822 403 53512	HALF-LOAD DRIVE LEV
6	4822 492 70059	HALF-LOAD REC SPRING
7	4822 403 53511	HALF-LOAD REC LEV
8	4822 492 70052	AZIMUTH SPRING
9	4822 249 10371	A C HEAD ASS'Y
10	4822 462 71543	RET GUIDE CAP
11	4822 466 10565	A C HEAD PWB
12	4822 464 50731	A HEAD ARM
13	4822 492 42284	A C HEAD ARM SPRING
14	4822 464 50729	LOADING BLOCK HOLDER
15	4822 466 10564	LOADING BLOCK PWB
16	4822 361 21158	LOADING MOTOR
17	4822 267 40806	PLUG, 5 PIN (MG)
18	4822 276 12482	CAM SWITCH
19	4822 522 10405	WORM WHEEL
20	4822 528 50297	LOADING MOTOR PULLEY
21	4822 358 30876	LOADING BELT
22	4822 522 10404	WORM ASS'Y
23	4822 535 92515	WORM SHAFT
24	4822 522 32496	MASTER CAM
25	4822 403 53509	PINCH ROLLER LEVER
26	4822 403 53513	RELAY SHIFTER LEVER
27	4822 403 53508	REVERSE GUIDE
28	4822 492 42283	REVERSE GUIDE SPRING
29	4822 361 60468	CAPSTAN D.D. MOTOR
30	4822 403 53516	SLOW BRAKE LEVER
31	4822 492 70056	SLOW BRAKE SPRING
32	4822 492 70053	REVERSE GUIDE SPRING
33	4822 403 53533	RELEY GEAR DRIVE LEV
34	4822 403 53517	BRAKE SHIFTER
35	4822 535 92514	BRAKE LOCK SHAFT
36	4822 492 70051	ABS PLATE SPRING
37	4822 492 70055	VIDEO SEARCH SPRING
38	4822 403 53514	BRAKE LEVER V.S.
39	4822 403 53515	RECIPROCATING LEVER
40	4822 281 50125	BRAKE SOLONOID
41	4822 528 81242	TAKE-UP REEL DISK
42	4822 522 32497	IDLER GEAR
43	4822 522 32498	REEL PULLEY
44	4822 492 42282	SHIFTER SPRING
45	4822 403 53518	SHIFTER SPRING COVER
46	4822 255 40885	CASSETTE LED HOLDER
47	4822 130 80994	CASSETTE LED
48	4822 214 32319	REEL SENSOR PWB
49	4822 130 10034	REEL SENSOR
50	4822 464 50728	REEL BLOCK CHASSIS
51	4822 403 53539	TENSION ADJ LEVER
52	4822 403 53538	TENSION REL LEVER
53	4822 403 53537	BACK TENSION LEVER
54	4822 492 70063	SPRING, FAST FORWARD
55	4822 528 81243	SUPPLY REEL DISK
56	4822 492 70062	MAIN BRAKE SPRING
57	4822 403 53541	INTERMEDIATE LEVER
58	4822 403 53536	TAKE-UP BRAKE LEVER
59	4822 403 53535	SUPPLY BRAKE LEVER
60	4822 522 32502	LOADING RELAY GEAR
61	4822 492 70061	LOADING REC SPRING
62	4822 522 32501	TAKE-UP LOADING GEAR
63	4822 403 53532	TAKE-UP LOADING ARM

65	4822 403 53531	SUPPLY LOADING ARM
66	4822 464 50733	MAIN CHASSIS
67	4822 401 11196	TENSION BAND
68	4822 403 53553	TENS SPRING HOOK PLA
69	4822 492 70064	TENSION SPRING
70	4822 403 53534	TENSION ARM
72	4822 403 53551	POLE BASE SLIDER
73	4822 403 53528	T POLE BASE
74	4822 528 90693	GUIDE ROLLER
75	4822 403 53549	SUP POLE BASE SLIDER
76	4822 403 53527	SUPPLY POLE BASE
77	4822 462 30398	TAKE-UP LOADING RAIL
78	4822 462 30399	SUPPLY LOADING RAIL
79	4822 528 90694	SUPPLY IMP ROL INN
80	4822 528 90695	SUPPLY IMP ROL FLANG
81	4822 528 90692	SUPPLY IMP ROLLER
82	4822 249 40246	FULL ERASE HEAD
83	4822 466 10566	FULL ERASE HEAD PWB
84	4822 290 80817	CASS CONT EARTH SPRI
85	4822 358 30877	REEL BELT
86	4822 403 53548	AUX F F BRAKE LEVER
87	4822 492 70069	AUX F F BRAKE SPRING
89	4822 691 20353	UPPER DRUM
90	4822 464 50739	DRUM BASE
91	4822 691 20478	LOWER DRUM
92	4822 290 80818	EARTH BRUSH
93	4822 361 60469	DRUM D.D. MOTOR
94	4822 403 53302	HEATER ANGLE
95	4822 209 72578	TRANSISTOR HEATER
96	4822 321 22937	FLAT CABLE (DRUM D.D
97	4822 321 22938	FLAT CABLE (CAPSTAN
98	4822 403 53526	FLAT CABLE HOLDER
99	4822 403 52542	DEW SENSOR
100	4822 267 40807	SOCKET, 5 PIN (MF)
101	4822 116 90456	220 OHM, 1/4W, 5%, O
102	4822 122 32397	.001UF, 50V, 10%, DI
103	4822 111 90699	47K OHM, 1/16W, 5%,
104	4822 462 71551	RELEASE PIN CAP
105	4822 403 53519	REEL DISK CATCH HOLD
106	4822 532 81093	SUPPLY IMP.FLANGE

CASSETTE HOUSING CONTROL PARTS

301	4822 443 62576	CASSETTE COVER
302	4822 464 50741	DOWN GUIDE
303	4822 276 12483	ERASE PROT SWITCH
304	4822 464 50734	HOUSING FRAME (RIGHT
305	4822 403 53529	CASSETTE COVER ARM
306	4822 522 32506	PHASE GEAR
307	4822 492 42286	DRIVE GEAR SPRING
308	4822 522 32504	DRIVE GEAR (RIGHT)
309	4822 492 70065	RECIPROCATING SPRING
310	4822 522 32503	WORM WHEEL GEAR
311	4822 403 53547	OPEN LEVER
312	4822 492 42289	OPEN LEVER SPRING
313	4822 403 53546	SWITCHING LEVER
314	4822 492 70067	SWITCHING LEV SPRING
315	4822 276 12484	CASSETTE SWITCH
316	4822 403 53522	WORM BRACKET

DIODES AND CRYSTAL

318	4822 535 80789	WORM SHAFT
318-1	4822 522 32507	WORM
318-2	4822 535 80789	WORM SHAFT
318-3	4822 528 20623	CLUTCH
318-4	4822 528 20624	COUPLING
319	4822 403 53545	CLUTCH LOCK LEVER
320	4822 492 70066	CLUTCH LOCK LEV SPR
321	4822 403 53544	CLUTCH RELEASE LEV
322	4822 492 70058	CLUTCH REL LEV SPRIN
323	4822 403 53543	CLUTCH LEVER
324	4822 528 50298	PULLEY
325	4822 358 30878	CASSETTE LOADING BEL
326	4822 403 53521	UPPER PLATE
327	4822 464 50737	SLIDER HOLDER L
328	4822 492 41391	CASSETTE SPRING
329	4822 403 53524	SLIDER LOCK L
330	4822 492 70068	SLIDER LOCK SPRING
331	4822 464 50738	SLIDER
332	4822 403 53542	LOCK RELEASE LEVER
333	4822 492 42291	LOCK REL LEV SPRING
334	4822 462 71546	SLIDER LOCK COVER
335	4822 403 53523	SLIDER LOCK R
336	4822 464 50736	SLIDER HOLDER R
337	4822 522 32505	DRIVE GEAR L
338	4822 492 42287	DRIVE GEAR SPRING L
339	4822 464 50735	HOUSING FRAME L
340	4822 535 92516	MAIN SHAFT
341	4822 492 42288	CASS COVER SPRING
342	4822 214 32326	START SENSOR PWB
343	4822 214 32327	END SENSOR PWB
344	4822 130 32491	PHOTOTRANSISTOR
345	4822 130 42277	TRANSISTOR
346	4822 267 40808	SOCKET, 5 PIN
347	4822 116 52693	15K OHM, 1/4W, 5%, C
348	4822 116 53278	22K OHM, 1/4W, 5%, C
349	4822 116 52269	3.3K OHM, 1/8W, 5%,
350	4822 116 52283	4.7K OHM, 1/8W, 5%,
351	4822 116 52233	10K OHM, 1/8W, 5%,
352	4822 124 21916	.047UF, 25V, 20%, CE
401	4822 502 12986	CUT WASHER (4.2W-6.0
402	4822 502 13153	SCREW (B TIGHT BTN3P

FIXING MATERIAL

201	4822 505 10934	ADJUSTING NUT
202	4822 532 52045	WASHER W2.6S-6-0.5
203	4822 532 11125	E RING-2
204	4822 502 13165	AC HEAD SCREW
205	4822 502 13155	AZIMUTH ADJ SCREW
206	4822 502 13148	TILT ADJUSTING SCREW
207	4822 505 10936	ADJUSTING NUT (A/C H
208	4822 532 11136	WASHER W3.1-5.4-0.5
209	4822 532 52038	WASHER W2.6-6-0.5 (L
210	4822 502 13158	SCREW C2.6P+6S
211	4822 530 70455	E RING-3
212	4822 532 52044	WASHER PSW4.6-6-0.25
213	4822 505 10935	ADJ NUT (X-POSITON)
215	4822 532 52039	WASHER CW2.7-7-0.5
215	4822 532 11239	WASHER CW 2.7-7-0.5

217	4822 502 11752	SCREW 2.6P+35
218	4822 530 80261	WASHER CW2.5-5.4-0.5
219	4822 532 11126	E RING-2.5
220	4822 532 52043	WASHER W2.5-5-0.5
221	4822 532 52041	WASHER W2.6-5-0.13
222	4822 532 52042	WASHER W2.6-5-0.25
223	4822 502 13151	SCREW W2.6P+6S
224	4822 502 13149	SCREW WSW2P+11S
225	4822 502 13154	SCREW M2X4
226	4822 502 13159	SCREW C2.6P+8S
227	4822 502 13162	B TIGHT SCREW C2.6P+
228	4822 502 11783	SCREW C3P+8S
229	4822 532 52037	WASHER CW2.5-6-0.5
230	4822 502 13161	B TIGHT SCREW 2P+6S
231	4822 502 11842	SCREW W3P+9S-NI
232	4822 502 13152	SCREW S3P+8A-6W
233	4822 502 13164	SCREW SW8P+6S-NI
234	4822 502 13156	SCREW SW2.6P+12S
235	4822 502 11755	SCREW SW3P+5S
236	4822 502 11757	SCREW S3P+6S
237	4822 502 11776	SCREW S3P+8S
238	4822 530 70455	E RING-3 (CURL)
239	4822 532 52039	WASHER CW2.7-7-0.5
240	4822 532 52047	WASHER 3.1-5.4-0.25
241	4822 532 52048	C/S WASHER

SERVICE TOOLS

4822 395 80215	Reel disc height adjustment
4822 395 80193	Master plane jig
4822 395 80301	A/C head tilt adjustment
4822 395 80196	Torque gauge 909
4822 395 80197	Torque gauge 1,2 kg.
4822 395 80198	Gauge head
4822 395 80217	Cass. torque meter
4822 395 80194	Tension gauge 300 gr.
4822 395 80216	Tension gauge 2 kgr.
4822 395 80189	Hex wrench 0.9 mm
4822 395 80191	Hex wrench 1.2 mm
4822 395 80192	Hex wrench 1.5 mm
4822 397 30107	Aligment tape PAL
4822 395 80186	Drum replacing jig
4822 395 80213	Tension gauge adapter
4822 395 50189	Special screw driver
5322 395 54047	Torque screw driver
4822 395 50192	Box driver
4822 395 50273	Box driver
4822 395 80302	Ret guide height adjustment
4822 395 80303	Rev guide height adjustment

Service Information

1990-05-08

VIDEO CASSETTE RECORDER VR6448 VR6349 VR6548 VR6449 VR6648 VR6549

VR.O.S.-90-06

Phenomenon:

- The cassette can not be ejected.
- Intermittend no operation of the VCR.
- The VCR does not go into the "eject" mode.
- Threading car tangled by the tape tension stabilizer.

Cause: The synchronisation of the threading car 76, the brake shifter 34 and the tape tension stabilizer 70 is lost due to excessive wear of the tension adjusting lever 51. (see fig.1)

Solution: From the production Oct. 1989 a new model tension adjusting lever has been used.(see fig.2). The contact surface of the new tension adjusting lever has been enlarged by changing it from cylindrical into oval.

Service solution: Replace the tension adjusting lever by a new model lever.
Under codenumber 4822 403 53539 PCE will supply the new model lever.

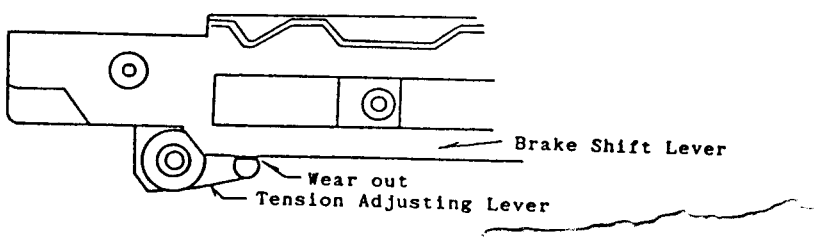

Fig.1

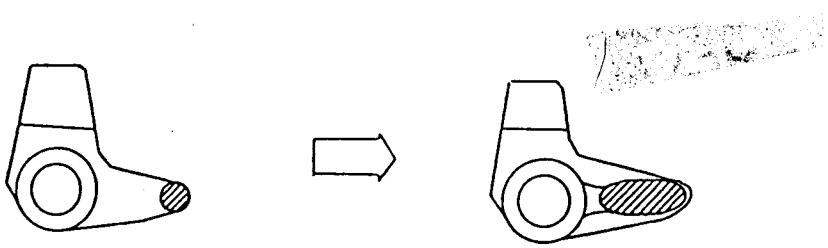

Fig.2

Service
Service
Service

Phenomenon:

- Much noise or only noise in the picture during Play-back.
- Intermittend noise in the picture, difficult to reproduce.

Cause: Bad ground contact between the interconnecting CBA and the chassis. This CBA connects the rotating transformer with the Head amplifier.
If a bad ground contact is present, the Head amplifier may oscillate and produce noise.

Service solution:
- Remove the 2 screws 232. (fig.3)
- Add 2 3.0 mm. spring washers 4822 530 80082.
- Tighten the screws 232 with 9-10 kg.cm. (0.9-1 Nm)

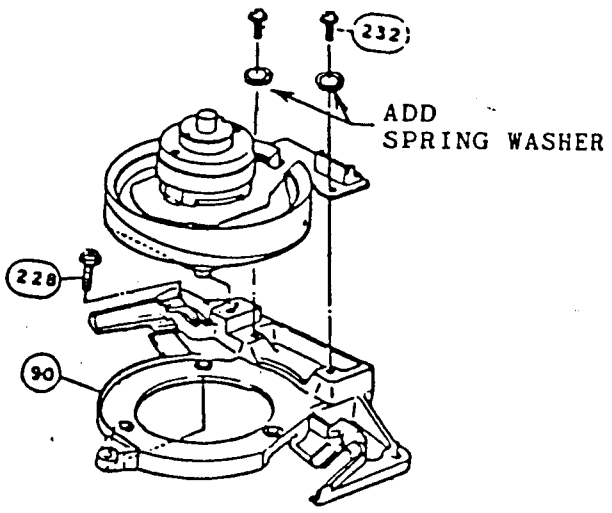

Fig.3

Service Information

1990-02-21

VIDEO CASSETTE RECORDER VR6448
VR6548

VR.O.S.-90-02

To improve the performance, the following parts have been changed in the undermentioned sets :

A In PWB-T Timer circuit :

FL5001 Filter has been changed into 4822 242 72273
C5020 330pF 50V 10% ceramic has been added
4822 126 10799

B In PWB-A Main circuit :

C1470 0.001µF 50V 10% ceramic has been added
4822 126 10798
C1471 0.001µF 50V 10% ceramic has been added
4822 126 10798

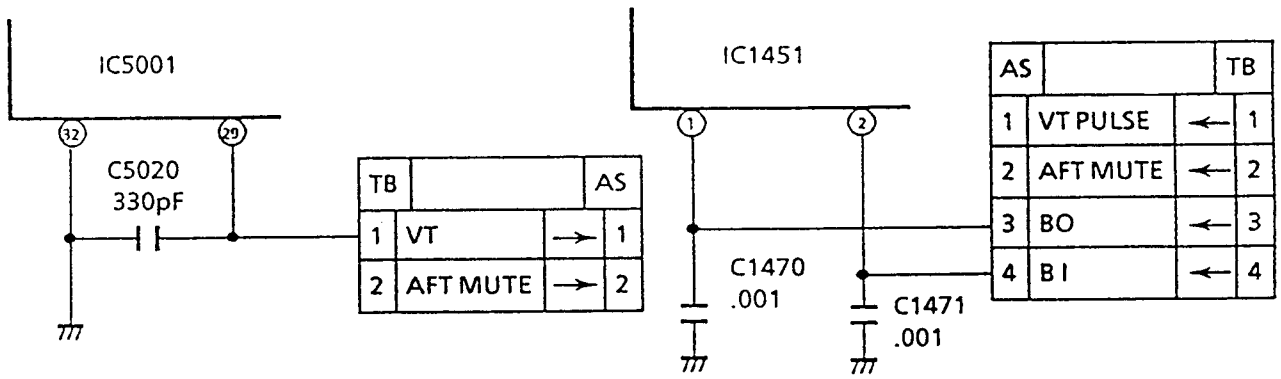

A

B

A

Model No.	Serial No.
VR6448/75	1127876~
VR6448/75D	0104291~
VR6448/75L	0106436~
VR6448/95P	0115016~
VR6548/75L	1102147~
VR6548/75H	0102148~
VR6548/93L	0100716~

A+B

Model No.	Serial No.
VR6448/67	2222049~
VR6448/67L	0104791~
VR6448/73	1107869~
VR6448/69	1131045~
VR6448/79L	0106436~
VR6548/67L	1102746~
VR6548/79L	0105006~
VR6548/00L	0116875~

Service
Service
Service

Service Information

1990-03-05

VIDEO CASSETTE RECORDER VR6448 VR6349
VR6548 VR6449
VR6648 VR6549

VR.O.S.–90–04

To improve the performance in the above mentioned sets, the video search lever item 38 has been changed from 4822 403 53514 into 4822 403 70007

Service
Service
Service

4822 726 14815